



## **ENGLISH**

#### 22.32 MODULAR CONTACTORS 25 A

Contact gap  $\ge$  3 mm for NO contacts only; NC contacts  $\ge$  1.5 mm. Compliant with EN 61095: 2009. AC/DC silent coil (with varistor protection).

## CONNECTION DIAGRAM

### **2** OUTLINE DRAWINGS

## **B** FRONT VIEW

60.8

60.8

022.35

13 21

14 22

7

- 84 45

A = Selector (22.32.0.xxx.xx40)

The three-position manual selector has the following functions:

#### ON position

The contacts are latched in the operated state (NO contacts closed and NC contacts - open), the mechanical indicator is visible in its window, the LED is not illuminated.

#### **AUTO** position

The state of contacts, mechanical indicator and LED follow the coil supply voltage.

#### **OFF** position

Even if terminals A1 - A2 are supplied with rated voltage, the coil is not energized, and so the contacts remain in the non-operated state, the mechanical indicator is not visible and the LED is not illuminated.

#### $\mathbf{B} = \mathbf{LED}$

C = Mechanical indicator

## 

- Auxiliary contact module available, "Quick assembly" with the main contactor 022.33/022.35

- It is not possible to assembly the auxiliary module on 22.32.0.xxx.x4x0 (2 NC versions)

#### OTHER DATA

It is suggested an air gap of 9 mm between adjacent relays for installations and working conditions close to the limit (that is, ambient temperature > 40°C, coil operated for a prolonged period of time, all contacts loaded with current > 20 A).

# (1) finder

Utility Model - IB2232001 - 06/19 - Finder S.p.A. con unico socio - 10040 ALMESE (TO) - ITALY

