
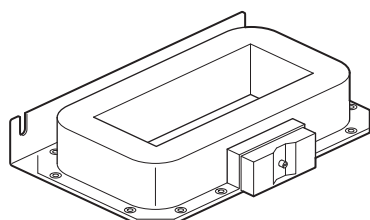


- (FR) Tore pour relais différentiels
- (GB) Torroid for HR relays
- (DE) Wandler für FI Relais
- (NO) Spole for jordfeilreleer HR
- (IT) Toro per rele HR
- (ES) Trafo diferencial
- (PT) Toro para rele HR


Notice d'instructions
User instructions
Bedienungsanleitung
Bruksanvisning
Istruzioni d'impiego
Instrucciones de uso
Instruções

6H 5047.b

HR830, HR831, HR832, HR833

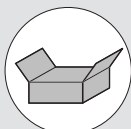

x 1

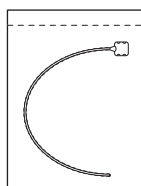


x 1



4 mm

HR830, HR831, HR832

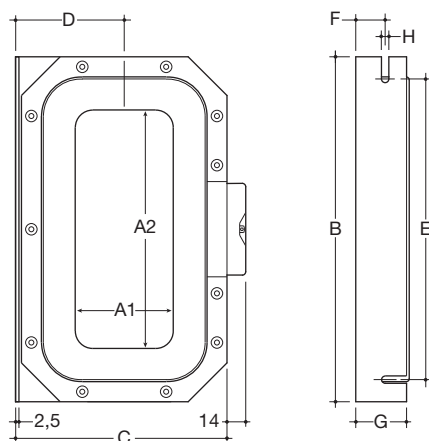

	HR830	HR831	HR832
A1	70	115	150
A2	175	305	350
B	260	400	460
C	162	225	270
D	85	116	140
E	225	360	415
F	22	25	28
G	40	48	48
H	7,5	8,5	8,5

HR833

