


h3+

Moulded Case Circuit breakers
up to 630A

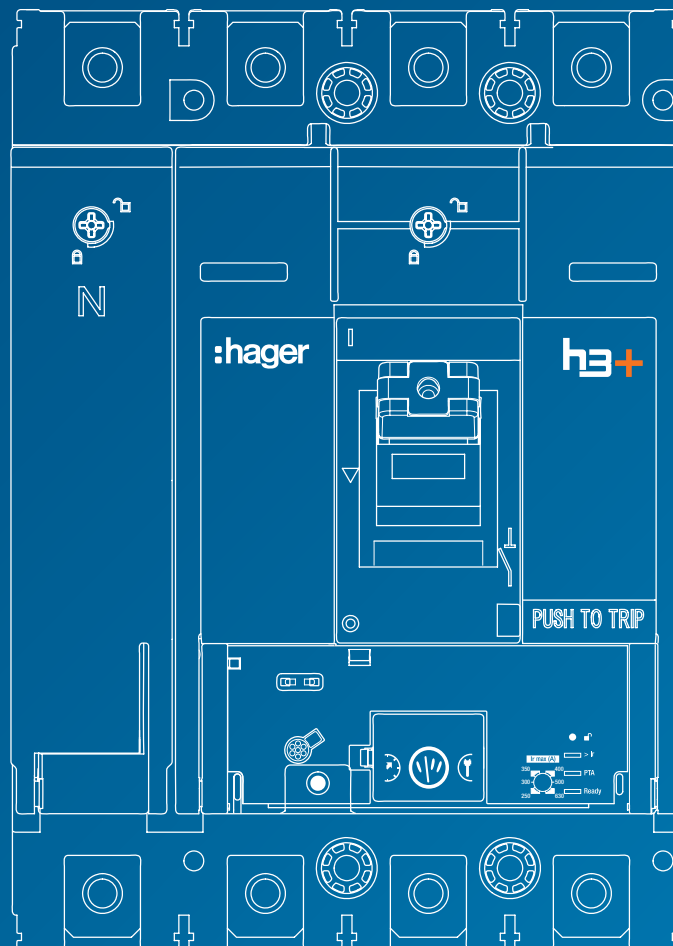

DISCLAIMER:

Whilst every effort has been made to ensure the reliability of the information is correct at time of publication, Hager cannot guarantee the accuracy of all information contained herein. Corrections and amendments, once verified, will be included in future editions

Index

Page

| | |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----|
| 01 h3+ presentation | 5 |
| Range overview, h3+ communication system, h3+ Energy highlights, General characteristics | |
| 02 h3+ electromechanical range | 17 |
| TM and MAG (ICB) trip units | |
| 03 h3+ electronic range | 23 |
| Electronic trip units, Communication devices | |
| 04 Switch-disconnector range | 41 |
| Presentation | |
| 05 Accessories | 45 |
| Overview, Earth leakage protection, Connection accessories, Insulation accessories, Auxiliaries, Mounting types, Handles and motor operators, Locking and sealing accessories | |
| 06 Installation and operating recommendations | 77 |
| Installation and operating conditions, Safety clearances and minimum distances, Power loss | |
| 07 Dimensions and connections | 87 |
| Circuit breakers and RCD add-on block, Circuit breakers plug-in, Circuit breakers withdrawables, Handles and motor operators, Front panel cut-outs, Power connections, Panel display | |
| 08 Complementary characteristics | 123 |
| Tripping curves, Current and energy limiting curves | |
| 09 List of the references | 153 |
| P160 MCCBs, P250 MCCBs, P630 MCCBs, RCD add-on blocks, Switch disconnectors, Connections, Connections, Electronic devices and accessories, Auxiliaries, Handles and locking kits, Mechanical interlocking, Motor operators, Plug-in and withdrawable systems | |
| 10 Glossary | 179 |

h3+ presentation

h3+ electromechanical range

h3+ electronic range

Switch-disconnector range

Accessories

Installation and operating recommendations

Dimensions and connections

Complementary characteristics

List of the references

Glossary

h3+ presentation

| | Page |
|------------------------------------|-----------|
| 01 Range overview | 6 |
| 02 h3+ communication system | 10 |
| 03 h3+ Energy highlights | 11 |
| 04 General characteristics | 12 |

The new generation of Hager Moulded Case Circuit Breakers h3+ ensures reliable protection against overloads and short circuits, combined with accurate integrated energy monitoring for all low voltage distribution systems. With a compact frame size, available from 25 to 630 A in 3 and 4 poles, h3+ offers high protection performance with a breaking capacity up to 70 kA.

h3+ MCCBs, available with either a built-in thermal-magnetic trip unit or electronic trip unit, offer flexible protection settings to ease discrimination in all electrical distribution installations.

Hager is meeting the latest energy efficiency standards by introducing new features to its offer of Moulded Case Circuit Breakers.

Users will benefit from a class 1 energy monitoring and communication system compatible with Modbus RTU protocol, that will allow them to configure protections parameters, monitor energy consumptions and manage alarms.

Special attention has been given to ergonomics in order to facilitate the integration of h3+ MCCB in electrical panel boards. Different methods of mounting are proposed along with different types of connections to increase the flexibility of installation.



h3+ P160 3P Energy



h3+ P250 3P Energy



h3+ P630 Energy 3P Energy

h3+ Moulded Case Circuit Breaker at a glance

The h3+ range of MCCB can be briefly described as follows:

- Three frame sizes: P160, P250 and P630
- Rated current from 25 A to 630 A
- Icu and Ics up to 70 kA (415 V~)
- Available in 3 and 4 poles
- Rated nominal voltage Ue up to 690 V~
- Thermal-Magnetic, Magnetic and Electronic Trip Units
- Wide range of accessories

h3+ Switch-disconnectors

- P160 ratings: 125 A, 160 A
- P250 ratings: 200 A, 250 A
- P630 ratings: 400 A, 630 A

Energy electronic trip unit with:

- Embedded display
- Measurement features (I, U, P, E, PF, THD...)
- Class 1 accuracy on energy measurements according to IEC 61557-12
- Alarm management and event histories
- Output contacts (PTA, OAC)
- Modbus RTU communication for remote monitoring and control
- MIP Connector
- Communication accessories (Panel display, COM module...)

| | H 25 kA | M 50 kA | E 70 kA | TM | MAG (ICB) | LSnl | LSI | Energy |
|-------------|------------|------------|------------|----|-------------|------|--------------|-------------|
| P160 | X | X | X | | 25 to 160 A | | 40 to 160 A | 40 to 160 A |
| P250 | | X | X | | 50 to 250 A | | 40 to 250 A | |
| P630 | | X | X | | - | | 250 to 630 A | |

Range overview

Switch-disconnector



Switch

Magnetic




MAG (ICB)

Thermal-magnetic




TM adj


Accessories

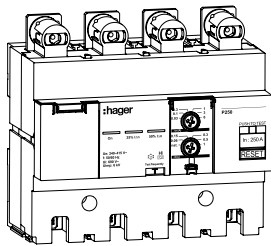


Earth leakage

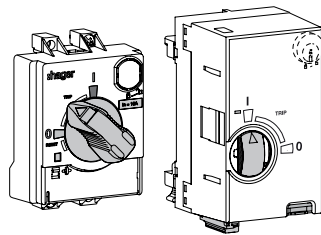


Handles and motor operator

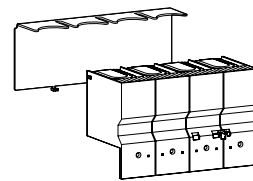


Insulation

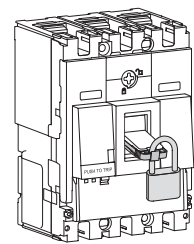


Locking and sealing

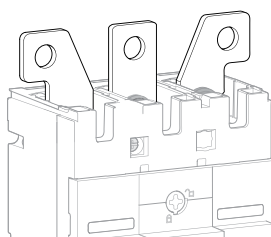

Connections

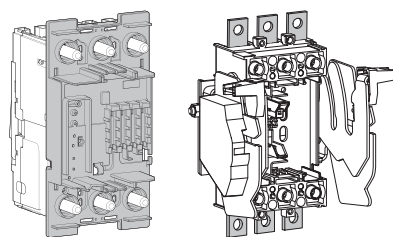

Mounting types

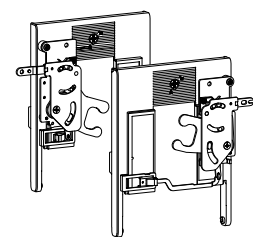

Interlocking accessories

Electronic Range



LSnl




LSI




Energy


Communication devices




AX/AL Energy

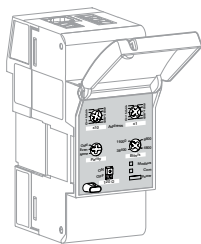

Modbus
Modules

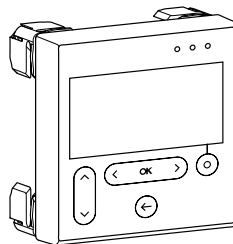


Display

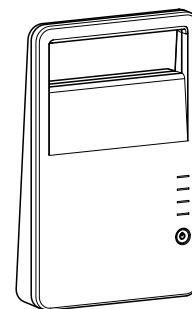

Configuration tool

Auxiliaries

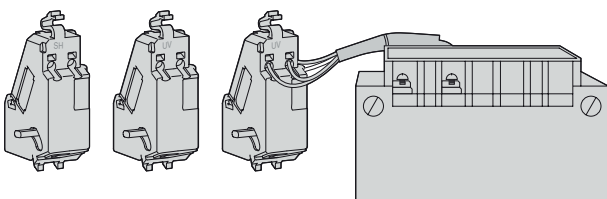

Shunt trip and under voltage releases

h3+ communication system



h3+ communication schematic

The h3+ communication system allows the establishment of local and remote communication between the Energy MCCB and its surroundings.

Local monitoring is done using either the embedded display or the panel display on which the user can see all the measurements collected by the power meter integrated in the Energy MCCB. As for the local controlling, it can be done using either the OAC output contact or the PTA output contact. In addition to that, a dedicated port exists to connect the MCCB locally to the h3+ Configuration tool that will allow to do the configuration and the test of the MCCB along with a visualisation of all measurements collected by the MCCB itself.

Remote monitoring can be done by connecting the MCCB Energy via the Modbus COM Module to the hager agardio.manager server. The communication with agardio.manager works according to Modbus RTU protocol.

The h3+ communication system contributes in increasing energy efficiency, improving electrical power quality, maintaining the continuity of supply and alerting the user in case of any malfunction.

Overview of the main functionalities provided by the h3+ communication system:

- Checking MCCB status:
On/Off position, trip indication and fault-trip indication
- Visualising measurements:
mainly I, U, f, P, E, and THD.
- Configuration of the protection settings, measurement parameters and custom alarms.
- Managing alarms by the means of embedded output contacts: PTA and OAC.
- Operating commands:
open, close, and trip by the means of accessories such as the motor operator and the Shunt trip/Undervoltage releases.
- Operating data:
settings, alarms, events and maintenance indicators.

The Maintenance Interface Port (MIP) located at the front of the electronic trip units is used to interface the MCCB to the h3+ Configuration tool.

This tool is suitable for an expert use of the h3+ electronic trip units. It provides functions such as configuration, monitoring and test.

h3+ Energy highlights




Fast opening 1/4 turn screw
Eases the access to auxiliary and communication cavities.



Integrated padlocking facility
Up to 4 mm Ø padlocks handled without accessory tool.



Auxiliary indication windows
Presence of auxiliaries easily visible.

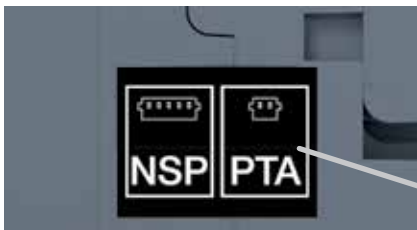

Integrated PTA output contact
Output contact dedicated to the overload prealarm.



Integrated OAC output contact
Output contact assignable to a custom alarm with access behind the front cover.



h3+ Configuration tool

Wireless access to the electronic trip units for configuration, test and diagnostic.



High contrast display

Display on h3+ Energy MCCB benefits from OLED technology and can be oriented in any direction to match the MCCB orientation..

Information on product



Standardised characteristics on the product

- ① Ue: Operational voltage
- ② Icu: Ultimate breaking capacity per rated operational voltage Ue
- ③ Ics: Service breaking capacity per rated operational voltage Ue
- ④ Circuit breaker type, frame size and breaking capacity classification
- ⑤ Symbol for Circuit Breaker suitable for isolation
- ⑥ Approvals and Standard Compliance
- ⑦ Nominal rating
- ⑧ Calibration temperature
- ⑨ Ui: Rated insulation voltage
- ⑩ Uimp: Rated impulse withstand voltage

Breaking capacity classification:

| | Icu (380 – 415 V~) |
|----------|--------------------|
| H | 25 kA |
| M | 50 kA |
| E | 70 kA |

Compliance with standards

h3+ circuit breakers and auxiliaries comply to the following Standards:

International standards:

- IEC 60947-1: general rules
- IEC 60947-2: circuit breakers
- IEC 60947-3: switch-disconnectors
- IEC 60947-5-1: control circuit devices and switching elements

European standards

- EN 60947-1: General rules
- EN 60947-2: Circuit breakers
- EN 60947-3: Switch disconnectors
- EN 60947-5-1: Control circuit devices and switching elements

National standards:

- China CCC, GB/T140248.2
- China CCC, GB/T140248.3
- China CCC, GB/T140248.1

Pollution degree

h3+ circuit breakers are certified for operation in pollution degree 3 environments as defined by IEC standards 60947-1.

Ambient temperature

h3+ P160, P250 and P630 circuit breakers can be used from -25 °C to 70 °C.

For ambient temperatures greater than 50 °C, TM devices must be derated.

Electronic circuit breakers must be derated when the ambient temperature is greater than 50 °C.

Please refer to chapter “Installation and operating recommendations” on page 79.

h3+ P160, P250 and P630 circuit breakers should be put into service under normal ambient, operating temperature conditions.

The acceptable storage temperature range in the original packing is from -35 °C to 70 °C.

Electromagnetic disturbances

h3+ circuit breakers are protected against:

- Overvoltage caused by circuit switching,
- Overvoltage caused by atmospheric disturbances or a distribution-system outage (e.g. failure of a lighting system),
- Devices emitting radio waves (walkie-talkies, radar, etc.),
- Electrostatic discharges produced directly by users.

Immunity levels for h3+ comply with:

- IEC/EN 60947-2: Low-voltage switchgear and controlgear, part 2: Circuit breakers.
- Annex F 4.1: Harmonic of current, Annex F 4.7: Deep current.
- Annex B: Immunity tests for residual current protection
- IEC/EN 61000-4-2: Electrostatic-discharge immunity tests.
- IEC/EN 61000-4-3: Radiated, radio-frequency, electromagnetic-field immunity tests.
- IEC/EN 61000-4-4: Electrical fast transient/burst immunity tests.
- IEC/EN 61000-4-5: Surge immunity tests.
- IEC/EN 61000-4-6: Immunity tests for conducted disturbances induced by radio-frequency fields.
- CISPR 11: Limits and methods of measurement of electromagnetic disturbance characteristics of industrial, scientific and medical (ISM) radio-frequency equipment.

Over-current Discrimination (Selectivity)

h3+ circuit breakers provide all characteristics required to apply over-current protective co-ordination as defined in the IEC 60947-1.

Depending on the type of two or more h3+ MCCBs in series, total or partial discrimination (selectivity) can be achieved.

Total over-current discrimination (Total selectivity):

In case of two MCCBs in series, the circuit breaker at the downstream level ensures the protection without tripping the circuit breaker at the upstream level.

Partial over-current discrimination (Partial selectivity):

In case of two MCCBs in series, the MCCB at the downstream level ensures the protection up to a given value of over-current level without tripping the MCCB at the upstream level.

Discrimination tables between different associations of protection devices (ACB-MCCB-MCB) are given in a separate document.

Cascading

Cascading or back-up protection means that the current limiting capacity of a MCCB makes it possible to install downstream circuit breakers that have lower Icu levels.

The different values of short-circuit currents between different associations of protection devices (ACB-MCCB-MCB) are given in cascading tables that are published in a separate document.

Suitable for isolation with positive contact indication

All h3+ P160, P250 and P630 circuit breakers are suitable for isolation as defined in IEC 60947-2 standard :

- The isolation position corresponds to the O (OFF) position.
- The operating handle does not indicate the OFF position unless contacts are open and respect the insulation distances.
- Padlocks cannot be installed unless contacts are open and the operating handle is in a stable position. Installation of a rotary handle does not alter the reliability of the position-indication system.

The isolation function is certified by tests guaranteeing:

- Mechanical reliability of the position indication system,
- Absence of leakage currents,
- Capacity to withstand overvoltage between upstream and downstream connections.

The tripped position does not ensure isolation with positive contact indication; only the OFF position guarantees isolation.

Vibrations

h3+ P160, P250 and P630 circuit breakers withstand mechanical vibrations.

h3+ circuit breakers comply to IEC 60068-2-52:

- 2.0 to 13.2 Hz and amplitude ± 1 mm.
- 13.2 to 100 Hz acceleration ± 0.7 G.
- Resonance frequency (± 1 mm/ ± 0.7 g during 90 min.

Excessive vibration may cause false tripping and/or damage to connections and/or mechanical parts.

| Circuit breakers | | P160 | P250 | P630 |
|------------------------------------------------------------------------------|----------------|-------------------------------------------------------|-------------------------------------------------------|-----------------------------------|
| Number of poles | | 3, 4 | 3, 4 | 3, 4 |
| General characteristics | | | | |
| Rated current at 50 °C | I_n (A) | 160 | 250 | 630 |
| Current rated range | (A) | 25 - 160 (Thermal Magnetic), 40 - 160 (Electronic) | 50 - 250 (Thermal Magnetic), 40 - 250 (Electronic) | 250 - 630 |
| Operational voltage, (AC) | U_e (V) | 220 - 690 | 220 - 690 | 220 - 690 |
| Frequency | f (Hz) | 50/60 | 50/60 | 50/60 |
| Rated insulation voltage | U_i (V) | 800 | 800 | 800 |
| Rated impulse withstand voltage | U_{imp} (kV) | 8 | 8 | 8 |
| Suitability for isolation | | yes | yes | yes |
| Utilisation category (IEC60947-2) | | A | A | B $\leq 400A$ A > 400A |
| Pollution degree | | 3 | 3 | 3 |
| Breaking capacity level | | H M E | M E | M E |
| Rated ultimate short-circuit breaking capacity, (I_{cu}) | | | | |
| (AC) 50/60 Hz 220/240 V | I_{cu} (kA) | 35 65 85 | 65 85 | 85 100 |
| (AC) 50/60 Hz 380/415 V | I_{cu} (kA) | 25 50 70 | 50 70 | 50 70 |
| (AC) 50/60 Hz 660/690 V | I_{cu} (kA) | 6 6 6 | 6 6 | 12 12 |
| Rated service short-circuit breaking capacity, (I_{cs}) | | | | |
| (AC) 50/60 Hz 220/240 V | I_{cs} (kA) | 35 65 85 | 65 85 | 85 100 |
| (AC) 50/60 Hz 380/415 V | I_{cs} (kA) | 25 50 50 | 50 50 | 50 70 |
| (AC) 50/60 Hz 660/690 V | I_{cs} (kA) | 6 6 6 | 6 6 | 12 12 |
| Mechanical endurance in number of operations (IEC 60947-2) | | 40 000 | 40 000 | 30 000 |
| Electrical endurance in number of cycles at 440 V~ (IEC 60947-2) | | 10 000 | 10 000 | 6 000 $\leq 400A$ 4 000 > 400A |
| Environment | | | | |
| Operating temperature | | -25 °C to +70 °C | -25 °C to +70 °C | -25 °C to +70 °C |
| Storage temperature | | -35 °C to +70 °C | -35 °C to +70 °C | -35 °C to +70 °C |
| Tropicalisation | | 95 % HR at 55 °C | 95 % HR at 55 °C | 95 % HR at 55 °C |
| Altitude | (m) | ≤ 2000 | ≤ 2000 | ≤ 2000 |
| Terminations | | | | |
| Pitch | (mm) | 30 | 35 | 45 |
| Maximal terminal torque | (Nm) | 6 | 12 | 18 |
| Terminal width | (mm) | 21 | 25 | 32 |
| Dimensions | | | | |
| Height | (mm) | 130 | 165 | 260 |
| Width | 3P (mm) | 90 | 105 | 140 |
| | 4P (mm) | 120 | 140 | 185 |
| Depth | (mm) | 97 | 97 | 150 |
| Weight | 3P (kg) | 1.1 | 1.5 | 5.8 |
| | 4P (kg) | 1.4 | 1.9 | 7.6 |

| Circuit breakers | P160 | P250 | P630 |
|--------------------------------------------------------------------------------------------------------------------------|-------------|-------------|-------------|
| Protection | yes | yes | yes |
| MAG (ICB): li adjustable | yes | no | no |
| TM (Thermal magnetic): Ir adjustable, li adjustable, neutral protection adjustable on 4P | yes | yes | no |
| LSnl: Ir adjustable, tr fixed, lsd adjustable, tsd fixed, li fixed, neutral protection adjustable on 4P | yes | yes | no |
| LSI: Ir & tr adjustable, lsd & tsd adjustable, li adjustable, neutral protection adjustable on 4P | yes | yes | yes |
| Energy: Ir & tr adjustable, lsd & tsd adjustable, li adjustable, Ig & tg adjustable, neutral protection adjustable on 4P | yes | yes | yes |
| Earth leakage protection with add-on block | no | yes | yes |
| Earth leakage protection with relay | yes | yes | yes |

Measurement and advanced functions

| Trip unit version | LSnl | LSI | Energy | LSnl | LSI | LSIG | Energy | LSI | LSIG | Energy |
|--------------------------------------------------|-------------|------------|---------------|-------------|------------|-------------|---------------|------------|-------------|---------------|
| Embedded display of measurements and trip causes | no | no | yes | no | no | no | yes | no | no | yes |
| PTA output contact | no | yes | yes | no | yes | yes | yes | yes | yes | yes |
| OAC output contact | no | no | yes | no | no | no | yes | no | no | yes |
| MIP connector for Configuration tool | yes | yes | yes | yes | yes | yes | yes | yes | yes | yes |

Options

| | | | | | | | | | | |
|-----------------------------------------------------------|------|------|-----|------|------|------|-----|------|------|-----|
| Panel display | no | no | yes | no | no | no | yes | no | no | yes |
| Communication module | no | no | yes | no | no | no | yes | no | no | yes |
| MCCB status, operation and trip counters via AX/AL Energy | no | no | yes | no | no | no | yes | no | no | yes |
| Configuration tool | yes* | yes* | yes | yes* | yes* | yes* | yes | yes* | yes* | yes |

(*) limited to certain functions.

h3+ electromechanical range

Page

01 TM and MAG (ICB) trip units

18

h3+ electro-
mechanical
range

TM

h3+ circuit breakers fitted with thermal-magnetic trip units are for use in electrical distribution applications. They are used for protection of conductors and loads supplied by transformers or generators and also if the fault current is limited due to the impedance of the conductor lengths. Settings are made with adjustment dials at the front of the products.



Trip unit TM

Thermal protection I_r (A)

Thermal protection against overloads is based on the principle of a bimetal actuator working in an inverse time curve I^2t based on temperature rise limits. Over this limit the bimetal actuator trips the circuit breaker.

The thermal protection threshold I_r can be adjusted between $0.63 \times I_n$ and I_n .


Time delay is fixed.

Magnetic protection I_i (A)

Magnetic protection against short-circuits is adjustable and allows instantaneous tripping.

P160: adjustable from 6 to 12 times the nominal rating (I_n) of circuit breakers up to 125 A and 6 to 10 times for the 160 A.

P250: adjustable from 6 to 13 times the nominal rating (I_n) of circuit breakers up to 160 A, 6 to 12 times for 200 A and 6 to 10 times for 250 A.

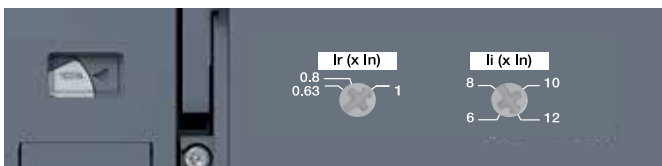

Trip unit TM with neutral adjustment

Protection against earth leakage current

Protection against earth leakage current is ensured by an RCD add-on block fitted to the circuit breaker or an RCD relay operating the shunt trip release or under voltage coil of the circuit breaker (option as an accessory).

P160 can only be associated with an RCD relay.



P250 works with both solutions.

Neutral protection on TM circuit breakers

P160 and P250 TM circuit breakers are available as:

- 3P3D:
3-pole device with detection on each pole, neutral protection is not possible.
- 4P4D:
4-pole device with adjustable neutral protection on the left pole.

TM trip units

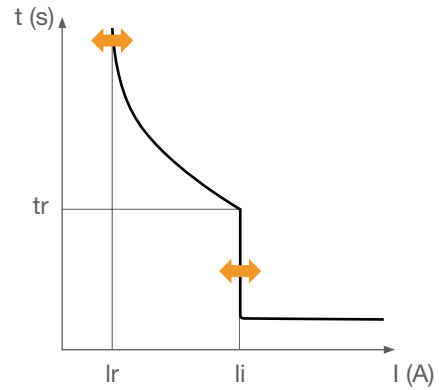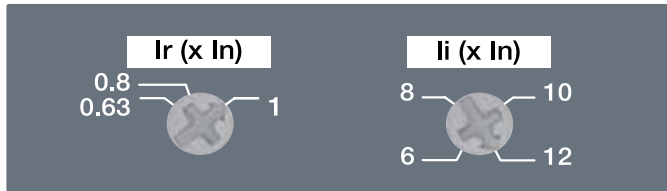

| In at 50 °C | 25 A | 40 A | 50 A | 63 A | 80 A | 100 A | 125 A | 160 A | 200 A | 250 A |
|-------------|------|------|------|------|------|-------|-------|-------|-------|-------|
| P160 | x | x | | x | x | x | x | x | | |
| P250 | | | x | x | x | x | x | x | x | x |

Thermal protection

| | |
|--------------------------------------------------------------|---------------------------|
| Ir ... x In (tripping current between 1.05 and 1.30 x Ir) | adjustable 0.63 - 0.8 - 1 |
| Time delay tr | fixed |

Magnetic protection

| | |
|--------------------|--------------------------------------------------------|
| li (+/- 20 %) x In | adjustable |
| P160 | 6 - 8 - 10 - 12 6 - 7 - 8 - 9 - 10 |
| P250 | 6 - 8 - 10 - 13 6 - 8 - 10 - 12 6 - 7 - 8 - 9 - 10 |
| Time delay | fixed |


Neutral protection

| | |
|----|--------------------|
| 3P | - |
| 4P | 0 % or 100 % of Ir |

h3+ electro-mechanical range

MAG (ICB)

The h3+ circuit breakers fitted with magnetic trip units are destined for a use in electrical distribution applications where only magnetic protection is required. They are mainly used for motor protection in association with a thermal relay and a power contactor.

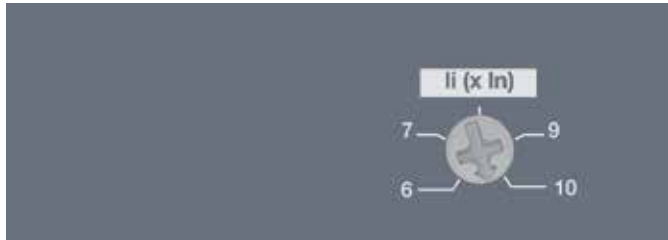

Trip unit MAG

Magnetic protection li (A)

Magnetic protection against short-circuits is adjustable and allows instantaneous tripping.


P160: adjustable from 6 to 12 times the rating (I_n) of circuit breakers up to 125 A and 6 to 10 times for the 160 A.

P250: adjustable from 6 to 13 times the rating (I_n) of circuit breakers up to 160 A, 6 to 12 times for 200 A and 6 to 10 times for 250 A.

Circuit breakers with MAG trip unit

P160 MAG circuit breakers are available as 3P (3P3D) and 4P (4P4D).

MAG trip units

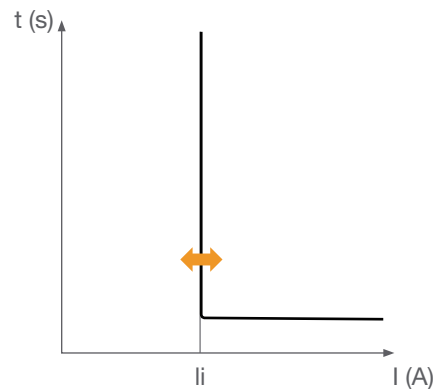

| I_n at 50 °C | 25 A | 40 A | 50 A | 63 A | 80 A | 100 A | 125 A | 160 A | 200 A | 250 A |
|----------------|------|------|------|------|------|-------|-------|-------|-------|-------|
| P160 | x | x | x | x | x | x | x | x | | |

Magnetic protection

| | | | | | | | | | | |
|-------------------------|-----------------|--|--|--|--|--|--|--------------------|--|--|
| li (+/- 20 %) x I_n | adjustable | | | | | | | | | |
| P160 | 6 - 8 - 10 - 12 | | | | | | | 6 - 7 - 8 - 9 - 10 | | |
| Time delay | fixed | | | | | | | | | |

Neutral protection

| | |
|----|----------------|
| 3P | - |
| 4P | same as phases |

h3+ electronic range


Page

| | |
|---------------------------------|-----------|
| 01 Electronic trip units | 24 |
|---------------------------------|-----------|

| | |
|---------------------------------|-----------|
| 02 Communication devices | 34 |
|---------------------------------|-----------|

LSnI

h3+ circuit breakers fitted with LSnI trip units are for use in electrical distribution applications. They are used for protection of conductors and also if the fault current is limited due to the impedance of the conductor lengths. Settings via adjustment dials are at front of the products and allow an accurate protection settings and a tripping curve independent of the ambient temperature.

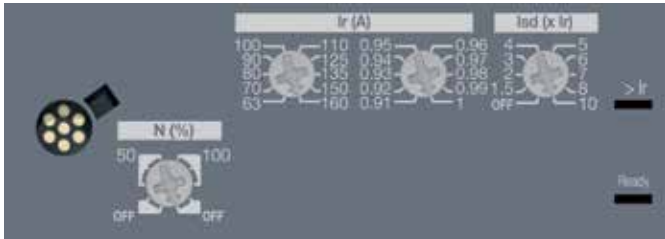

Trip unit LSnI

Long time protection L

Long time protection provides an inverse time curve I^2t against overloads.

Fine tuning of I_r (A) is done with 2 dials.

Time delay t_r (s) is non-adjustable.

Short time protection S

Short time protection is for short-circuits. I_{sd} (A) is adjustable with a dial from 1.5 to 10 times the long time protection I_r of the circuit breaker. Short time protection can be disabled.

Time delay t_{sd} is non-adjustable.

Non-adjustable instantaneous protection Ii

Instantaneous short-circuit protection I_i (A) is fixed.

Non tripping time delay is 10 ms and the maximum breaking time delay is 50 ms.

Protection against earth leakage current

Protection against earth leakage current is ensured by an RCD add-on block fitted to the circuit breaker or an RCD relay operating the shunt trip release or under voltage coil of the circuit breaker (option as an accessory).

P160 can only be associated with a separate RCD relay.

P250 works with both solutions.

Neutral protection on LSnI circuit breakers

P160 and P250 LSnI circuit breakers are available as:

- 3P3D: No neutral protection.
- 4P4D: Neutral protection is set with a dial on one of the following positions: OFF; 50 % of I_r and I_{sd} ; 100 % of I_r and I_{sd} . Time delay remains the same as t_r and t_{sd} .



Neutral protection dial



Front LED Indicators

Front LED Indicators

Ready LED: Green when the trip unit is ready to protect. It

blinks in orange if an internal fault in the trip unit is detected.

> I_r LED: It starts blinking red when $I \geq 105\%$ I_r and remains red in case $I > 112\%$ I_r .




MIP Connector

MIP Connector


Connection for Configuration tool HTP610H.

LSnl trip units

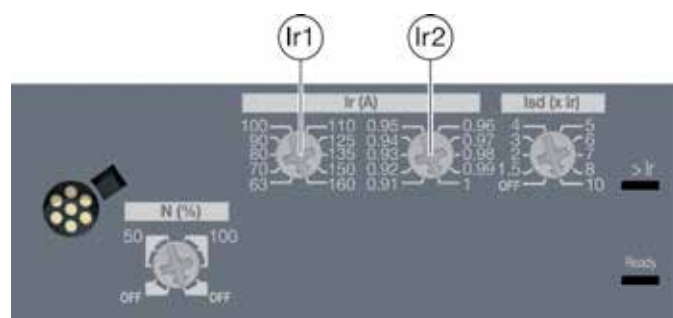

h3+

LSnl

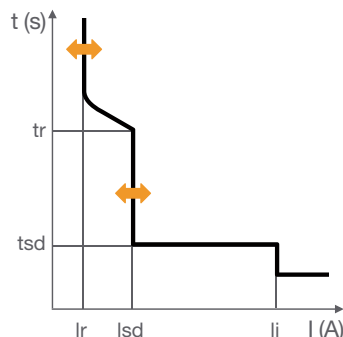

| In | 40 A | 100 A | 160 A | 250 A |
|------|------|-------|-------|-------|
| P160 | X | X | X | |
| P250 | X | X | X | X |

Long time protection

Ir (pick-up tripping between 1.05 and 1.20 x Ir)

| | | |
|--------------------|-----------------|------------------------------------------------------------------|
| Ir (A) | In = 40 A | 16 - 18 - 20 - 22 - 25 - 28 - 32 - 34 - 37 - 40 |
| | In = 100 A | 40 - 45 - 50 - 57 - 63 - 72 - 80 - 87 - 93 - 100 |
| | In = 160 A | 63 - 70 - 80 - 90 - 100 - 110 - 125 - 135 - 150 - 160 |
| | In = 250 A | 90 - 100 - 110 - 125 - 140 - 160 - 180 - 200 - 225 - 250 |
| Ir (A) = Ir1 x Ir2 | Fine tuning Ir2 | 0.91 - 0.92 - 0.93 - 0.94 - 0.95 - 0.96 - 0.97 - 0.98 - 0.99 - 1 |

| | | |
|---------------------------------------|--------------|---|
| Time delay (s) accuracy -21% / +1% | tr at 6 x Ir | 5 |
|---------------------------------------|--------------|---|

S Short time protection

| | | |
|------------------------|-----------------------|--------------------------------------|
| Isd = OFF ; = Ir x ... | Accuracy +/- 10 % | 1.5 - 2 - 3 - 4 - 5 - 6 - 7 - 8 - 10 |
| Time delay (ms) | tsd | 100 |
| | Non-tripping time | 80 |
| | Maximum breaking time | 150 |

I Instantaneous protection


| | | |
|------------------------------------------------------------|-----------------------|----|
| Instantaneous pickup li = In x ... accuracy +/- 15 % | In = 40 A ; 100 A | 15 |
| | In = 160 A ; 250 A | 11 |
| Time delay (ms) | | - |
| | Non-tripping time | 10 |
| | Maximum breaking time | 50 |

Neutral protection (only for 4P)

| | | |
|-------------------------------------------------------|--------------------------|----------------------------------------------|
| Neutral protection = Phase protection (Ir, Isd) x ... | | OFF - 50 % - 100 % |
| | Instantaneous protection | same as phases |
| | Time delay | same as phases for tr, tsd and instantaneous |

LSI

h3+ circuit breakers fitted with LSI trip units are for use in electrical distribution applications for protection of conductors and loads in case of a wide range of protection settings is required. Settings with adjustment dials are at front of products and allow an accurate protection setting and a tripping curve that is independent of the ambient temperature.

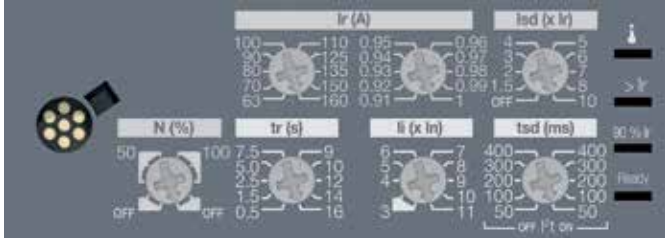

Trip unit LSI

Long time protection L

Long-time protection provides an inverse time curve I^2t against overloads.

Fine tuning of I_r (A) is done with two dials.

Time delay t_r (s) is adjustable via one dial.

Short time protection S

Short time protection is for short-circuits. I_{sd} (A) is adjustable with a dial from 1.5 to 10 times the long time protection I_r of the circuit breaker. Short time protection can be disabled.

Time delay t_{sd} is adjustable using a dial from 50 to 400 ms with the possibility of including an inverse time curve (I^2t OFF or ON).

Instantaneous protection Ii

Instantaneous short-circuit protection I_i (A) is adjustable from:

- 3 to 15 times the nominal current I_n for circuit breakers with I_n up to 100 A,
- 3 to 11 times the nominal current I_n for P160 and P250 circuit breakers with I_n 160 A or 250 A and for P630 with I_n 630 A.
- 3 to 12 times the nominal current I_n for P630 circuit breakers with I_n 250 A or 400 A;

Non-tripping time delay is 10 ms and the maximum breaking time delay is 50 ms.

Protection against earth leakage current

Protection against earth leakage current is ensured by an RCD add-on block fitted to the circuit breaker or an RCD relay operating the shunt trip release or under voltage coil of the circuit breaker (option as an accessory).

P160 can only be associated with an RCD relay.

P250 and P630 work with both solutions.

Neutral protection on LSI circuit breakers

P160, P250 and P630 LSI circuit breakers are available as:

- 3P3D: No neutral protection.
- 4P4D: Neutral protection is set with a dial on one of the following positions: OFF; 50 % of I_r and I_{sd} ; 100 % of I_r and I_{sd} . Time delay remains the same as t_r and t_{sd} .



Neutral protection dial LSI trip unit



Front LED indicators

Front LED indicators

Temperature LED: It turns red when the internal temperature of the trip unit reaches 105 °C.

> I_r LED: It starts blinking red when $I \geq 105 \% I_r$ and remains red in case $I > 112 \% I_r$.

90 % I_r LED: It starts blinking orange when $I \geq 90 \% I_r$ and remains orange when the corresponding PTA output contact is activated.

Ready LED: Green when the trip unit is ready to protect. It blinks in orange if an internal fault in the trip unit is detected.



MIP Connector

Connection for Configuration tool HTP610H.



MIP Connector

LSI trip units

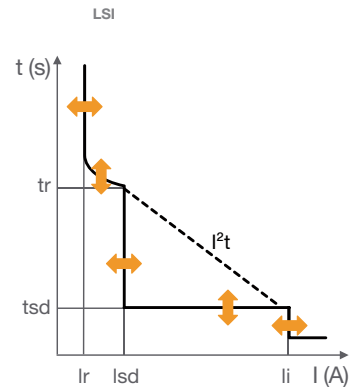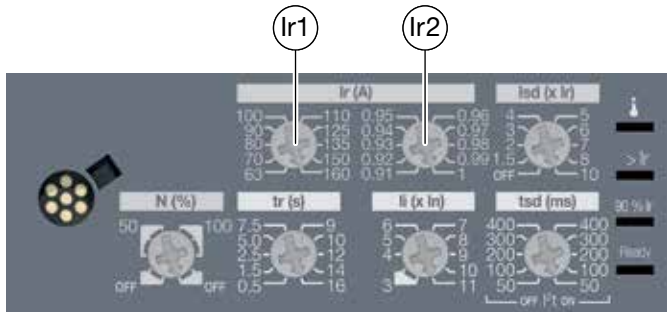

| In | 40 A | 100 A | 160 A | 250 A | 400 A | 630 A |
|------|------|-------|-------|-------|-------|-------|
| P160 | X | X | X | | | |
| P250 | X | X | X | X | | |
| P630 | | | | X | X | X |

Long time protection

Ir (pick-up tripping between 1.05 and 1.20 x Ir)

| | | |
|------------------------------------|-----------------|------------------------------------------------------------------|
| Ir1 (A) | In = 40 A | 16 - 18 - 20 - 22 - 25 - 28 - 32 - 34 - 37 - 40 |
| | In = 100 A | 40 - 45 - 50 - 57 - 63 - 72 - 80 - 87 - 93 - 100 |
| | In = 160 A | 63 - 70 - 80 - 90 - 100 - 110 - 125 - 135 - 150 - 160 |
| | In = 250 A | 90 - 100 - 110 - 125 - 140 - 160 - 180 - 200 - 225 - 250 |
| | In = 400 A | 160 - 180 - 200 - 225 - 250 - 300 - 350 - 370 - 400 |
| | In = 630 A | 250 - 300 - 350 - 370 - 400 - 500 - 600 - 630 |
| Ir (A) = Ir1 x Ir2 | Fine tuning Ir2 | 0.91 - 0.92 - 0.93 - 0.94 - 0.95 - 0.96 - 0.97 - 0.98 - 0.99 - 1 |
| Time delay (s) accuracy -21% / +1% | tr at 6 x Ir | 0.5 - 1.5 - 2.5 - 5 - 7.5 - 9 - 10 - 12 - 14 - 16 |

S Short time protection

| | | | | | | |
|------------------------|-----------------------|--------------------------------------|-----|-----|-----|-----|
| Isd = OFF ; = Ir x ... | Accuracy +/- 10 % | 1.5 - 2 - 3 - 4 - 5 - 6 - 7 - 8 - 10 | | | | |
| Time delay (ms) | tsd I²t OFF | 50 | 100 | 200 | 300 | 400 |
| | tsd I²t ON | 50 | 100 | 200 | 300 | 400 |
| | Non-tripping time | 20 | 80 | 180 | 280 | 380 |
| | Maximum breaking time | 80 | 150 | 250 | 350 | 450 |


I Instantaneous protection

| | | | |
|------------------------------------------------------------|-----------------------|--------------------|--------------------------------------|
| Instantaneous pickup li = In x ... accuracy +/- 15 % | P160 - P250 | In = 40 A ; 100 A | 3 - 4 - 5 - 6 - 7 - 8 - 10 - 12 - 15 |
| | | In = 160 A ; 250 A | 3 - 4 - 5 - 6 - 7 - 8 - 9 - 10 - 11 |
| | P630 | In = 250 A ; 400 A | 3 - 4 - 5 - 6 - 7 - 8 - 10 - 11 - 12 |
| | | In = 630 A | 3 - 4 - 5 - 6 - 7 - 8 - 9 - 10 - 11 |
| Time delay (ms) | Non-tripping time | 10 | |
| | Maximum breaking time | 50 | |

Neutral protection (only for 4P)

| | |
|-------------------------------------------------------|---------------------------------------------------------------------|
| Neutral protection = Phase protection (Ir, Isd) x ... | OFF - 50 % - 100 % |
| Instantaneous protection | same as phases |
| Time delay | same as phases for tr, tsd and instantaneous time delays for phases |

Energy trip units

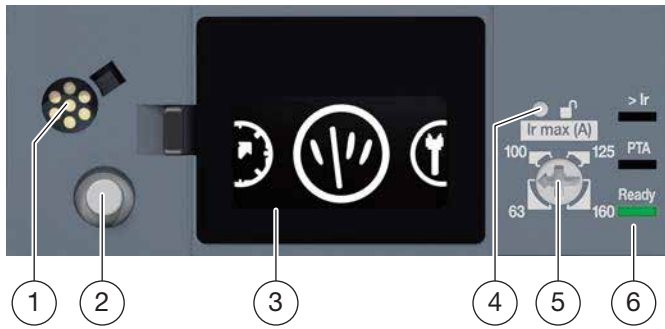

- 1 Maintenance interface Port (MIP)
- 2 h3+ joystick
- 3 Embedded display
- 4 Unlock button
- 5 Ir max dial
- 6 Front LED indicators

h3+ MCCBs fitted with Energy trip units are for protection of conductors and loads in electrical distribution applications. They present a wide range of settings to cope with the requirements of load protection and circuit selectivity in electrical distributions.

Furthermore, they offer the user the possibility to do energy management by showing all measurements collected by the embedded sensors working on the basis of Rogowski technology.

Moreover, advanced remote functions and alarm management features are provided.

Energy functions:

- Measurements visualisation
- Protection settings configuration
- Alarm management
- Integrated OAC contact and PTA output contact
- Event logs
- Communication interface to the Panel display and to the Modbus COM module

Embedded display h3+ Energy



Embedded display horizontal

h3+ Energy MCCBs display the protection settings and the main measurements on the high contrast embedded screen. The h3+ joystick located at the front of the MCCB allows the navigation through the four main menus: Protection, Measure, Configuration and Information.

Even if the Energy trip unit is self-powered by a minimum of current flowing through the MCCB, an external 24 V DC power supply is recommended to make the display available under all operating conditions and to allow the Energy trip unit to fulfill all the functions of measurement and memorisation of events (Trips, alarms).

An easy configuration of the screen rotation by 90°, 180° or 270° is possible to guarantee a good reading of the display regardless of the mounting position of the Energy MCCB. Moreover, the user can set his favourite measurements that will keep scrolling on the screen when the embedded display is in Live mode.

Measurements



Embedded display Measurements menu

The h3+ Energy MCCBs measure real time rms value of the current, voltage, frequency, power and others. Every instantaneous measurement can be associated with a maximeter. Maximeters can be reset.

The h3+ Energy MCCBs also measure all energies with a Class 1 accuracy according to IEC 61557-12.

The partial energy can be reset.

Power demand values can also be calculated by h3+ Energy MCCB. These calculations can be made using a fixed or sliding interval that can be set from 5 to 60 minutes in steps of 1 minute. The calculation window can be synchronised with a signal sent via the communication system through the Com module. These demand values can be used to provide trend curves and forecasts based on this data. They will provide basic data to draw a load profile and to adjust consumption to the subscribed power.

In addition to that, h3+ Energy MCCBs measure the total harmonic distortion (THD) of current and voltage.

Measurements

| | | | Embedded display | HTD210H Panel display |
|-----------------------------------|-----------------------------------------------------------------------|-------------------------------------------------------------------------|----------------------------|-----------------------|
| Real time rms measurements | | | | |
| Current | Phase and neutral | I1, I2, I3; IN | x | x |
| | Average | $I_{avg} = (I1+I2+I3)/3$ | | x |
| | Highest current of 3 phases | I _{max} of I1, I2, I3, IN | | x |
| | Ground fault | IG | x | x |
| | Unbalanced between phases | % I _{avg} | | x |
| Voltage | Phase to phase | U12, U23, U31 | x | x |
| | Phase to neutral | V1N, V2N, V3N | x | x |
| | Average phase to phase | $U_{avg} = (U12 + U21 + U23) / 3$ | | x |
| | Average phase to neutral | $V_{avg} = (V1N + V2N + V3N) / 3$ | | x |
| | Unbalanced | % U _{avg} and % V _{avg} | | x |
| | Phase sequence | 1 - 2 - 3, 1 - 3 - 2 | x | x |
| Frequency | Frequency | f | x | x |
| Power | Active | P, total / per phase | x | x |
| | Reactive | Q, total / per phase | x | x |
| | Apparent | S, total / per phase | | x |
| | Power factor and cos φ (fundamental) | PF and cos φ, total and per phase | x (cos φ tot) | x |
| Maximeter | | | | |
| | Last maximum of real time rms voltage, current and power measurements | Reset via Embedded display (voltage, current, power) or HTD210H | x | x |
| Energy metering | | | | |
| Energy | Active (kW), reactive (kvarh), apparent (kVAh) | Total, partial, direct, reverse | x (except apparent energy) | x |
| Demand values | | | | |
| Demand power | Active (kWh), reactive (kvar), apparent (kVA) | Present value on the selected window Maximum demand since last reset | | x |
| On demand value | Sliding, fixed or com-synchronised | Adjustable from 5 to 60 minutes in steps of 1 minute | | x |
| Power quality | | | | |
| Total harmonic distortion | Of voltage | THDU, THDV of the Ph-Ph and Ph-N voltage | | x |
| | Of current | THDI of the phase current | | x |

Measurement accuracy

Accuracies are those of the entire measurement system, including the sensors:

- Current: Class 0.5 according to IEC 61557-12
- Voltage: Class 0.5 according to IEC 61557-12
- Power and energy: Class 1 according to IEC 61557-12
- Frequency: Class 0.2 according to IEC 61557-12

Unlock button



Access to setting modifications or reset of measurements via the embedded display is protected by a locking function. The embedded display can be unlocked by the unlock button which can only be handled by a tool. It is recommended to use a less sharp tool like a pencil than a screwdriver or a knife.

Protection settings

h3+ Energy MCCB provides a long time protection L with an adjustable current pick-up I_r and adjustable time delay t_r . They provide also a short time protection S with adjustable I_{sd} and t_{sd} and with the possibility of including an inverse time curve (I^2t OFF or ON) part. Instantaneous short-circuit protection I_i is also adjustable with a fixed time delay.



Embedded display Protection settings



Front LED indicators

In unlocked mode the embedded display changes its colour and shows an “unlocking” icon. The unlocked mode is also activated by handling the I_r max dial.

The embedded display can be relocked via the h3+ joystick or automatically after 30 seconds of non-use.

Ground fault protection can be activated or deactivated. It is with adjustable pick-up I_g and adjustable time delay t_g . It is an insulation fault type including a portion of an inverse time curve I^2t (I^2t ground OFF or ON).

Neutral protection is available on 4P Energy MCCB: It is adjustable in following positions: OFF; 50 % of I_r and I_{sd} ; 100 % of I_r and I_{sd} . Time delay remains the same as t_r and t_{sd} .

Protection against earth leakage current is ensured by an RCD add-on block fitted to the circuit breaker or an RCD relay operating the shunt trip release or under voltage coil of the circuit breaker (option as an accessory). P160 can only be associated with a RCD relay. P250 works with both solutions.

Current pick-up threshold I_r

The current pick-up I_r is set by the I_r max dial. Handling the I_r max dial automatically unlocks the embedded display. The effective I_r value is displayed on the display. It is then possible to fine tune the I_r and other protection settings via the display joystick. Without any joystick action or dial handle after 30 seconds, the embedded display will lock.

Front LED indicators

> I_r LED: It starts blinking red when $I \geq 105\% I_r$ and remains red in case $I > 112\% I_r$.


PTA LED: It starts blinking orange when PTA threshold is reached (default 90 %) and remains orange when the corresponding PTA output contact is activated.

Ready LED: Green when the trip unit is ready to protect. It blinks in orange in case of a failure of the autotest of the Energy Trip unit.

Autotest consists of testing all the sensors of the trip unit to make sure that the trip unit is ready to protect.

A failure in the autotest trips the MCCB and means that the MCCB should be replaced immediately.

Energy trip units

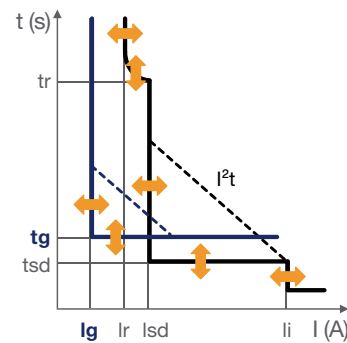

| In | | 40 A | 100 A | 160 A | 250 A | 400 A | 630 A |
|----|------|------|-------|-------|-------|-------|-------|
| | P160 | X | X | X | | | |
| | P250 | X | X | X | X | | |
| | P630 | X | | | X | X | X |

Long time protection

Ir (pick-up tripping between 1.05 and 1.20 x Ir)

| Ir (A) ; Ir max (A) | In = 40 A | 16 - 25 - 32 - 40 |
|---------------------|------------|-----------------------------------|
| | In = 100 A | 40 - 63 - 80 - 100 |
| | In = 160 A | 63 - 100 - 125 - 160 |
| | In = 250 A | 90 - 100 - 125 - 160 - 200 - 250 |
| | In = 400 A | 160 - 200 - 250 - 300 - 350 - 400 |
| | In = 630 A | 250 - 300 - 350 - 400 - 500 - 630 |

Fine tuning of 1A steps below Ir max is available using the dial on the front of the tripping unit until reaching the minimal value.

| Time delay (s) accuracy -21% / +1% | tr (s) at 6 x Ir | 0.5 - 1.5 - 2.5 - 5 - 7.5 - 9 - 10 - 12 - 14 - 16 |
|------------------------------------|------------------|---------------------------------------------------|
|------------------------------------|------------------|---------------------------------------------------|

S Short time protection

| Isd = OFF ; = Ir x ... | Accuracy +/- 10 % | 1.5 to 10 with steps of 0.5 |
|------------------------|-----------------------|----------------------------------------|
| Time delay (ms) | tsd I²t OFF | 50 100 200 300 400 |
| | tsd I²t ON | 50 100 200 300 400 |
| | Non-tripping time | 20 80 180 280 380 |
| | Maximum breaking time | 80 150 250 350 450 |

I Instantaneous protection

| Instantaneous pickup Ii = In x ... accuracy +/- 15 % | P160 - P250 | In = 40 A ; 100 A | 3 to 15 with steps of 0.5 |
|------------------------------------------------------------|-----------------------|--------------------|---------------------------|
| | | | In = 160 A ; 250 A |
| | P630 | In = 250 A ; 400 A | 3 to 12 with steps of 0.5 |
| | | In = 630 A | 3 to 11 with steps of 0.5 |
| Time delay (ms) | Non-tripping time | | 10 |
| | Maximum breaking time | | 50 |

G Ground fault protection

| Ground fault pickup Ig Ig = OFF; = % In | In = 40 A | 40 to 100 with steps of 5 |
|--------------------------------------------|-----------------------|-------------------------------------------------|
| | | In > 40 A |
| Time Delay (ms) | tsd I²t OFF | 50 100 200 300 400 500 |
| | tsd I²t ON | 50 100 200 300 400 500 |
| | Non-tripping time | 20 80 180 280 380 480 |
| | Maximum breaking time | 80 150 250 350 450 550 |

Neutral protection (only for 4P)

| | | |
|---------------------------------------|--------------------------|---------------------------------------------------------------------|
| Neutral protection = Phase protection | (Ir, Isd) x ... | OFF - 50 % - 100 % |
| | Instantaneous protection | same as phases |
| | Time delay | same as phases for tr, tsd and instantaneous time delays for phases |

Alarm management

The Energy MCCBs allow the management of four types of alarms:

- Overload prealarm
- Trip alarm
- Custom alarm
- System alarm

Overload prealarm

The overload prealarm PTA is a predefined alarm to be set in % of I_r and % of t_r with a default value of 90 % x I_r and 50 % of t_r .

It is assigned to the PTA output contact.

Trip alarm

There are five types of trip alarms. They correspond to the following events: Long time trip L, Short time trip S, Instantaneous trip I, Ground fault trip G, trip test (performed from Configuration tool).

Custom alarm

The user can activate up to twelve custom alarms to audit an event of measurement by defining thresholds and time delays.

The same measurement can be used for different custom alarms to precisely monitor certain values, e.g. the frequency or the voltage.

Priorities can be set for the Trip alarms and the twelve custom alarms.

System alarm

There are three types of System alarms: Trip unit internal error, Trip unit overtemperature and Neutral pole disconnection.

System alarms are non settable high priority alarms.

Alarms can be set and read via the Panel display HTD210H or the Configuration tool HTP610H.

Event management

The h3+ Energy MCCBs have a non-volatile memory that saves all data on alarm events, trip events and settings change events, counter values even if power supply is lost.

Time-stamped log table:

- 10 last trip events
- 40 last custom alarm events
- 5 last settings of each setting parameter

Each event is stored with:

- Time-stamping: date and time of event
- Status for custom alarms: pick up / drop out

The h3+ Energy event logs can be displayed on the Panel Display HTD210H (trip and alarm events), via the Configuration tool HTP610H (trip, alarm and setting events) or via Modbus communication.

Zone selective interlocking (ZSI)

The h3+ Energy MCCBs are fitted with ZSI connectors to interconnect h3+ Energy MCCBs to provide zone selective interlocking for short-time (I_{sd}) and ground-fault (I_g) protection, without a time delay. For Energy P160, the ZSI function is available only with one terminal (ZSI2) to connect to an upstream circuit breaker. For Energy P250, the ZSI function is available with one terminal (ZSI2) to connect to an upstream circuit breaker and with another terminal (ZSI1) to connect to a downstream circuit breaker.

Connectivity on h3+ electronic MCCB



NSP / PTA connection ports on Energy 3P MCCBs



PTA output contact



MIP connector



H3+ Energy CIP, ACP, ZSI and OAC connectors

OAC output contact

The Energy MCCBs have an integrated OAC output contact on the right side inside of the product.

The user can assign one of the following types of alarms to the OAC output contact:

- Overload prealarm
- Custom alarm
- System alarm

It is a digital output contact with the following characteristics:

- ≤ 24 VDC, 100 mA.

PTA output contact

All h3+ LSI, LSIg and Energy MCCBs have an integrated PTA output contact on the left side of the product.

This contact is associated to the overload prealarm PTA function fitted on the LSI, LSIg and Energy MCCBs.

It is a digital output contact with the following characteristics:
- ≤ 24 VDC, 100 mA.

MIP connector

All h3+ LSnl, LSI, LSIg and Energy MCCBs have a maintenance connector on the front of the device to connect to the Configuration Tool HTP610H (see next page).

NSP port

In a 3-phase installation with distributed neutral where a 3-pole Energy MCCB is fitted, it is necessary to measure the neutral voltage to guarantee accurate measurements.

Neutral sensor port exists only on 3P Energy MCCBs. In order to guarantee a high accuracy on measurement it is necessary to connect the neutral conductor to the NSP port using the voltage tap cable (HTC160H).

| | LSnl | LSI | Energy | |
|--------------------|------|-----|--------|----|
| | | | 3P | 4P |
| MIP connector | x | x | x | x |
| PTA output contact | - | x | x | x |
| NSP port | - | - | x | - |

Communication Interface Port (CIP)

Each MCCB Energy is fitted with two communication interface ports.

The ports are used to connect the panel display or the COM module.

Moreover, this port can be used to supply the Energy MCCB with 24V DC in condition to sustain from using one of the two accessories mentioned above.

| | CIP x 2 | ZSI ₁ | ZSI ₂ | ACP | OAC |
|--------------------|-----------------------------|-----------------------------|------------------|--------------|------------------|
| | COM Module Panel display | Zone selective interlocking | | AX/AL Energy | Alarm assignment |
| P160 Energy | X | - | X | X | X |
| P250 Energy | X | X | X | X | X |
| P630 Energy | X | X | X | X | X |

h3+ Configuration tool

The h3+ Configuration tool is an expert use of the h3+ electronic trip units.

It is helpful for advanced monitoring, configuration, and diagnostic of the Energy MCCB. The user is also able to launch a tripping test of all h3+ electronic MCCBs.

The h3+ Configuration tool HTP610H is a configuration device and a set of accessories to plug on the MIP Connector which is fitted on all h3+ LSnl, LSI, LSIG and Energy MCCBs. Using this MIP connector, the user is able to be connected to the MCCB thanks to the Configuration tool HTP610H.

Functionalities:


- Monitoring of the MCCB status (only Energy MCCB)
- Monitoring all the measurements
- MCCB Protection and Measurement settings (only Energy MCCB)
- Alarm management (predefined and custom alarms, OAC assignment (only Energy MCCB)
- Tripping Curve test (auto, semi-auto, manual)
- Testing of communication terminals (OAC, PTA, ZSI), (ZSI, OAC only Energy MCCB)
- Maintenance indicators (operation and trip counters, Last trip event ...), (only Energy MCCB)
- History table (only on Energy MCCB)



h3+ Configuration tool



h3+ Configuration tool with tablet

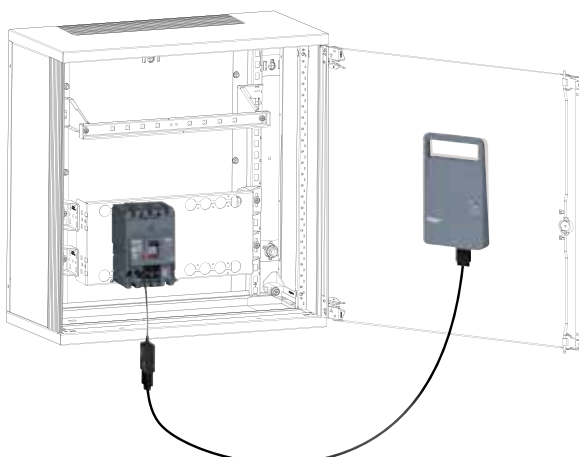

h3+ Configuration tool mounted on panel door

h3+ web server access via Wi-Fi or Ethernet connection

Once plugged on the MIP connector, the user can monitor the h3+ electronic MCCBs via the h3+ web server embedded in the configuration device by a tablet or smartphone Wi-Fi connection.

Note:

The user can also use a wire Ethernet connection with a personal computer to access the h3+ user interface.

The user launches the h3+ user interface by charging its HTTP address in the web-browser of the media (tablet or computer) without downloading an app. The h3+ user interface is compatible with IOS, Android and Windows systems.

Integrated battery to power the h3+ trip units

The h3+ Configuration device is fitted with a battery power supply to ease the monitoring of the MCCBs in cabling workshops or on sites.

On the back of the configuration device a magnet allows to fix it on a metallic panel door.

Thanks to its integrated battery, the h3+ Configuration tool provides the required power to supply the trip unit. That is how the h3+ electronic MCCBs can be tested without switching on the main power supply of the electrical panel board.

Panel display



h3+ Panel display



h3+ Energy MCCB connected to power supply



h3+ Energy MCCB connected via COM module to power supply

The Panel display HTD210H is used as a remote display of the h3+ Energy MCCB. It shows information such as the MCCB status, most of measured values, the circuit breaker parameters and the events such as trip alarms and custom alarms. In addition to that, modification of the protection settings and modification of the measurement settings are possible. The alarms can also be set-up and activated. This slim device can easily be mounted on a door or a switchboard panel behind the door thanks to the provided attaching clips. Only one accessory cable is necessary to connect the Panel display to the Energy circuit breaker (included 24 V DC supply). The front of the device is protected with a transparent cover in order to achieve a protection of IP65 once mounted on an appropriate switchboard. The LCD screen is backlit for very easy reading even under poor ambient lighting.

Mounting and connection

The connection between the MCCB h3+ Energy and the Panel display HTD210H is done using the CIP Adaptor cable. This CIP Adaptor has a RJ9 plug to fit behind the Panel display and at the other side a connector adapted to fit in the MCCB.

It drives not only the communication between both devices but also the 24 V DC voltage supply which is necessarily provided by an external power supply connected directly to the MCCB or via the COM module if Modbus communication is also used.


The external power supply must be Safety Extra Low Voltage (SELV) type, with galvanic isolation between the power supply input (AC voltage) and the power supply output (DC voltage).

Recommended power supply: HTG911H.

The CIP adaptor cable is not only used to connect the Panel display and the MCCB together but also to connect the COM module and the MCCB together. It is available in different lengths.

| CIP Adaptor length | Panel display - MCCB | COM module - MCCB |
|--------------------|----------------------|-------------------|
| 0.5 m | x | x |
| 1.5 m | x | x |
| 3 m | x | x |
| 5 m | x | x |
| 10 m | x | x |

Live mode

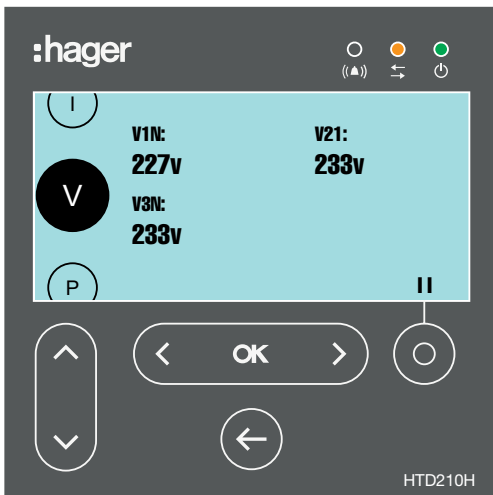

The panel display HTD210H allows to overview permanently a selection of measured values. In Live mode it is able to display continuously a scrolling list of measurements previously selected as favourites.


The Panel display enters in Live mode at the start-up or after two minutes of non-use. The Live mode can also be activated by the navigation.

Alarms and events

All trip alarms or custom alarms are notified by the Panel display. The notification depends on the priority level defined previously at the alarm set-up:

- high priority: a pop-up window displays the time-stamped description of the alarm and the red alarm LED flashes.
- medium priority: the red alarm LED flashes and the description of the alarm can be seen via the contextual alarm menu.
- low priority: no display on the screen.

Moreover, the last saved trip events and alarm events can be seen in event lists.

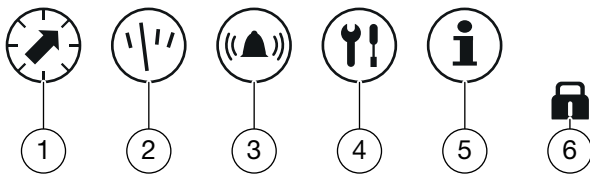

Main menus

- 1 **Protection:** it allows the user to check on the protection parameters and change them if he is allowed to.
- 2 **Measures:** it allows to show most of the values measured by the MCCB.
- 3 **Alarms:** it allows to configure all the alarms, the PTA output contact and the OAC output contact.
- 4 **Configuration:** it allows to configure the measurement settings and the display settings.
- 5 **Information:** status and identification information of the MCCB, list of events.
- 6 **Lock menu**



- 1 Up and down keys
- 2 Left; OK; Right key
- 3 Back key
- 4 Contextual key

Navigation

The navigation through the menus is done using seven touch keys on the front.


The contextual key may be used to unlock the modification of the settings, to pause the scrolling in Live mode, to select the measurements as favourite and to view the current alarms.

At first power on, the user can select the display language (English, Chinese, French, German, Italian, Spanish, Portuguese).

Technical characteristics

- Dimensions: 97 x 97 x 46 mm (27 mm behind the door)
- Panel/Door cut-out: 92 x 92 mm
- Screen dimension: 37 x 78 mm
- Azurin Backlighting
- Alarm LED: red blinking
- Communication LED: yellow blinking
- Power LED: green
- Consumption: 85 mA
- Operating temperature range -10 °C...+55 °C
- Installation category III
- IP rating of front side IP65 (back side IP20)
- Rated supply voltage: DC 24 V (+/- 30 %)

Modbus communication

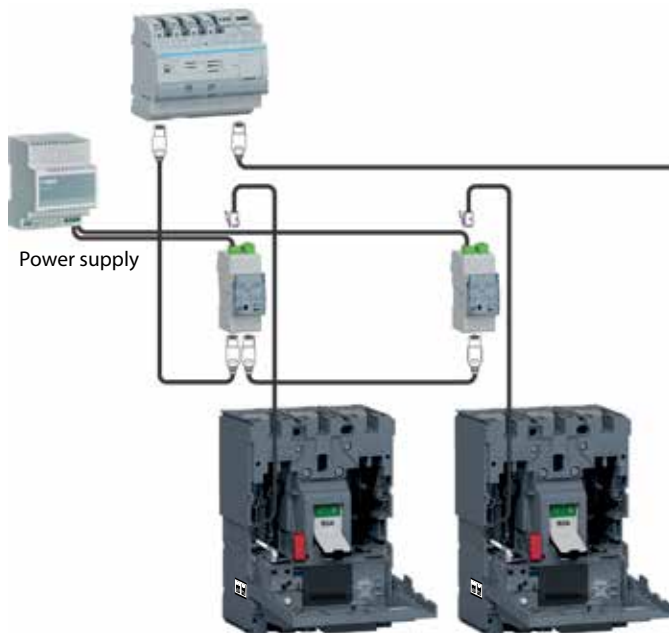

h3+ Energy MCCBs connected to a modbus communication network

The h3+ Energy MCCB can be connected to a modbus communication network via the COM module. Thanks to the prewired RJ45 modbus cable adaptors and to the prewired CIP Adaptor, the connection of Energy MCCBs into a modbus communication environment has become easier.

As a result, it is easy to achieve quickly a modbus daisy chain connection between the COM module and Hager's agardio.manager.

Each COM module can be connected to one MCCB h3+ Energy.

Up to 31 COM modules or other Hager modbus slaves can be connected to the agardio.manager HTG411H.



COM module HTC310H

COM module HTC320H

COM module

The COM module HTC310H or HTC320H is a modbus RTU interface with modbus address adjustable from 1 to 99 by mean of 2 dials. Baud speed and parity are also adjustable via dials. An embedded 120 Ω termination impedance can be activated via a switch on the device.

Integrated digital inputs and outputs

Compared to the basic COM module HTC310H, the HTC320H is a COM module with two 24 V DC inputs and two 24/48 V DC outputs which can be controlled via Modbus communication.


For instance, the 2 inputs can be used to pass the pre-trip alarm and trip contacts of the RCD add-on block to upper level of supervision.

The 2 outputs can be used to drive the command of the motor operator accessory and achieve a remote ON/ OFF operation of the Energy MCCB through Modbus communication.

Technical characteristics

- Width: 2 modules
- Digital Inputs: typical 24 V DC 15 – 30 V DC), 2 mA - 15 mA, minimum on state duration 50 ms, 5-pins connector at the top of the device (wires from 0.5 to 1.5 mm²)
- Digital Output: - ≤ 100 V DC (typical 24, 48 V DC), 10 µA - 50 mA, Pulse mini 100 ms, mini period 1 s, 10 ms delay, - 4-pins connector on the bottom of the device (wires from 0.5 to 1.5 mm²)
- Module consumption: 40 mA / 24 V DC
- Supply voltage: 24 V DC (+/- 30%).

Mounting of COM module

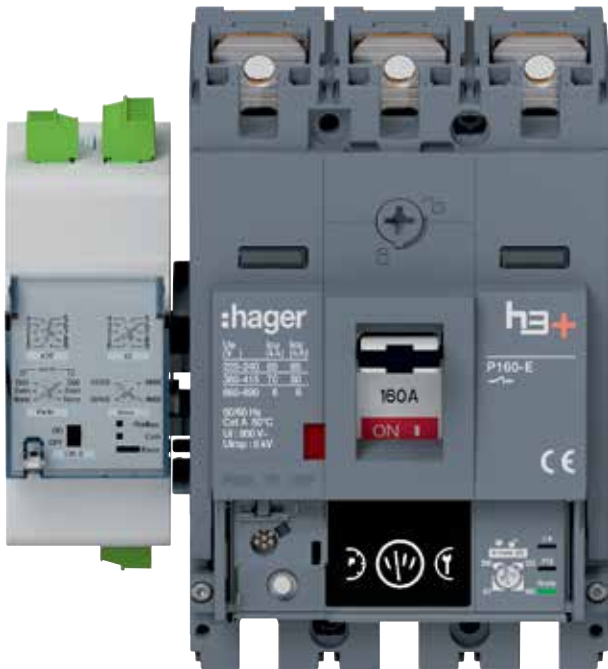

The COM module can be mounted on a DIN rail or at the side of the MCCB thanks to the side support.

One piece of side support is delivered with the COM module to allow fixing the COM module at the side of the MCCB. It can also be used to guide the cables and wires coming from inside the MCCB such as the CIP Adaptor cable between the circuit breaker and the COM module or between the circuit breaker and the Panel display. It is also useful to guide the outgoing auxiliary wires in case of use AX/AL Energy.

The COM module has a screw terminal on the top to connect a 24 V DC power supply in order to operate properly. This 24 V power supply is conveyed to MCCB via the CIP Adaptor connected between the COM module and the MCCB.

Two RJ45 terminals on the bottom of the device allow the realisation of a daisy chain connection from upstream agardio.manager or upstream other COM module to the next COM module.

Connection accessories

Different lengths and types of prewired RJ45 modbus conductors are available to make the installation easier even if the conductor shield has to be connected as close as possible to a protective ground.



COM Modules with modbus cables

| Prewired modbus cable RJ45 – RJ45 | Prewired modbus cable RJ45 – RJ45 with earth | Prewired modbus cable Wire – RJ45 with earth |
|--------------------------------------|----------------------------------------------------|----------------------------------------------------|
| 0.2 m | - | - |
| 1 m | 1 m | - |
| 2 m | 2 m | - |
| - | - | 3 m |
| 5 m | 5 m | - |

The communication between the MCCB h3+ Energy and the COM module is done using the CIP adaptor cable. It is available in different lengths.



CIP adaptor cables

| CIP Adaptor length | Panel display - MCCB | COM module - MCCB |
|--------------------|-------------------------|----------------------|
| 0.5 m | x | x |
| 1.5 m | x | x |
| 3 m | x | x |
| 5 m | x | x |
| 10 m | x | x |

AX/AL Energy



AX/AL Energy auxiliary module

The optional AX/AL Energy auxiliary module is used to communicate the ON/OFF mechanical status of the MCCB to the Energy trip unit. It also includes an operation cycle counter and a trip fault cycle counter to acquire the number of operation cycles and the number of trip fault cycles in the Energy trip unit.

These status and numbers can then be displayed on the embedded display of MCCB or on the optional HTD210H Panel display and they are also available via modbus communication.

The counters can be used as maintenance indicators with Configuration tool HTP610H:

- Mechanical operation cycle counter.
- Mechanical and electrical trip fault cycle counter.

The optional AX/AL Energy auxiliary module is recommended to provide remote AX and AL indication on auxiliary circuits such as warning light, electrical locking, relays, etc. It includes AX NO or NC contacts and AL NO or NC contacts.

AX contacts indicate the position Open/Closed of the circuit breaker contacts.

AL contacts indicate that the circuit breaker has tripped due to:

- An electrical fault (overload, short circuit).
- The operation of a shunt trip release or an undervoltage release.
- The “push-to-trip” button operation.

The optional AX/AL Energy auxiliary module has a dedicated location behind the front cover of the circuit breaker and a dedicated ACP terminal in the circuit breaker. Its presence is visible from the front facet through AX or AL windows.

It is available in three versions:

- only counter
- counter and AX/AL 250 V AC 2 m prewired contacts
- counter and AX/AL 125 V AC (low level) 2 m prewired contacts

Prewired contact: 0.34 mm² wires.

Electrical characteristics

Nominal current for 250 V AC AX/AL:

- 250 V / AC-14 = 3 A
- 250 V / AC-15 = 1 A
- 125 V / DC-12 = 0.4 A

Nominal current for 125 V AC AX/AL (low level):

- 125 V / AC-14 = 0.1 A
- 30 V / DC-12 = 0.1 A



AX/AL window

Switch-disconnector range

Page

01 Presentation

42

Presentation

The h3+ Switch-disconnectors comply with the IEC60947-1 and IEC 60947-3 standards. They are mainly used in electrical distribution applications such as:

- isolation and coupling of busbars
- isolation of main and sub-distribution boards
- isolation of local enclosures
- isolation of final distribution enclosures for commercial and industrial applications

The h3+ Switch-disconnectors are compatible with the following standard accessories of the h3+ MCCB range:

- motor operators
- direct and external rotary operators
- plug-in and withdrawable systems
- internal accessories: AX, AL, SHT and UVR
- terminal protections
- terminal extensions and cable terminals
- interlocking systems




Switch-disconnector protection

The h3+ Switch-disconnector is suitable to switch ON and OFF loads operating according to the utilisation category AC 22A / AC 23A in 415 V and DC 22A / DC 23A in 250 V. In addition to that, they ensure the complete disconnection of the load. Moreover, the disconnection can be assured by a padlocking element fitted onto the Switch-disconnector. As for the protection against overload and short-circuit, it must be done by an upstream device, in compliance with installation standards.

| Switch-disconnectors | | | | P630 | | |
|----------------------------------------------|------------------|------|----------------------------------------------|-----------------|-----------|-----|
| Number of poles | | | | 3, 4 | | |
| General characteristics | | | | | | |
| Nominal current | | | | 400 | 630 | |
| Operational current | I _e | [A] | AC22A | 220/240 V AC | 400 | 630 |
| | | | | 380/415V AC | 400 | 630 |
| | | | | 660/690V AC | 400 | 630 |
| | | | AC23A | 220/240 V AC | 400 | 500 |
| | | | | 380/415V AC | 400 | 500 |
| | | | | 660/690V AC | 400 | 500 |
| | | | DC23A | 250 V DC 1P | 400 | 630 |
| | | | | 375 V DC 3P | 400 | 630 |
| | | | Short-circuit making capacity @ 380-415 V AC | I _{cm} | [kA] peak | |
| Short time withstand current | I _{cw} | [kA] | 1 s | 5 | 7.6 | |
| Operational voltage, (AC) | U _e | [V] | | 690 | | |
| Frequency | f | [Hz] | | 50 / 60 | | |
| Rated insulation voltage | U _i | [V] | | 800 | | |
| Impulse withstand voltage | U _{imp} | [kV] | | 8 | | |
| Suitability for isolation | | | | yes | | |
| Pollution degree | | | | 3 | | |
| Mechanical endurance in number of operations | | | | 30000 | 30000 | |
| Electric endurance in number of cycles | I _n | | 440 V AC | 6000 | 4000 | |
| | | | 690 V AC | 1000 | 1000 | |
| | | | 500 V DC | 1500 | 1500 | |
| | | | 500 V DC | 1000 | 1000 | |
| Dimensions | | | | | | |
| Height | | (mm) | | 260 | | |
| Width | 3P | (mm) | | 140 | | |
| | 4P | (mm) | | 185 | | |
| Depth | | | | 150 | | |
| Weight | 3P | (kg) | | 4.8 | | |
| | 4P | (kg) | | 6.4 | | |


Accessories

| | Page |
|-------------------------------------------|-----------|
| 01 Overview | 46 |
| 02 Earth leakage protection | 48 |
| 03 Connection accessories | 50 |
| 04 Insulation accessories | 53 |
| 05 Auxiliaries | 57 |
| 06 Mounting types | 62 |
| 07 Handles and motor operators | 68 |
| 08 Locking and sealing accessories | 71 |
| 09 Interlocking accessories | 74 |

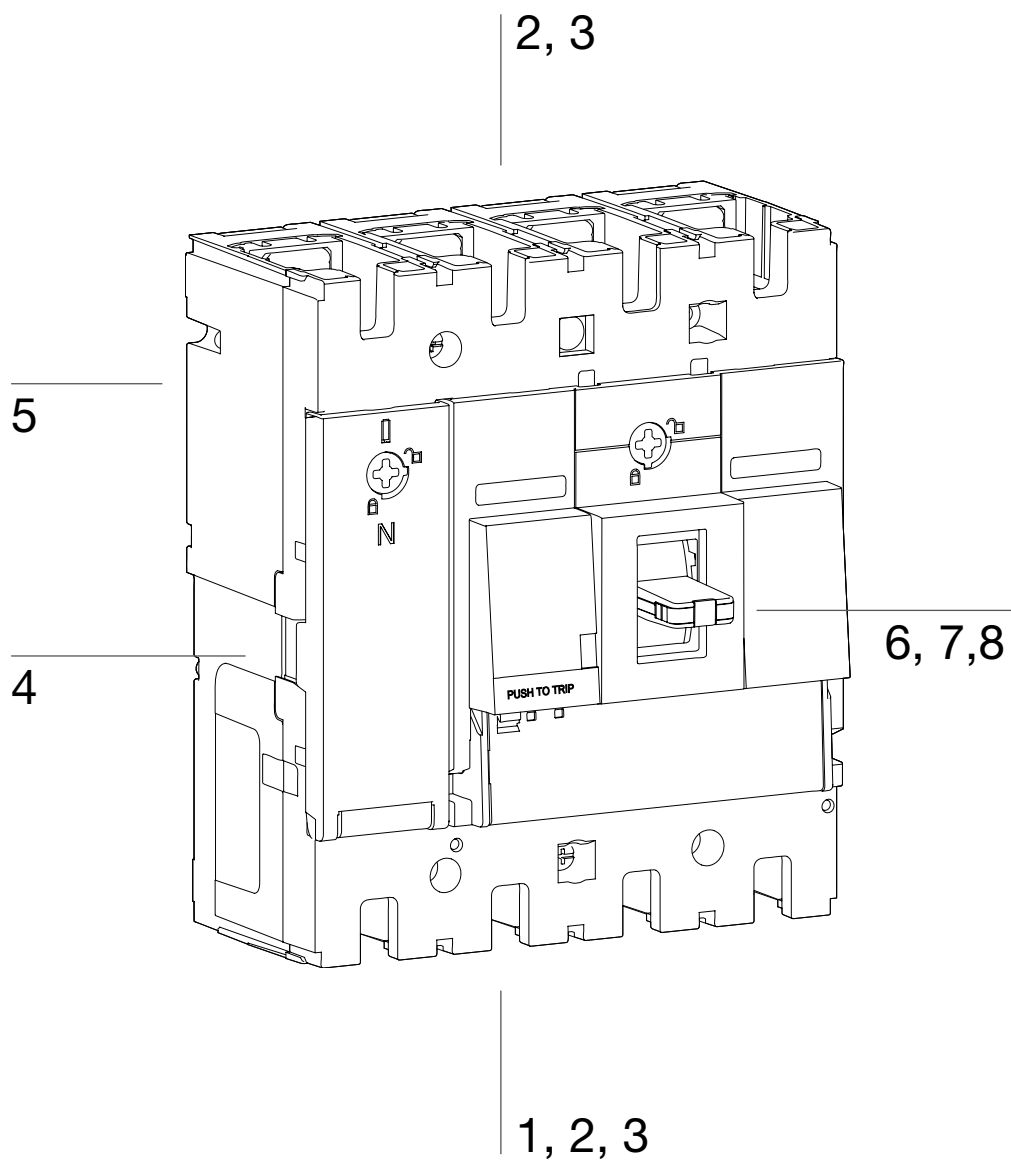


1. Earth leakage protection

RCD add-on block
page 48

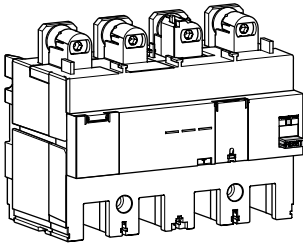


2. Connection accessories


Straight and spread bar extensions
page 52

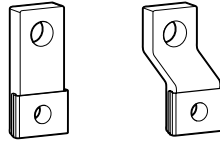

External cable terminals
page 52




Rear connection
page 52




3. Connection insulation


Straight
page 55

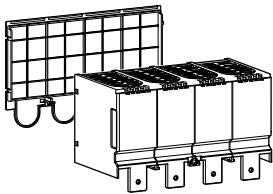


Spreader
page 55

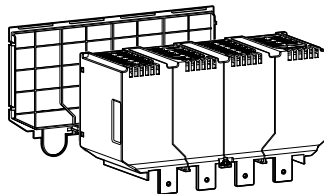

Rear and Plug-in
page 56




4. Auxiliaries
page 57

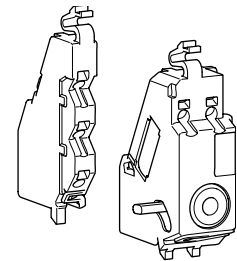


5. Mounting types

Plug-in
page 63

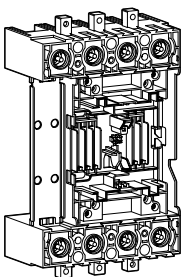


Withdrawable
page 66

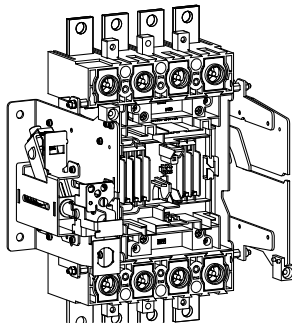


6. Interlocking accessories

Link interlock
page 74

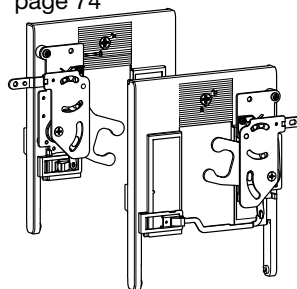


Cable interlock
page 74

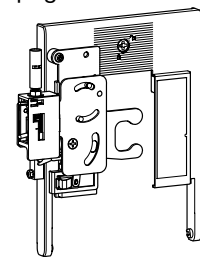


7. Handles and motor operators


Direct rotary handle
page 68

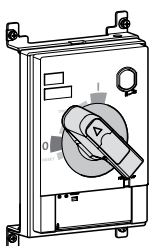

On door rotary handle
page 68

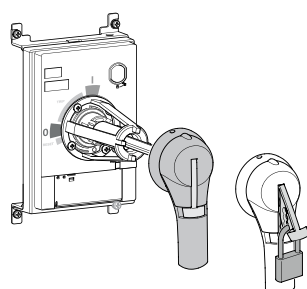


Motor operator
page 69

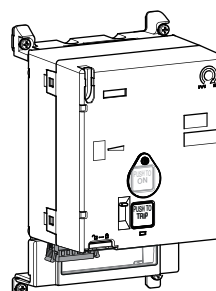

8. Locking and sealing accessories

Padlock accessories
page 71



Key lock
page 72




RCD add-on block



h3+ P250 combined with RCD add-on block

The earth leakage protection is ensured by the RCD add-on block, which is mounted directly under the MCCB. The RCD add-on block directly commands the tripping mechanism of the circuit breaker mechanically. The RCD add-on block requires connecting at least two phases in order to be supplied.

A test button exists on the front side of the product to allow testing the mechanical link between the MCCB and the RCD underneath no external power source. The RCD add-on block is available for the P250 and P630 circuit breakers.

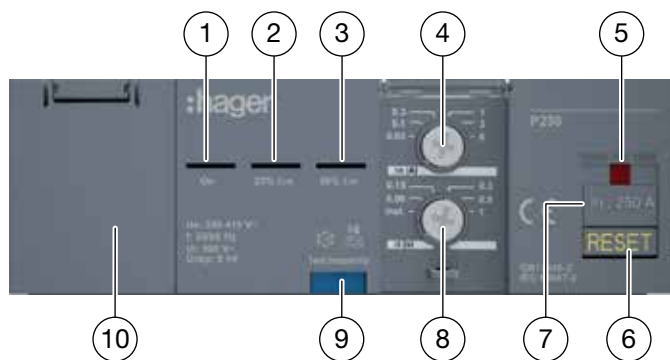

- ① On LED: Green when the RCD add-on block is ready to protect against earth leakage fault.
- ② 25 % $I_{\Delta n}$ LED: Orange when the earth leakage fault detected is greater than 25 % of the $I_{\Delta n}$ already set.
- ③ 50 % $I_{\Delta n}$ LED: Red when the earth leakage fault detected is greater than 50 % of the $I_{\Delta n}$ already set.
- ④ $I_{\Delta n}$ Sensitivity dial
- ⑤ Push to test button for the test of the mechanical link between the RCD add-on block and the circuit breaker.
- ⑥ Reset button: Resets the RCD add-on block so it can be operational again after trip ping due an earth leakage fault.
- ⑦ Rating indication.
- ⑧ $I_{\Delta t}$ time delay dial.
- ⑨ Test button simulating an earth-fault for regular check-up on the tripping function.
- ⑩ Housing of the RCD auxiliary contacts.

Three versions of RCD add-on block are available:

| Frame | Rating | RCD versions | Settings | |
|-------|--------|--------------|------------------------------|------------------------------------|
| | | Adjustable | Rated I Δ n (A) | Time delay Δ t (s) |
| P250 | 160 A | x | 0.03 - 0.1 - 0.3 - 1 - 3 - 6 | inst - 0.06 - 0.15 - 0.3 - 0.5 - 1 |
| | 250 A | x | | |
| P630 | 400 A | x | 0.1 - 0.3 - 0.5 - 1.3 - 10 | inst - 0.1 - 0.3 - 0.5 - 1 - 3 |
| | 630 A | x | | |

Characteristics

| | |
|------------------------------|--------------------------------------------------------|
| Frequency | 50/60 Hz |
| U _i | 690 V |
| U _{imp} | 6 kV |
| Nb of poles | 4P |
| Ph-ph voltage U _e | 220-415 V~ |
| RCD type | A for I Δ n \leq 6 AC for I Δ n =10 |

RCD auxiliary contacts

Two auxiliary contacts are available at the front of the product and protected by a cover. They are available for two versions: adjustable and alarm only.

RCD Add-on block



Auxiliary terminals on RCD add-on block

| Auxiliary contacts | Pre-alarm | Alarm |
|--------------------------------|---------------------|---------------------|
| Type | 1NO | 1NO.NC |
| Maximum current for AC voltage | 70 mA 250 V~ | 3 A 250 V~ |
| Maximum current for DC voltage | 70 mA 48 V DC | 2 A 48 V DC |
| Type of wire | rigid or flexible | rigid or flexible |
| Maximum cross section | 1.5 mm ² | 1.5 mm ² |

Protection can also be ensured by the combination of a residual current relay and an external core balanced transformer.


Connection accessories

The h3+ circuit breakers are delivered with or without cable terminals depending on the chosen version:

- with cable terminal
- with front connection

P160 MCCB are available in both versions and P250 and P630 are available only with front connection (without cable terminals).

P160 MCCB with cage connections (CTC)

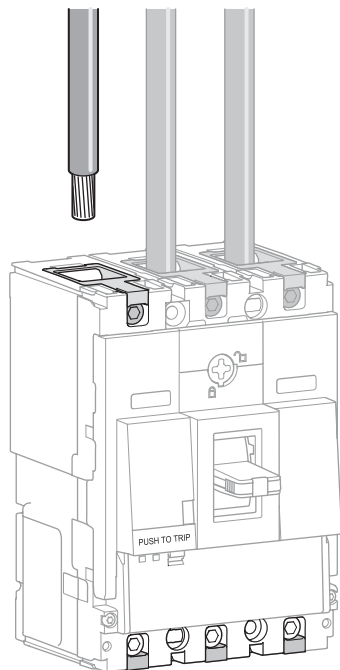

Cable connection

Connection accessories are available to adapt the circuit breaker for bare cables, bars or rear connections. Spreader and external multi-cable terminals are also available.

The h3+ circuit breaker versions with cable terminals are delivered with terminals compatible for bare cables, straight and bar extensions.


Bars and lugs dimensions

| Cross section rigid / flexible (mm ²) | Tightening torque (Nm) |
|------------------------------------------------------|---------------------------|
| 6...95 | 6 |
| 6...70 | 6 |

Tightening of bars or cables with lugs to the following tightening torque specifications:

The integrated cable terminals can be removed. The MCCB could then also be used with bars or lugs. In this case M8 screws are needed.


MCCB with front connections (FTC)

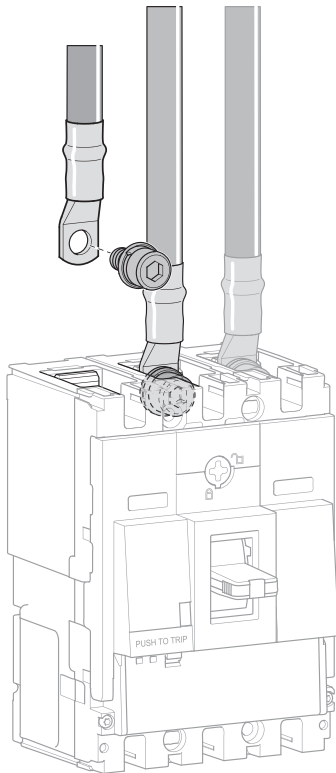

Front connection

The h3+ circuit breakers versions with front connections are delivered with M8 screws for P160 - P630 and M6 screws for P250. Thus, cables fitted with lugs or bars can be connected.

Connection of bars or cables with lugs

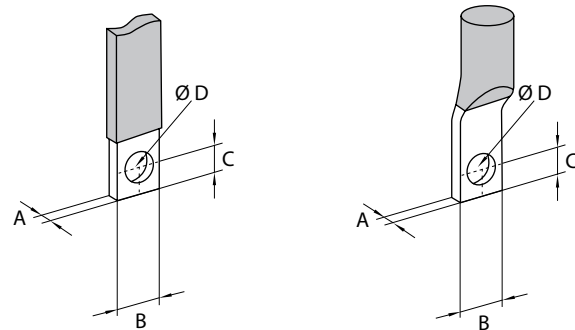

Copper bar and lug

Lugs used for cable connection or bars have to match the following dimensions:

Bars and lugs dimensions

| (mm) | A | B | C | ØD |
|------|----------|--------|-----|-----|
| P160 | 0.8...4 | max 21 | 9.8 | 8.5 |
| P250 | 1.2...4 | max 25 | 11 | 8.5 |
| P630 | 1.2...12 | max 32 | 11 | 10 |


Tightening of bars or cables with lugs to the following tightening torque specifications:

Bars or cables tightening torques

| | |
|------|-------|
| P160 | 6 Nm |
| P250 | 12 Nm |
| P630 | 18 Nm |

Interphase barriers or terminal covers are recommended. They are mandatory in some cases. 2 or 3 (for 4P) interphase barriers are delivered with the circuit breaker. They are compatible with the external cable terminals. Interphase barriers are also separately available.

External cable terminals

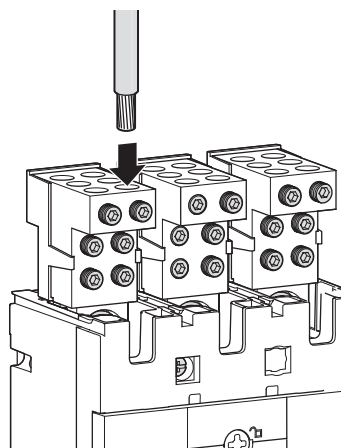

6 wires cable terminal P160

The external cable terminals are screwed directly into the terminals of the circuit breakers. They are made of aluminum and are suitable for Cu or Al wires. 2 or 3 (for 4P) interphase barriers are delivered with the circuit breaker. They are compatible with the external cable terminals. Insulation accessories may be required. Please refer to "Insulation accessories" on page 53.

External cable terminals Cu/Al P160


| | Cross section rigid/flexible | Tightening torque |
|---------|-----------------------------------------------------|-------------------|
| 1 wire | 35...120 mm ² 35...95 mm ² | 25 Nm |
| 6 wires | 4...25 mm ² 4...16 mm ² | 3 Nm |

External cable terminals Cu/Al P250

| | Cross section rigid/flexible | Tightening torque |
|---------|------------------------------------------------------|-------------------|
| 1 wire | 50...185 mm ² 50...185 mm ² | 25 Nm |
| 2 wires | 35...120 mm ² 35...95 mm ² | 25 Nm |
| 6 wires | 6...35 mm ² 6...35 mm ² | 6 Nm |


External cable terminals Cu/Al P630

| | Cross section rigid/flexible | Tightening torque |
|---------|------------------------------------------------------|-------------------|
| 1 wire | 35...300 mm ² 35...300 mm ² | 25 Nm |
| 2 wires | 35...300 mm ² 35...300 mm ² | 25 Nm |

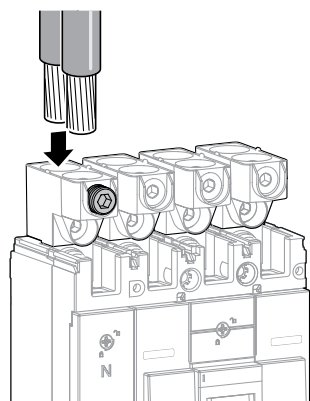

2 wires cable terminal P630


Rear connection

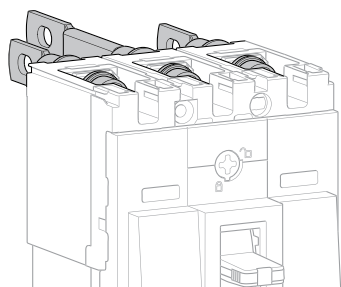

Rear connection P160

The h3+ circuit breakers can be fitted with rear connections. Rear connections are suitable for bars or cables with lugs. Bars may be positioned horizontally, vertically or at a 45° angle. The rear connections are directly screwed to the device connection terminals.

Straight and spread bar extensions

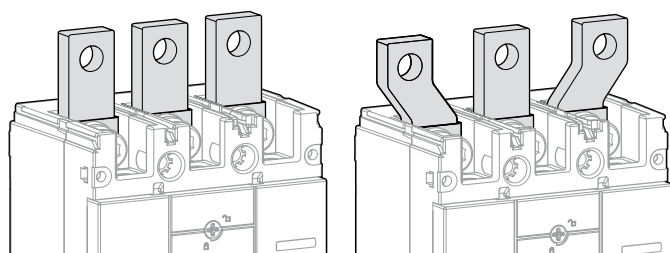

Bar extensions for P630

Straight bar extensions and spreader extensions are available separately with P160 (FTC / CTC) - P250 - P630 MCCBs. Spreader extensions are mainly used to increase the pitch of the MCCBs. Insulation accessories such as interphase barriers or terminal covers with insulation plates may be required. Please refer to "Insulation accessories" on page 53.





Insulation accessories

Insulation accessories may be required or even mandatory in some cases. This table gives the rules to be respected to ensure the insulation of the live parts around the h3+ circuit breakers.

| | Front connection | | | | Rear connection | Plug-in or withdrawable on back plate | Plug-in flush-mounted | |
|--------------------|-------------------------|---------------------|-------------|-----------------|--------------------------------------|---------------------------------------|----------------------------------|--------------------------|
| Accessories | No insulation accessory | Interphase barriers | Earth plate | Terminal covers | Terminal covers for rear connections | Terminal covers for MCCB | Terminal covers for plug-in base | Terminal covers for MCCB |





For operating voltage ≤ 500 V

Type of conductor

| | | | | | | | | | |
|-------------------------------------------------------------------------------------|--------------------------------------|----------|-------------|-----------|----------------------|-------------|-----------|-----------|-----------|
|  | Insulated bars or cables | Possible | Possible | Possible | Possible | - | - | - | - |
|  | Non insulated bars or ring lugs | No | Mandatory * | Possible | Mandatory for IP20 * | Recommended | Mandatory | Mandatory | Mandatory |
|  | Extension terminals | No | Mandatory * | Possible | Mandatory for IP20 * | - | - | - | - |
|  | Cables with external cable terminals | No | Mandatory * | Mandatory | Mandatory for IP20 * | - | - | - | - |












For operating voltage > 500 V

Type of conductor


| | | | | | | | | | |
|-------------------------------------------------------------------------------------|--------------------------------------|----|-------------|-----------|----------------------|-----------|-----------|-----------|-----------|
|  | Insulated bars or cables | No | Mandatory * | Possible | Possible | - | - | - | - |
|  | Non insulated bars or ring lugs | No | Mandatory * | Possible | Mandatory for IP20 * | Mandatory | Mandatory | Mandatory | Mandatory |
|  | Extension terminals | No | Mandatory * | Possible | Mandatory for IP20 * | - | - | - | - |
|  | Cables with external cable terminals | No | Mandatory * | Mandatory | Mandatory for IP20 * | - | - | - | - |

* fitted on top only if direct feeding / fitted on top and bottom if reverse feeding

Connection and compatibility chart

| | Collar terminal  | Straight terminal extension  | Spreader terminal extension  | Rear connection  | L connection  |
|--------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------|
| Terminal covers for straight connections  | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | - | - | - |
| Terminal covers for extended spreader  | - | - | <input checked="" type="checkbox"/> | - | - |
| Earth plates for straight terminal covers  | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | - | - | - |
| Earth plates for spreader terminal covers  | - | - | <input checked="" type="checkbox"/> | - | - |
| Terminal covers for rear connection or lug-in  | - | - | - | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| Interphase barriers  | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | - | - |


Interphase barriers

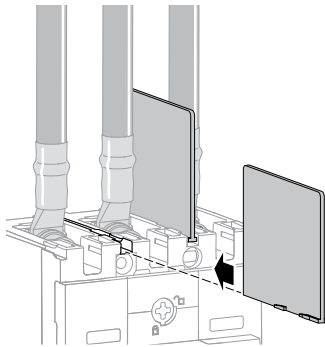

Interphase barriers P160

4 (for 3P) or 6 (for 4P) interphase barriers are delivered with the MCCB. They are compatible with the external cable terminals. Interphase barriers are also separately available.


Straight terminal covers

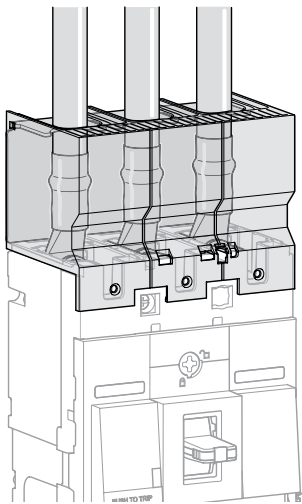

Straight cover

P160, P250 and P630 MCCBs can be fitted with straight terminal covers when used with cables with lugs or straight bars. The straight terminal covers provide internal separation between phases. They are available in one size for both the P160, P250 and P630 circuit breakers.


Spreader terminal covers

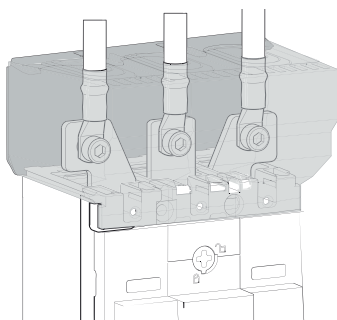


Spreader cover

P160, P250 and P630 MCCs can be fitted with spreader terminal covers when spreader extensions are fitted. They ensure an insulation between phases too.

Insulation plates

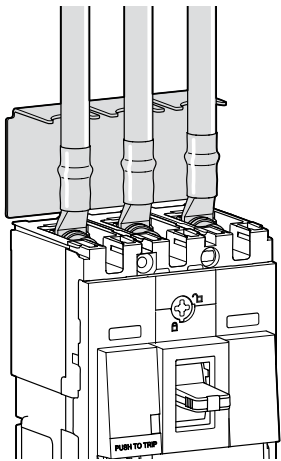


Insulation plate

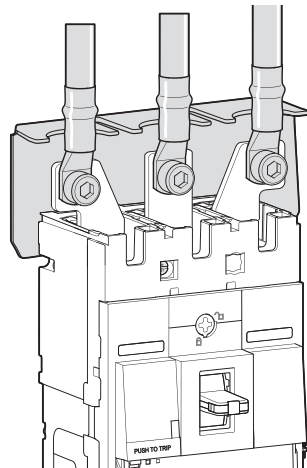

Insulation plate for spreaders

Rear insulation plates provide complete insulation of the connections from the back.


Front covers for rear and plug-in connections

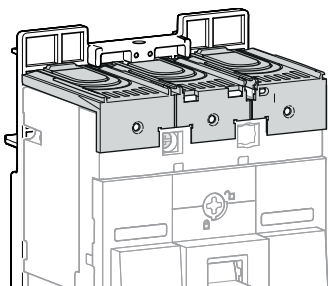

Front cover

P160, P250 and P630 circuit breakers can be fitted with terminal covers to ensure insulation on front connections in case of use when rear connections or plug-in are fitted.

These covers provide an IP40 protection degree. They can be mounted after the circuit breaker's installation on a back plate or a DIN rail. They are sealable.

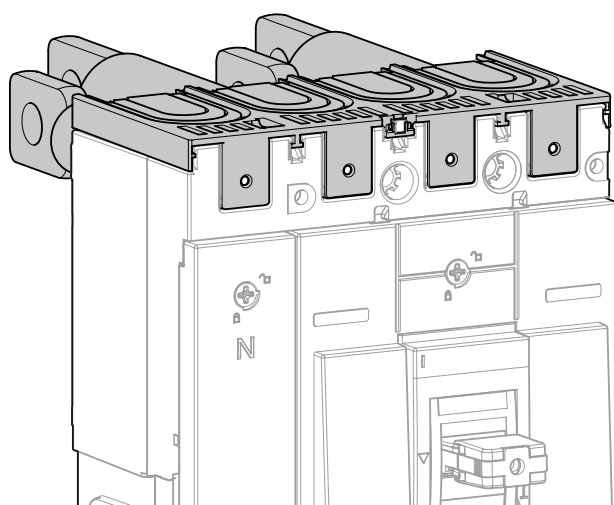

Front cover

Selection of auxiliaries

All MCCBs share the same internal auxiliaries. The installation of the auxiliaries is simple and does not require any specific tool.

P160-P250 and P630 MCCBs have internal locations dedicated to the mounting of the following electrical auxiliaries.

P160

- 1 AX ON/OFF
- 1 AL trip indication
- 1 UVR / UVR with delay or 1 SHT


P250

- 2 AX ON/OFF
- 1 AL trip indication
- 1 UVR / UVR with delay or 1 SHT


P630

- 4 AX ON/OFF
- 2 AL trip indication
- 1 UVR / UVR with delay or 1 SHT


Location of auxiliaries P160 - P250

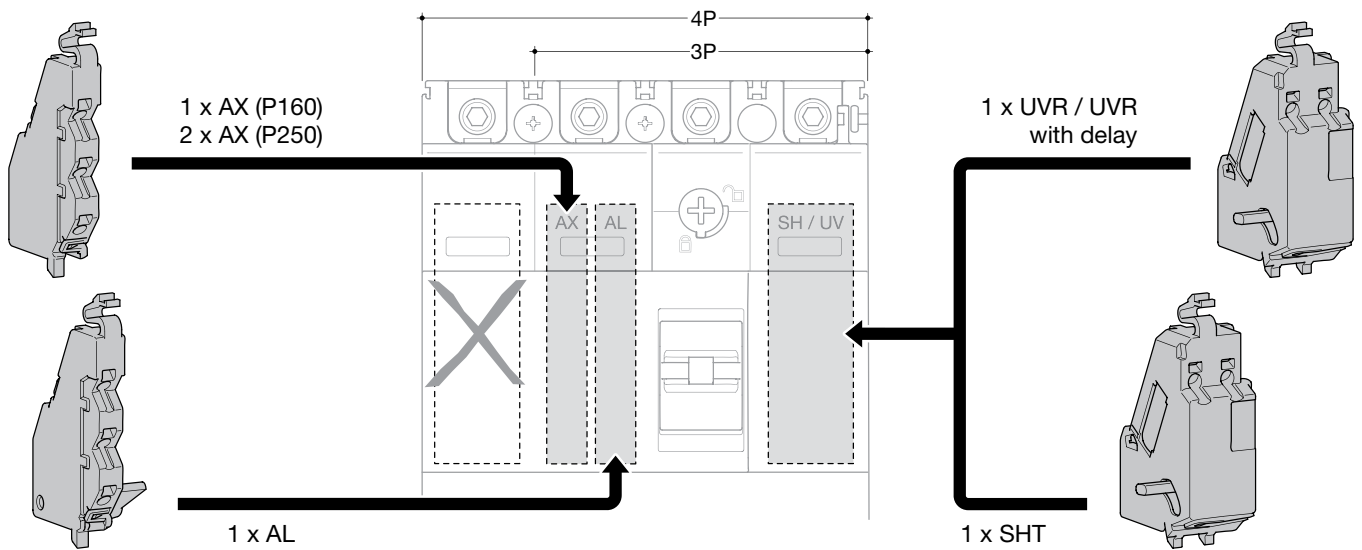

Location of auxiliaries P630

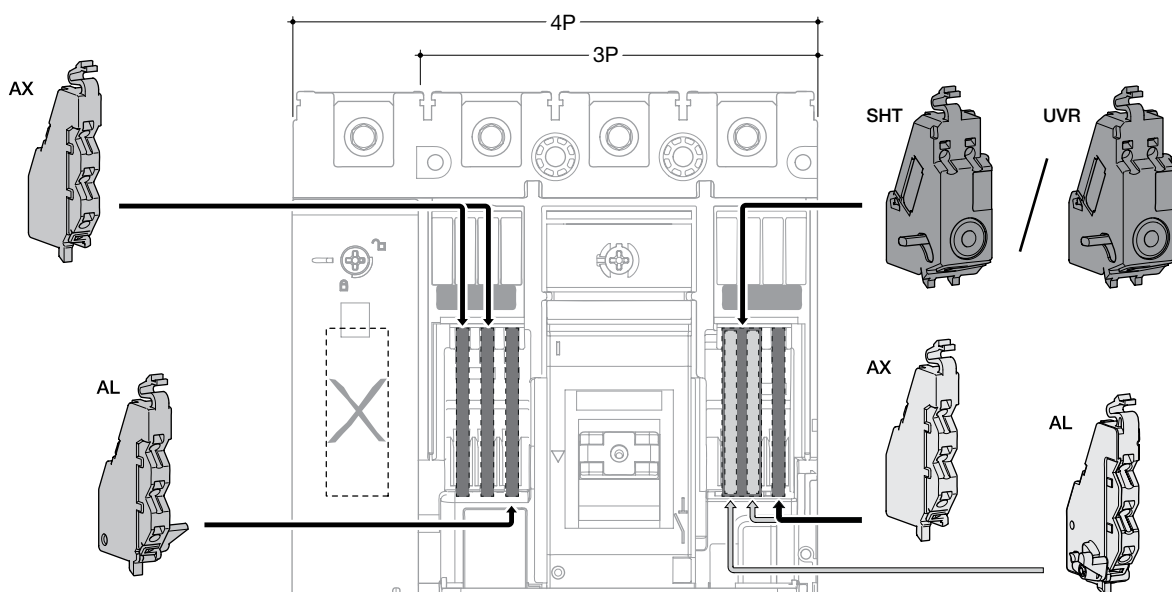


Connection of auxiliaries

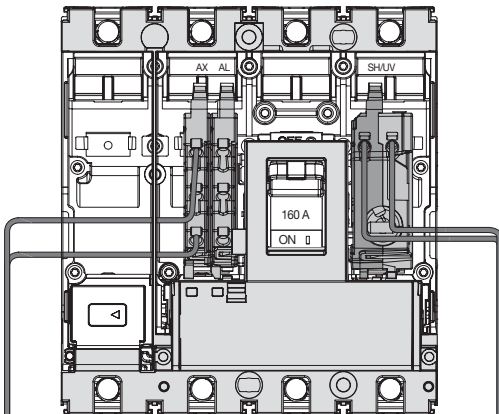

Auxiliary cabling on TM MCCB


The maximum wire cross section is 1.25 mm² for auxiliary contacts (AX or AL), shunt trip releases SHT or undervoltage releases UVR. These auxiliaries are fitted with spring terminals. It is recommended to route the wires from the inside to the outside of the circuit breaker, under the front auxiliary cover, in the following way.

The AX/AL - Energy dedicated to the Energy MCCB is fitted with prewired contacts.

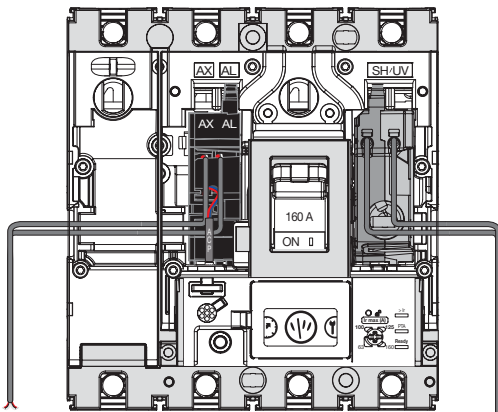

Auxiliary cabling on Energy MCCB

AX auxiliary and AL alarm indication contacts

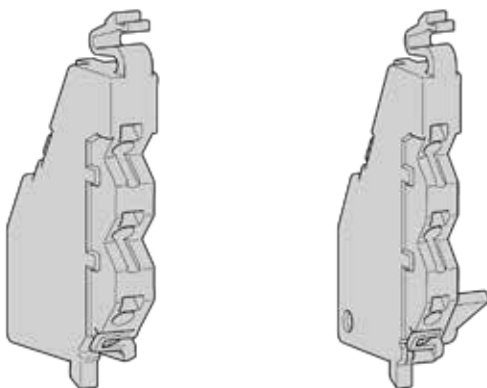

AX auxiliary

AL auxiliary

Indication contacts provide remote information of the circuit breaker status and can thus be used for indications, electrical locking, relays, etc. They are NO.NC contacts.

AX contacts indicate the position Open/Closed of the circuit breaker contacts.

AL contacts indicate that the circuit breaker has tripped due to:

- An electrical fault (overload, short circuit).
- The operation of a shunt trip release or an undervoltage release.
- The “push-to-trip” button operation.

AL contacts reset when the circuit breaker is reset.

Installation and connection



Left side Auxiliary P160

The AX and AL contacts have dedicated locations behind the front cover of the circuit breaker and their presence is visible from the front face through an Auxiliary window.

Each spring terminal may be connected by one 0.5...1.25 mm² flexible or rigid wire.

Electrical characteristics


Operational current for AX and AL:

- 250 V / AC-14 = 3 A
- 250 V / AC-15 = 1 A
- 125 V / DC-12 = 0.4 A

Operational current for low-level AX and AL:

- 30 V / DC-12 = 0.1 A

SHT shunt trip and UVR undervoltage release coils

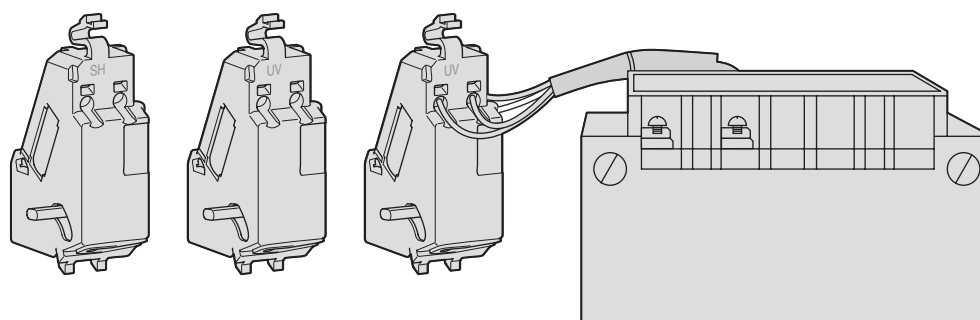

SHT and UVR

A shunt trip or an undervoltage release coil can be used to trip the circuit breaker using a control signal. They are for a remote tripping of the circuit breaker.

A SHT shunt trip release coil trips the circuit breaker when the control voltage rises above 70 % of its rated nominal voltage (Un). It is an impulse signal (> 20 ms) or a maintained control signal.

Shunt trip release 110...130 V~ is suitable for ground-fault protection when combined with a Class I ground-fault sensing element.

A UVR undervoltage release trips the circuit breaker when the control voltage drops below 70 % to 35 % of its rated voltage.

A delayed UVR undervoltage release coil eliminates the risk of nuisance tripping due to a transient drop voltage lasting less than 500 ms. For shorter micro-outages, a system of capacitors provides temporary supply to the UVR at $U > 0.7 U_n$ to ensure non tripping.

Electrical characteristics

SHT

| | | | | | | |
|----------------------------------|--------|-------------|---------|-------------|------------|------------|
| Operating voltage | Un | 24 V DC | 48 V DC | 100-120 V~ | 200-240 V~ | 380-450 V~ |
| Operating range | | 75-125 % Un | | 85-110 % Un | | |
| Exciting current | mA | 30.0 | 30.0 | 14.0 | 14.0 | 6.50 |
| Power consumption | VA | 0.72 | 1.44 | 1.68 | 3.36 | 2.93 |
| Electrical endurance at 415 V AC | cycles | 6000 | 6000 | 6000 | 6000 | 6000 |
| Mechanical endurance ON/OFF | cycles | 15000 | 15000 | 15000 | 15000 | 15000 |

UVR

| | | | | | |
|----------------------------------|--------|-------------------------|------------|------------|------------|
| Operating voltage | Un | 24 V DC | 100-120 V~ | 200-240 V~ | 380-450 V~ |
| Closing voltage | | > 85 % Un | | | |
| Release voltage | | 70 % Un > ... > 35 % Un | | | |
| Opening voltage | | < 35 % Un | | | |
| Exciting current | mA | 23.0 | 12.0 | 6.3 | 5.2 |
| Power consumption | VA | 0.56 | 1.4 | 1.5 | 2.3 |
| Electrical endurance at 415 V AC | cycles | 6000 | 6000 | 6000 | 6000 |
| Mechanical endurance ON/OFF | cycles | 15000 | 15000 | 15000 | 15000 |

UVR with delay

| | | | | | |
|----------------------------------|--------|-------------------------|--------|--------|--------|
| Operating voltage | Un | 24 V DC | 110 V~ | 240 V~ | 440 V~ |
| Closing voltage | | > 85 % Un | | | |
| Release voltage | | 70 % Un > ... > 35 % Un | | | |
| Opening voltage | | < 35 % Un | | | |
| Delay | ms | 500 | | | |
| Exciting current | mA | 23.0 | 12.0 | 6.3 | 5.2 |
| Power consumption | VA | 0.56 | 1.4 | 1.5 | 2.3 |
| Electrical endurance at 415 V AC | cycles | 6000 | 6000 | 6000 | 6000 |
| Mechanical endurance ON/OFF | cycles | 15000 | 15000 | 15000 | 15000 |

Installation and connection



Right side Auxiliary window P160


The SHT and UVR releases have dedicated locations behind the front auxiliary cover of the circuit breaker and their presence is visible on the front through an Auxiliary window. On P630 MCCBs, the presence of the internal auxiliaries is identified by a sticker that needs to be placed in a dedicated location behind the auxiliary window. Each spring terminal may be connected by one flexible or rigid cable of 0.5...1.25 mm².

Operation

The circuit breaker must be reset locally after being tripped by the shunt trip or undervoltage release. Tripping by the shunt trip or undervoltage release has priority over manual closing. When a tripping command from a SHT or UVR coil is active, it is not possible to manually operate the circuit breaker and close the main contacts, even temporarily.


SHT and UVR endurance

100 % of the rated mechanical endurance of the circuit breaker.

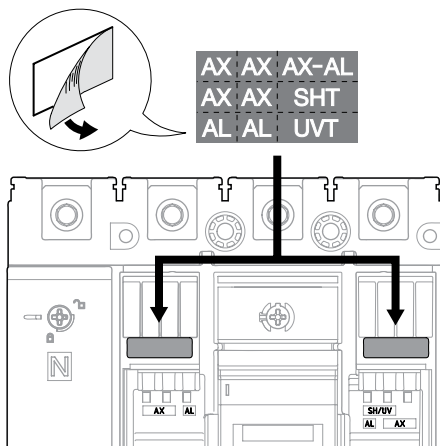

Internal auxiliaries identification on P630


Fixed on back plate

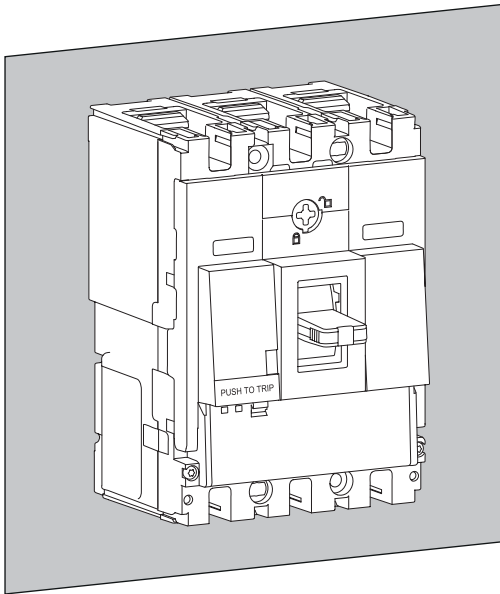

P160 on back plate

P160, P250 and P630 circuit breakers can be mounted as fixed device on a back plate.


DIN rail adaptor

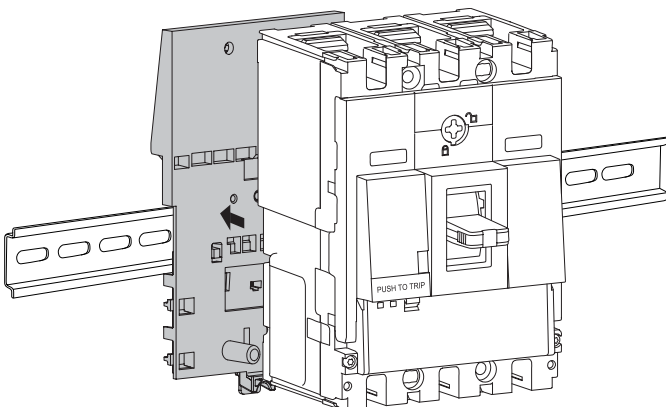


P160 and DIN rail adaptor

If needed, the P160 and the P250 circuit breakers can be mounted on a DIN rail with a specific accessory fitted on the back.


Plug-in system

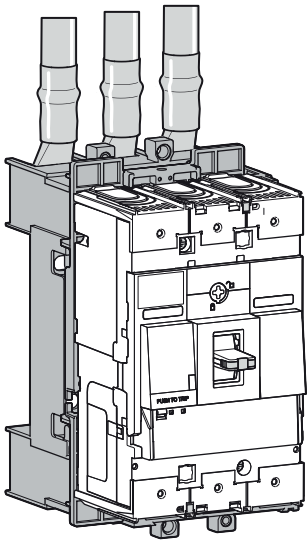


Plug-in for cables fitted with lug P250

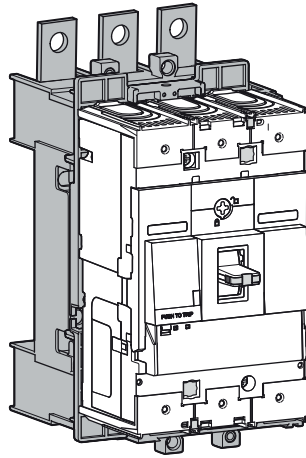


Plug-in with front terminal P250

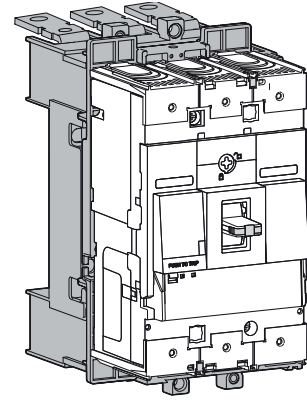

Plug-in with rear terminal P250

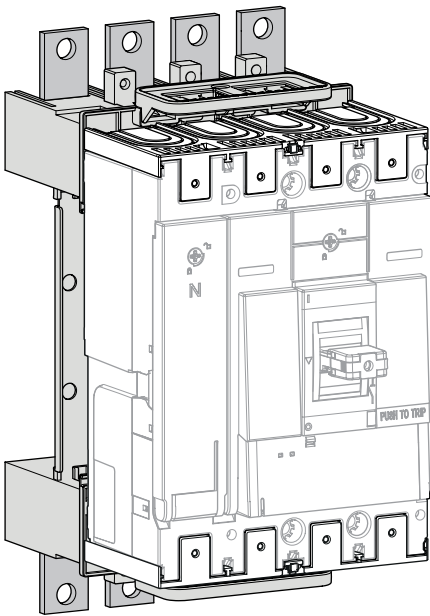

Plug-in P630 with front terminal P630

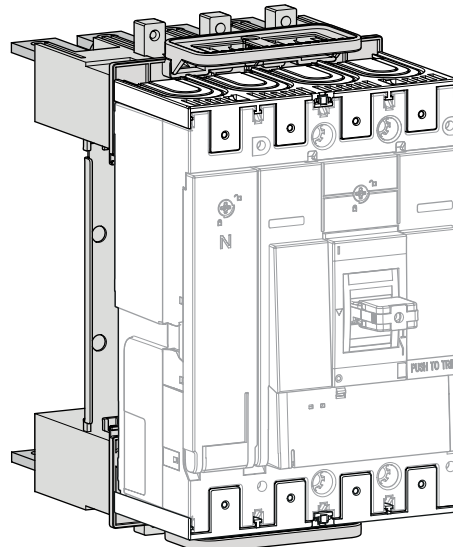

Plug-in with rear terminal P630

The plug-in system consists of an extraction mechanism directly mounted onto the circuit breaker and allows easy replacement of the device without removing the power conductors. The plug-in system ensures protection degree IP20 when the circuit breaker is removed.

The connection to the plug-in system of P160 and P250 can be done using cables fitted with lugs, front terminal extensions or rear terminals using the L connection that is separately available.

As for the P630 plug-in system, the connection is done using either front terminal extensions or rear terminals using the L connection.


The circuit breaker fitted with the plug-in system can be mounted in both vertical and horizontal positions.

The plug-in kit is composed of several accessories:


- Plug-in base
- Plug-in circuit breaker fitted with safety trip

Also available as an option:


- Auxiliary connectors
- Safety trip
- Front and rear connection terminals cables or bars

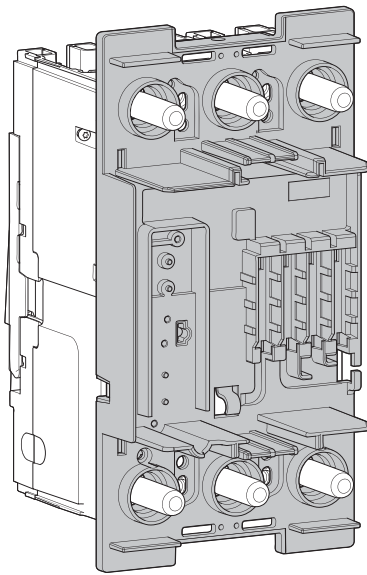

P250 Plug-in circuit breaker adaptor

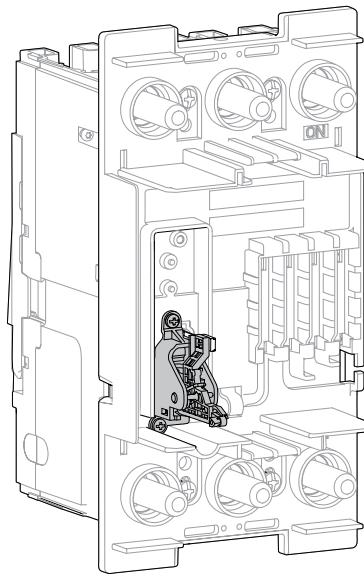

P250 Plug-in circuit breaker adaptor fitted with safety trip

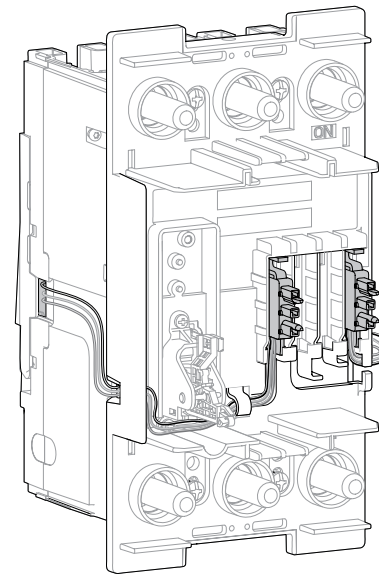

P250 Plug-in circuit breaker adaptor fitted with internal auxiliaries


Auxiliary contact:

Up to three auxiliary connectors can be mounted onto the plug-in of the P160. As for the P250 and P630, four connectors can be mounted on its plug-in accessory. The connectors are used to automatically connect or disconnect the internal AX/AL auxiliary contacts, the shunt trip or the undervoltage auxiliaries that are fitted inside the circuit breaker.

Safety trip:

For P160, P250 and P630 plug-in systems, a safety trip accessory is supplied and can be mounted on the plug-in base to trip the circuit breaker when removed without having been set to the OFF position.

Plug-in system: Front or rear connection terminals

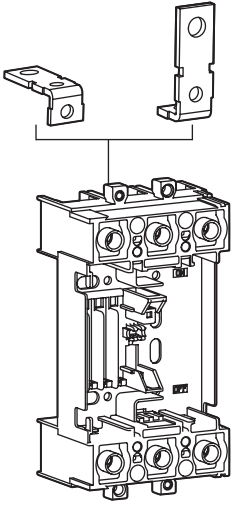


Plug-in base


Separate front or rear connection terminals can be mounted onto the base depending on the connection arrangement needed.

The plug-in base can be mounted on a back plate, a back U-plate or a flush mounting plate.


It is delivered with two isolating shields if mounting is on a plain metallic back plate.

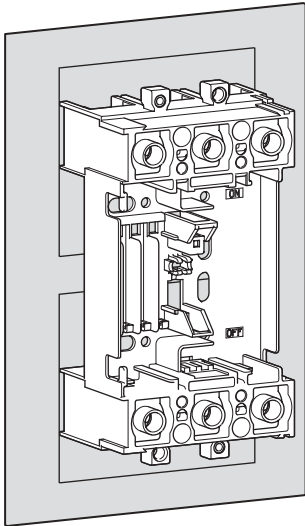

Plug-in on back plate

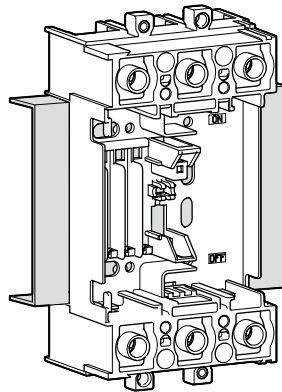


Plug-in on U-plate

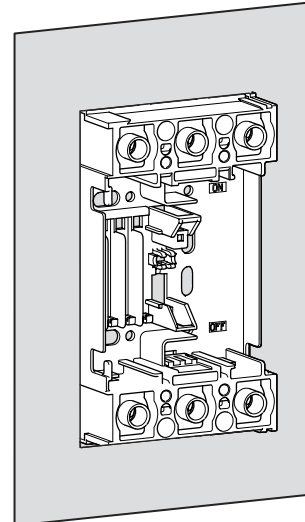


Plug-in flushmounted

Withdrawable system

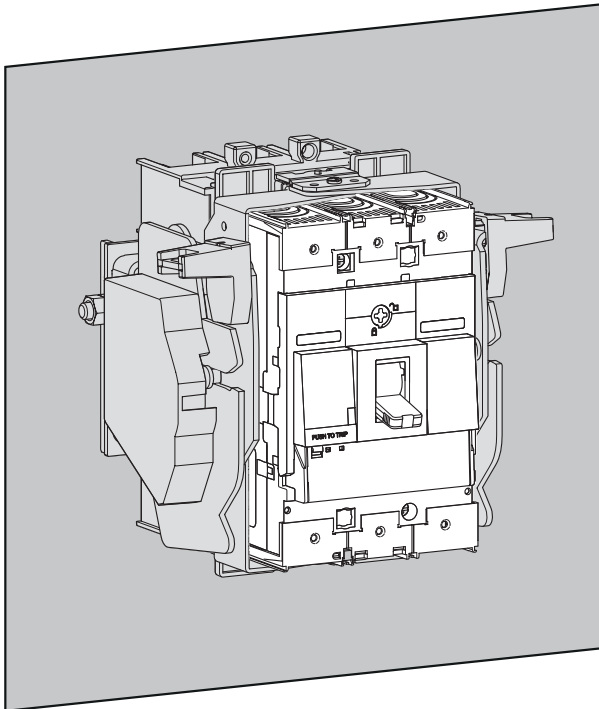

P250 withdrawable

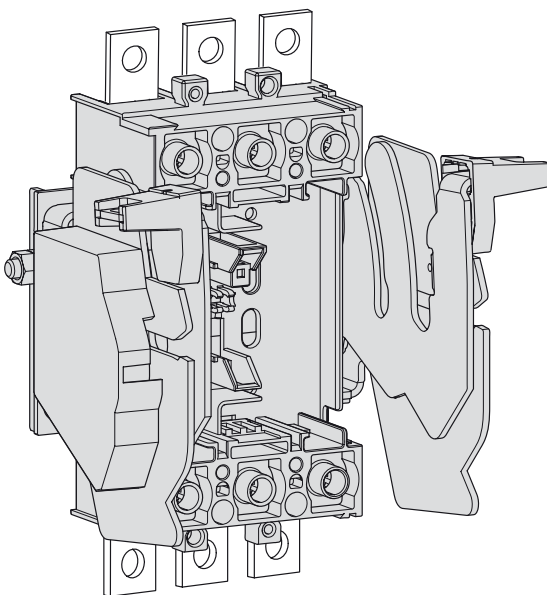

Withdrawable base P250

Based on the P250 plug-in system, the withdrawable system allows easy handling of the circuit breaker. It permits its disconnection without having to remove it completely from the installation.

The withdrawable system is compatible with circuit breakers mounted in a vertical position only.

The withdrawable system has 3 positions:

- Connected: the power circuit is connected.
- Disconnected: the power circuit is disconnected; the MCCB is isolated and can be operated to check auxiliary operation.
- Removed: the MCCB is detached and can be removed from the installation.

The withdrawable kit is composed of the following parts:

- Chassis,
- Plug-in circuit breaker adaptor fitted with driving case.

Also available as an option:

- Auxiliary connectors
- Safety trip
- Position switch
- Front connection terminals

The withdrawable adaptor must be mounted to the back of the MCCB.


Up to 5 auxiliary connectors can be mounted onto the plug-in to automatically connect and disconnect the internal AX/AL, shunt trip or undervoltage auxiliaries fitted into the MCCB.

As an option, a safety trip accessory can be mounted onto the withdrawable system. This option trips the MCCB when it is removed from the base without it having been set to the OFF position.

As an option, a position switch can be mounted on the withdrawable adaptor to indicate through an auxiliary circuit the connected or disconnected position of the MCCB into the withdrawable base. The withdrawable base is not supplied with terminal connections. Separate front or rear bar terminals can be mounted onto the base depending on the connection arrangement needed.

It is delivered with two isolating shields in case it needs to be mounted on a metallic back plate.

Withdrawable system

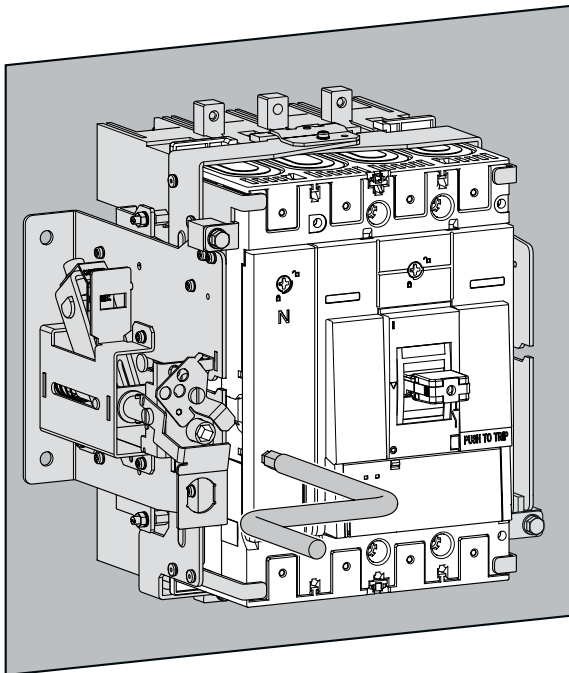

Based on the P630 plug-in system, the withdrawable system allows easy handling of the circuit breaker. It permits its disconnection without having to remove it completely from the installation.

The withdrawable system is compatible with circuit breakers mounted in a vertical position only.

The withdrawable system has 3 positions:

- Connected: the power circuit is connected.
- Disconnected: the power circuit is disconnected; the MCCB is isolated and can be operated to check auxiliary operation.
- Removed: the MCCB is detached and can be removed from the installation.


The withdrawable kit is composed of the following parts:

- Chassis,
- Plug-in circuit breaker adaptor fitted with driving case.

Also available as an option:

- Auxiliary connectors
- Safety trip
- Position switch
- Front connection terminals

P630 withdrawable

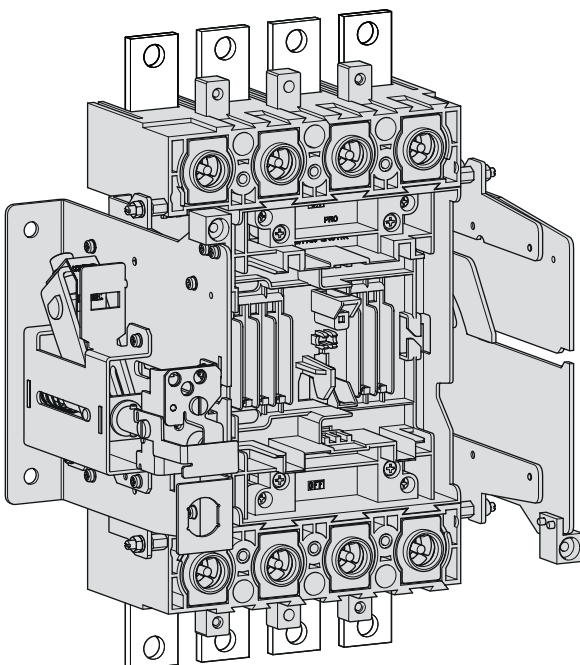

Withdrawable base P630

The withdrawable adaptor must be mounted to the back of the MCCB.


Up to 5 auxiliary connectors can be mounted onto the plug-in to automatically connect and disconnect the internal AX/AL, shunt trip or undervoltage auxiliaries fitted into the MCCB.

As an option, a safety trip accessory can be mounted onto the withdrawable system. This option trips the MCCB when it is removed from the base without it having been set to the OFF position.


As an option, a position switch can be mounted on the withdrawable adaptor to indicate through an auxiliary circuit the connected or disconnected position of the MCCB into the withdrawable base. The withdrawable base is not supplied with terminal connections. Separate front or rear bar terminals can be mounted onto the base depending on the connection arrangement needed.

It is delivered with two isolating shields in case it needs to be mounted on a metallic back plate.

Direct rotary handles

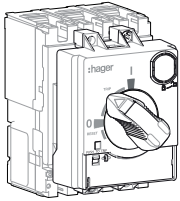

Rotary handle P160

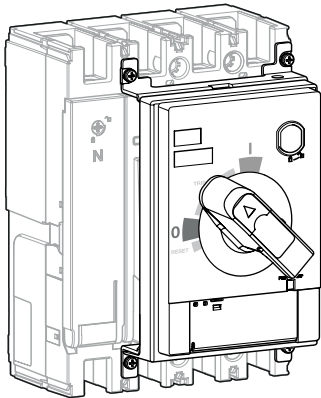

Rotary handle P630

Direct rotary handle features:

- Suitable for insulation,
- Clear indication of the 3 positions: ON, OFF and TRIP,
- Circuit breaker built-in "PUSH TO TRIP" test button accessible on the direct rotary handle,
- Trip unit dial settings accessible through the direct rotary handle,
- Integrated padlocking facility. Keylock as an option.
- ¼ turn screws to ease the mounting in front of P160-P250 MCCBs and facilitate the access to the internal auxiliary contacts.


The circuit breaker can be locked in ON or OFF positions with one to three padlocks (not supplied). Padlock shackle: Ø 5.5 - 8 mm.

Locking in ON position does not prevent the circuit breaker from tripping when there is a fault. In this case, when the circuit breaker trips the handle is on TRIP position. To reset, it is necessary to unlock the direct rotary handle.


A different direct rotary handle providing the door interlocking function is available to prevent the door opening when the circuit breaker is in the ON position.

A Ronis type keylock is available as an option to mount on the direct rotary handle base. The keylock ensures the circuit breaker locks in both OFF or ON positions or only in OFF position.

On door rotary handles

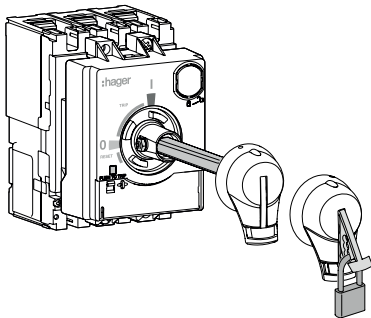

P160 on door rotary handle

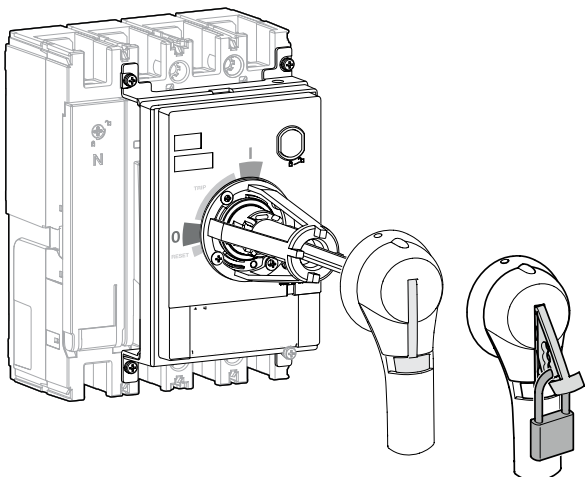

P630 on door rotary handle

On door rotary handle features:


- Suitable for insulation,
- Clear indication of the 3 positions: ON, OFF and TRIP,
- Circuit breaker built-in "PUSH TO TRIP" test button accessible on the base fitted directly onto the circuit breaker,
- Trip unit dial settings accessible through the base,
- Integrated padlocking facility. Keylock as an option to mount on the base.
- ¼ turn screws to ease the mounting in front of P160-P250 MCCBs and facilitate the access to the internal auxiliary contacts.

The circuit breaker can be locked in OFF position with one to three padlocks (not supplied). Padlock shackle: Ø 5.5 - 8 mm.


It is necessary to unlock the extended rotary handle in order to reset the circuit breaker after tripping.

A Ronis type keylock is available as an option to mount on the base fitted directly onto the circuit breaker. The keylock ensures the circuit breaker locks in both OFF or ON positions.

Motor operator

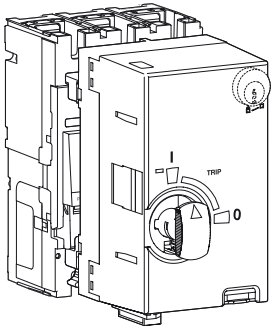

Motor operator P250

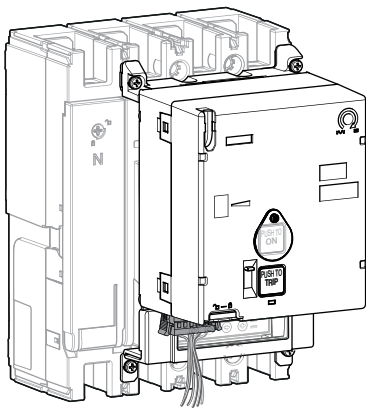

Motor operator P630

Applications:


The motor operator allows to remote a P250 or a P630 circuit breaker. It allows to centralize or perform automatic control of the energy distribution or perform any operation without intervening locally on the circuit breaker such as changing the source, load shedding, coupling...

- The motor operator has a manual control for local operation in the ON or OFF position of the circuit breaker.
- The motor operator can be locked in the OFF position using a padlock as standard and is also available as an option with a key lock.
- Two motor operator versions are available: with or without automatic reset.
- The auto-reset allows the circuit breaker to be reset to the OFF position automatically after a trip. Equipped with this function, the motor operator returns the automatic circuit breaker from the TRIP position to the OFF position.

Motor operator features:

- Tool-free installation with ¼ turn levers for P250 motors,
- Fast operation (<100 ms),
- Position contact indication,
- Suitable for insulation,
- Locking in OFF position with padlock as standard,
- Locking in OFF position with optional key lock,
- With or without automatic reset function (different versions),
- Voltage presence indication,
- Electrical interlocking (optional).

A label showing the circuit breaker characteristics can be stuck in front of the motor operator (supplied as standard).

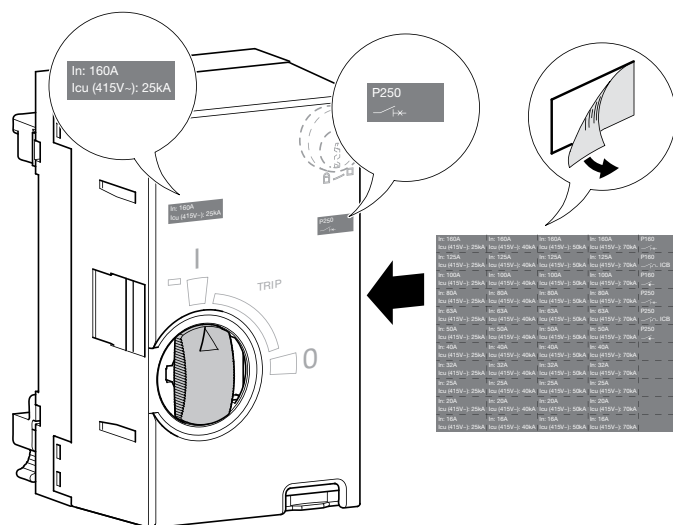


Marking stick on Motor operator

Motor operator with auto-reset mode

An auto-reset motor operator version allows automatic resetting of the circuit breaker after tripping.

Remote command

The remote command circuit is based on an ON and OFF signal with a screwless terminal that is compatible with cables up to 2 mm².

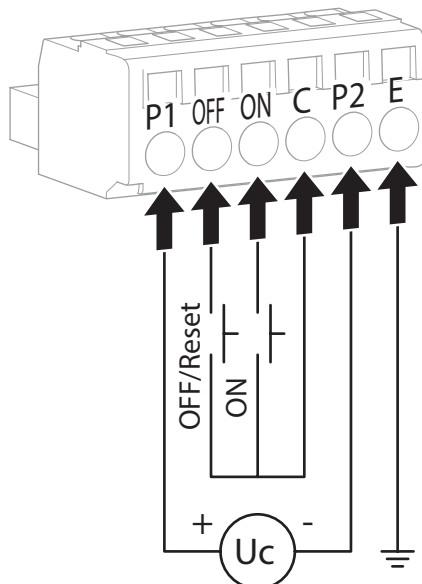

Terminal Motor operator

For P250 motors

| Rated operating voltage | Un | 24 V DC | 48 V DC | 100-110 V DC | 200-220 V DC | 100-110 V AC | 200-220 V AC | 230-240 V AC |
|-------------------------------------------------|--------------|--------------|-----------|--------------|--------------|--------------|--------------|--------------|
| Frequency | Hz | - | - | - | - | 50/60 | 50/60 | 50/60 |
| Operating current / Starting current Peak value | A | 14.1/26.5 | 11.4/17.1 | 3.4/7.6 | 4.2/5.9 | 3.6/8.7 | 3.6/6.6 | 3.4/6 |
| Operating method | | Direct drive | | | | | | |
| Operating time | ON | ms | <100 | | | | | |
| | OFF | ms | <100 | | | | | |
| | RESET | ms | <100 | | | | | |
| Operating frequency | Cycle / min. | 4 | | | | | | |
| Power supply required | VA | >300 | | | | | | |

For P630 motors

| Rated operating voltage | Un | 24-48 V DC | 100-120 V DC | 100-240 V AC |
|-------------------------------------------------|--------------|--------------|--------------|--------------|
| Frequency | Hz | - | - | 50 / 60 |
| Operating current / Starting current Peak value | ON | A | - | - |
| | OFF, RESET | A | 6.7 | 1.0 |
| Operating method | | Direct drive | | |
| Operating time | ON | s | 0.1 | |
| | OFF | s | 1.4 | |
| | RESET | s | 1.5 | |
| Operating frequency | Cycle / min. | 4 | | |
| Power supply required | VA | 300 min. | | |

ON and OFF command is available with the following power supply:

- 24 V DC
- 48 V DC
- 100-120 V AC/DC
- 200-220 V AC/DC
- 230-240 V AC


Plug-in and withdrawable mounting accessories are compatible with the P250 circuit breaker fitted with an electrical motor operator.

- Accessories available as an option:
- Keylock for locking in the OFF position,
- Electrical interlocking.


Locking system

Padlocking systems can be fitted with up to three shackle padlocks with diameters of 5 to 8 mm. Locking in the OFF position ensures isolation and compliance to the IEC 60947-2 standard.


| Device | Function | Means | Specific accessory |
|------------------------|----------------------------------------|------------------|--------------------------|
| Standalone MCCB | Lock in OFF or ON position | Padlock | - |
| | | Cable tie | - |
| | | Up to 3 padlocks | Palocking kit |
| Direct rotary handle | Lock in OFF or ON position | Up to 3 padlocks | - |
| | Lock in OFF or ON position | Keylock | Locking device + keylock |
| Extended rotary handle | Lock in OFF position | Up to 3 padlocks | - |
| | Lock in ON or OFF position | Keylock | Locking device + keylock |
| Motor operator | Lock in OFF position | Up to 3 padlocks | - |
| | | Keylock | Locking device + keylock |
| Drawout | Lock in DISCONNECT or CONNECT position | Up to 3 padlocks | - |
| | | Keylock | Locking device + keylock |
| | Lock only in CONNECT position | Keylock | Locking device + keylock |

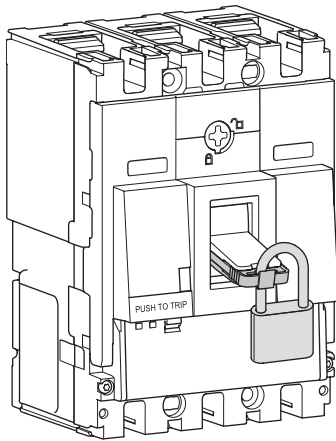


Direct with 4 mm shackle padlock

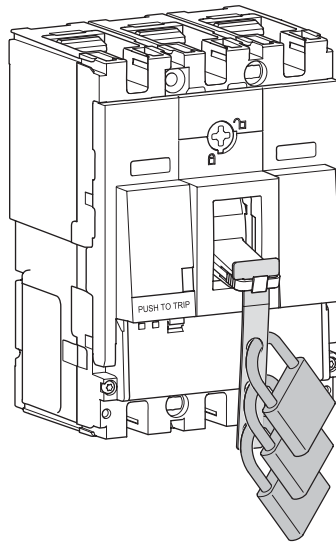


Padlocking kit with three pieces of up to 6 mm shackle padlocks

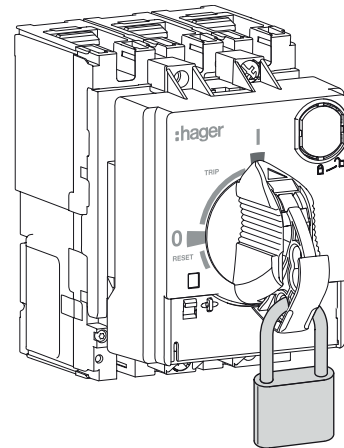


Padlock direct rotary handle

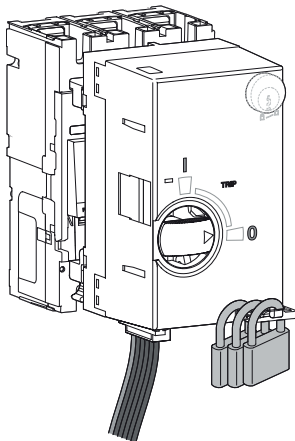


Padlock motor operator

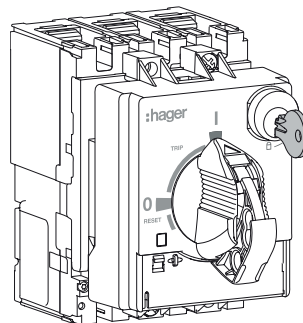


Key lock direct rotary handle

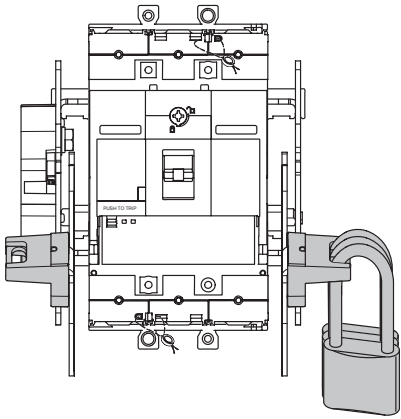


Key lock motor operator P250

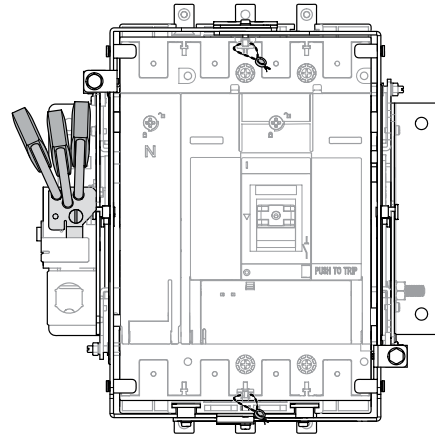


Key lock withdrawable P630

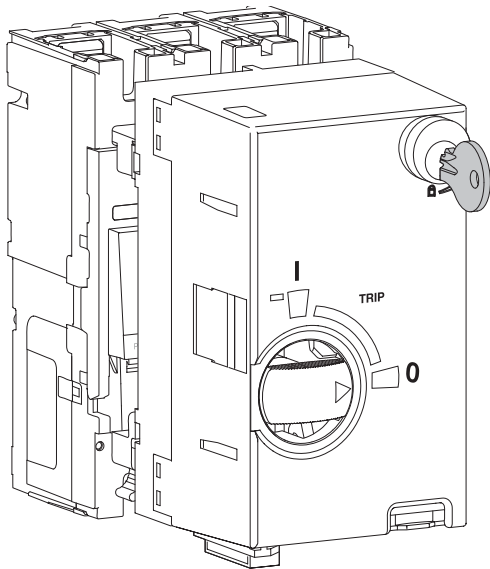

Key lock motor operator P250

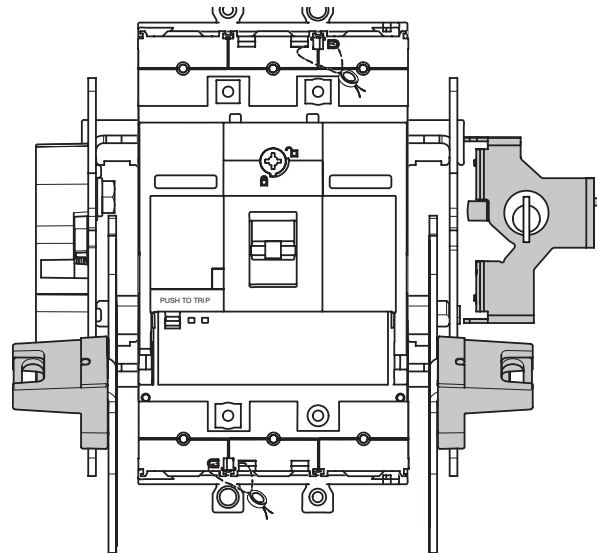

Key lock withdrawable P250

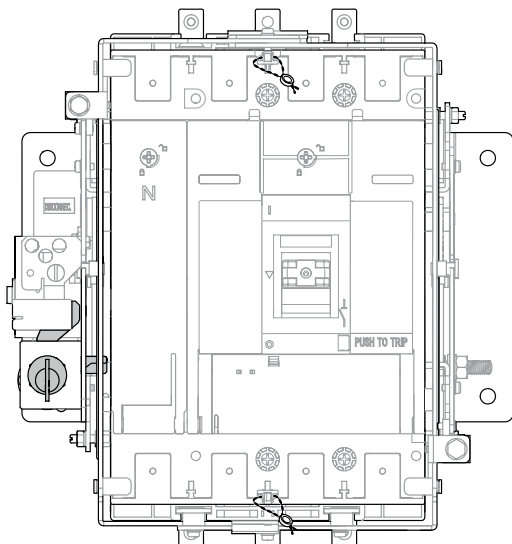


Key lock withdrawable P630


Sealing

A sealing accessory is available on request. Each sealing kit contains all parts necessary to seal the circuit breakers as indicated below.

Circuit breaker

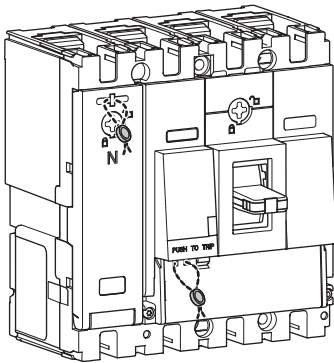


Seals on front covers

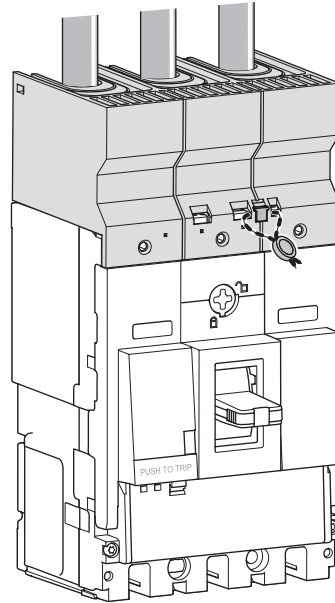


Seal on terminal cover P160

Direct rotary handle

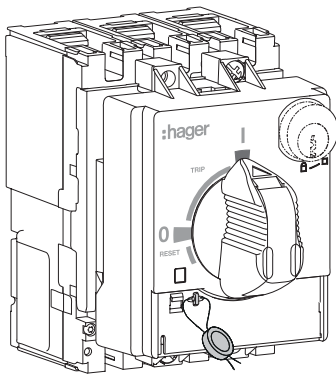


Seal on front cover rotary handle P160

RCD add-on block

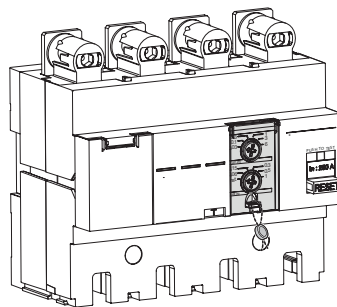

Seal on RCD add-on block

Link interlock

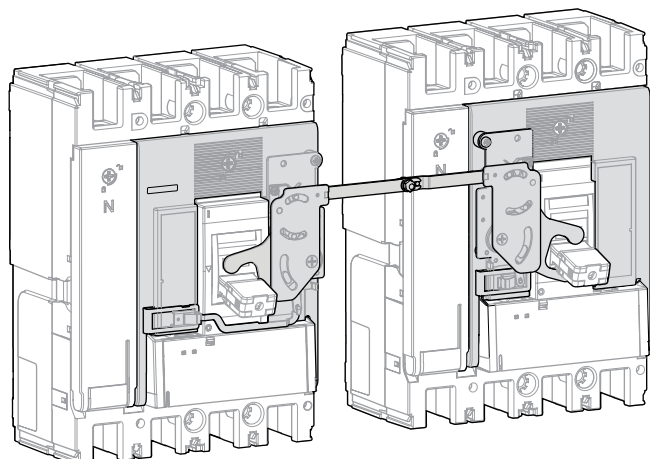


This solution is a connecting rod to make a link between two h3+ MCCBs of the same frame size mounted side by side.

This accessory interlocks mechanically two circuit breakers in order to prevent from the following operations:

- Switch ON a circuit breaker when the other one is already in ON position
- Switch ON a circuit breaker when the other one is in TRIP position.

The link interlock accessory is a set of two link interlock front covers that shall be mounted on the front side of the interlocked circuit breakers

Cable interlock

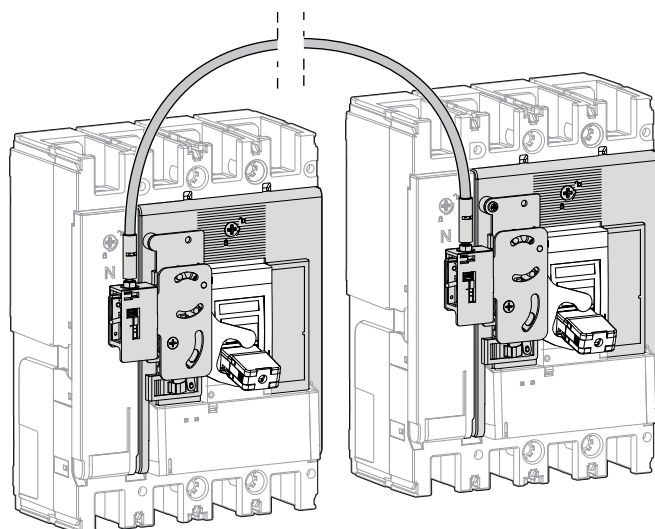

This solution allows two h3+ MCCBs of the same or different frame sizes to be interlocked.


Both circuit breakers don't necessary need to be of the same size nor mounted side by side thanks to the interlocking cable.

This accessory interlocks mechanically two circuit breakers in order to prevent from the following operations:


- Switch ON a circuit breaker when the other one is already in ON position
- Switch ON a circuit breaker when the other one is in TRIP position.

Three accessory references are needed to realise the cable interlock solution


- The mechanical interlocking front cover for each MCCB. It is mounted on the circuit breaker.
- The cable available in 1 m or 1.5 m.

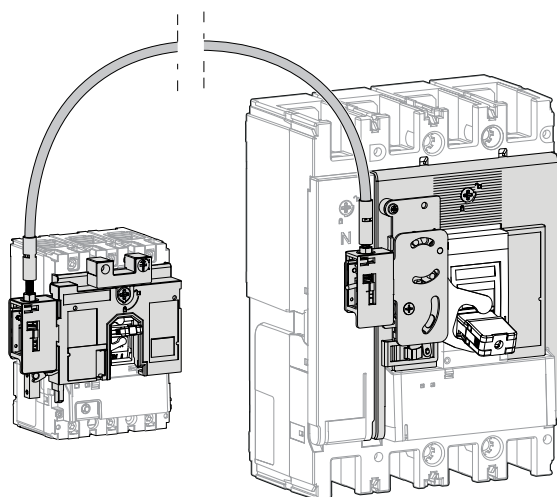


Interlocking combined with rotary handles

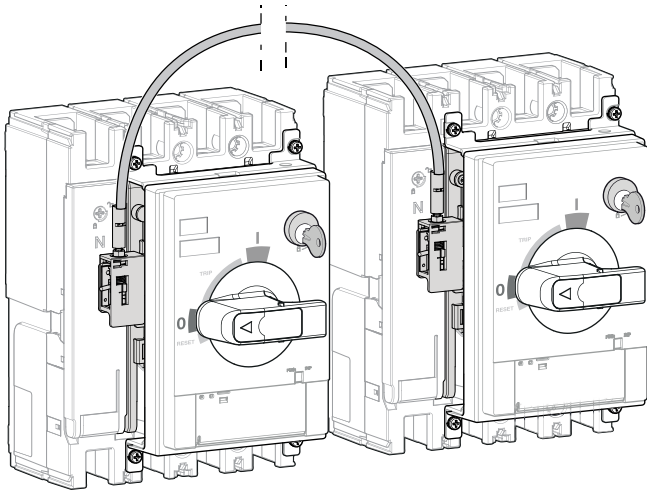

Cable interlocking solution is compatible with direct and on-door rotary handles.
Operating the MCCBs is done using the rotary handle mechanism.
Interlocking solutions are compatible with direct and on-door rotary handles.

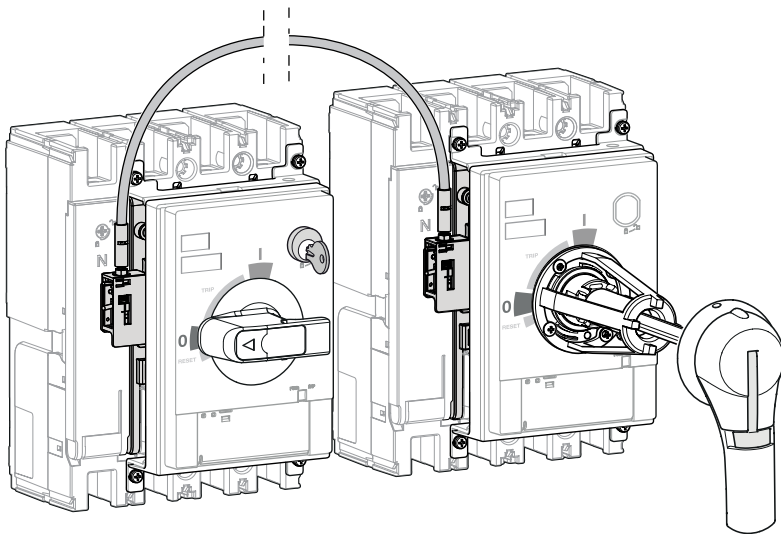


Link interlocking combined with motor operators

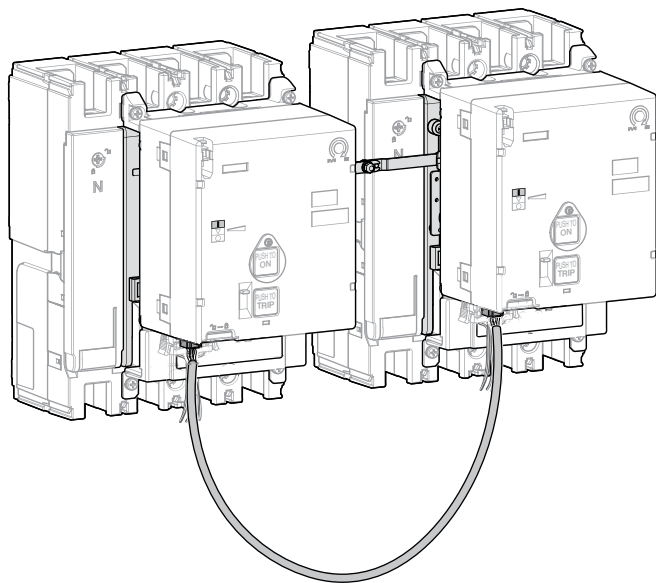

This solution is a solid connecting rod to make a link between two h3+ MCCBs of the same frame size mounted side by side.

In this case, in addition to the mechanical interlocking, it is mandatory to use the electrical interlock accessory in order to secure the complete interlocking system.

Cable interlocking combined with motor operators

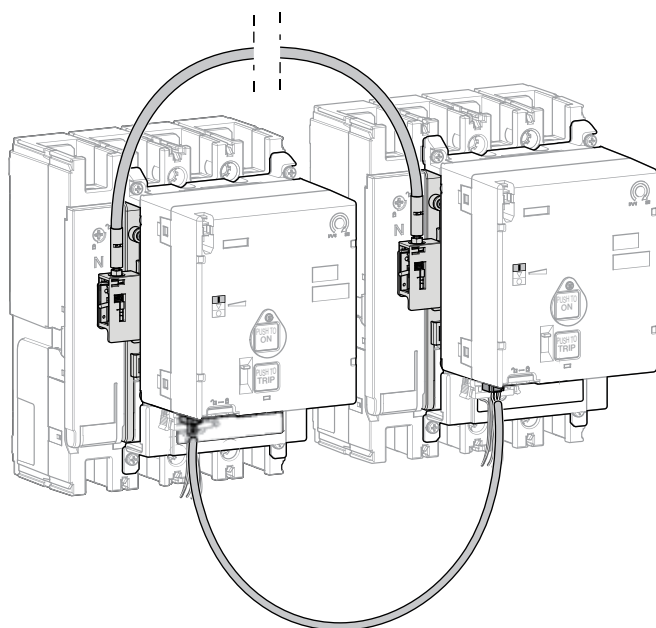

This solution allows the interlocking of two h3+ MCCBs using a cable.

The MCCBs can be of different frame sizes and not necessarily located next to each other. Two cable lengths are proposed to increase the flexibility of the installation.

In this case, in addition to the mechanical interlocking, it is mandatory to use the electrical interlock accessory in order to secure the complete interlocking system.

Installation and operating recommendations

Page

| | |
|---------------------------------------------------|-----------|
| 01 Installation and operating conditions | 78 |
| 02 Safety clearances and minimum distances | 82 |
| 03 Power loss | 84 |

Altitude derating

Up to an altitude of 2000 m above sea level, there is no derating to apply on electrical properties of the h3+ P160 P250 and P630. Above 2000 m a reduction of the air density decreases the heat dissipation of the circuit breaker and downgrades the dielectric strength. A derating on electrical characteristics must be applied as indicated below to compensate this phenomenon.


The following table gives the corrections to apply for altitudes above 2000 m. The breaking capacities I_{cu} and I_{cs} remain unchanged.

| Altitude (m) | 2000 | 3000 | 4000 | 5000 |
|------------------------------------------------------|------|------|------|------|
| Dielectric withstand voltage (V) | 2500 | 2160 | 1900 | 1670 |
| U _i Insulation voltage (V) | 800 | 690 | 610 | 535 |
| Maximum operating voltage (V) | 690 | 600 | 525 | 460 |
| I _{th} Maximum thermal current (A) at 50 °C | 1 | 0.96 | 0.93 | 0.9 |

International protection marking

h3+ circuit breakers comply with the following international protection markings as defined by IEC 60529 and IEC 60947-1 standards, Appendix C.

Connection parts without terminal covers may be IP20 or less depending on the isolation protection applied on the cables.

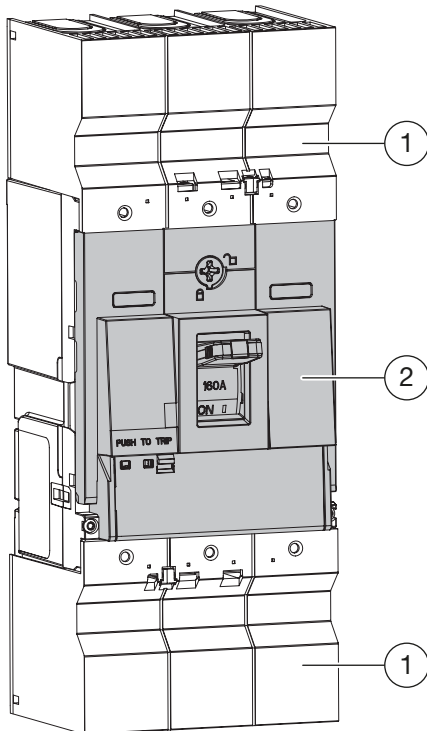

IP of the different areas

- ① IP20: side, back, terminal cover
- ② IP40: front cover

Vibrations

h3+ P160, P250 and P630 circuit breaker withstand mechanical vibrations.

h3+ complies to IEC 60068-2-52:

- 2.0 to 13.2 Hz and amplitude ± 1 mm
 - 13.2 to 100 Hz acceleration ± 0.7 g
 - Resonance frequency (± 1 mm/ ± 0.7 G) during 90 min
- Excessive vibration may cause false tripping and/or damage to connections and/or mechanical parts.


Electromagnetic disturbances

h3+ circuit breakers are protected against:

- overvoltage caused by circuit switching,
- overvoltage caused by atmospheric disturbances or a distribution-system outage (e.g. failure of a lighting system),
- devices emitting radio waves (radios, walkie-talkies, radar, etc.),
- electrostatic discharges produced directly by users.

P160, P250 and P630 circuit breakers have successfully passed the electromagnetic-compatibility tests (EMC) with immunity levels listed in the General Characteristics chapter.


Degree of protection IP40 is achieved when an h3+ circuit breaker is installed in a switchboard with a front panel cut-out covering a minimum the protection settings window. Higher protection degree of IP65 can be achieved by installing a door mounted external rotary handle.

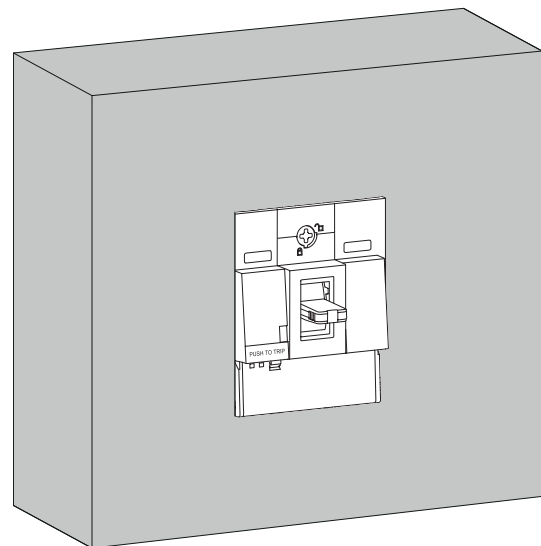

Front panel IP40


Mounting position

h3+ P160, P250 and P630 circuit breakers can be mounted at any angle without affecting the performance and the characteristics.

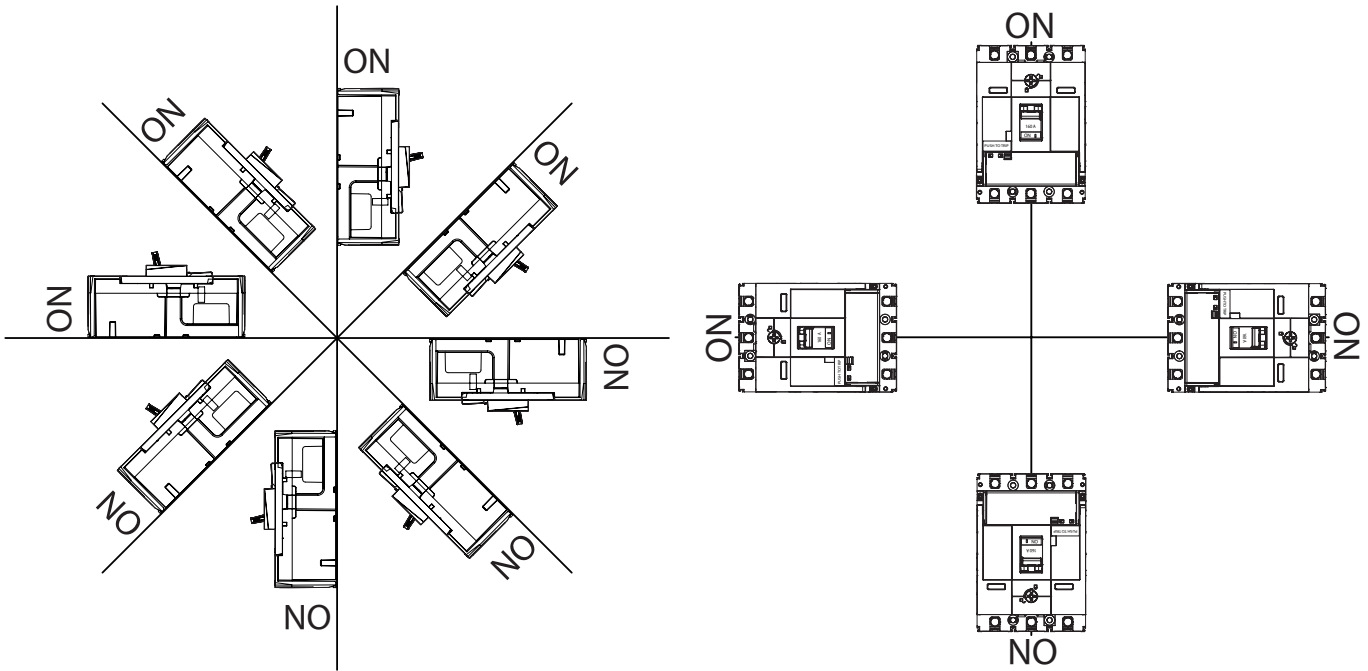

Direction of power supply

h3+ circuit breakers can be supplied from either the top or the bottom, without any decrease in performance. All connections and insulation accessories can be used on circuit breakers supplied either from the top or from the bottom.

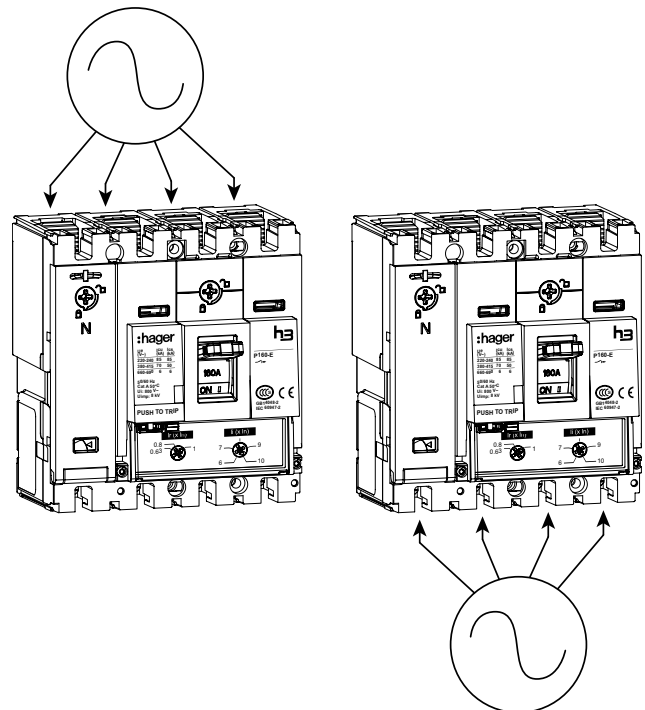

Derating due to temperature

h3+ P160 and P250 thermo-magnetic circuit breakers are calibrated at 50 °C ambient temperature for the overload protection. This means that when the ambient temperature is less or greater than 50 °C, the Ir protection pick-up threshold is slightly modified.

h3+ P160 and P250 circuit breakers have to be derated as indicated in the table below:

Ambient temperature influences on Ir settings of the P160 TM circuit breaker

| | | Temperature °C | | | | | | | | | | | | |
|--------|-------------|----------------|-------|-------|-------|-------|-------|-------|-------|-----|-------|-------|-------|-------|
| In (A) | Ir ... x In | 10 | 15 | 20 | 25 | 30 | 35 | 40 | 45 | 50 | 55 | 60 | 65 | 70 |
| 25 | 0.63 | 19.3 | 18.9 | 18.5 | 18.1 | 17.7 | 17.3 | 16.9 | 16.4 | 16 | 15.5 | 15.1 | 14.6 | 14.1 |
| | 0.8 | 24.1 | 23.6 | 23.2 | 22.7 | 22.2 | 21.6 | 21.1 | 20.6 | 20 | 19.4 | 18.8 | 18.2 | 17.6 |
| | 1 | 30.1 | 29.6 | 28.9 | 28.3 | 27.7 | 27.0 | 26.4 | 25.7 | 25 | 24.3 | 23.5 | 22.8 | 22.0 |
| 40 | 0.63 | 31.2 | 30.5 | 29.8 | 29.0 | 28.3 | 27.5 | 26.7 | 25.9 | 25 | 24.1 | 23.2 | 22.2 | 21.2 |
| | 0.8 | 39.9 | 39.0 | 38.1 | 37.2 | 36.2 | 35.2 | 34.2 | 33.1 | 32 | 30.9 | 29.7 | 28.5 | 27.2 |
| | 1 | 49.9 | 48.8 | 47.6 | 46.5 | 45.2 | 44.0 | 42.7 | 41.4 | 40 | 38.6 | 37.1 | 35.6 | 34.0 |
| 63 | 0.63 | 55.3 | 53.6 | 51.9 | 50.1 | 48.3 | 46.3 | 44.3 | 42.2 | 40 | 37.7 | 35.1 | 32.5 | 29.5 |
| | 0.8 | 69.1 | 67.0 | 64.9 | 62.6 | 60.3 | 57.9 | 55.4 | 52.8 | 50 | 47.1 | 43.9 | 40.6 | 36.9 |
| | 1 | 87.1 | 84.5 | 81.7 | 78.9 | 76.0 | 73.0 | 69.8 | 66.5 | 63 | 59.3 | 55.4 | 51.1 | 46.5 |
| 80 | 0.63 | 64.0 | 62.4 | 60.8 | 59.1 | 57.4 | 55.6 | 53.8 | 51.9 | 50 | 48.0 | 45.9 | 43.6 | 41.3 |
| | 0.8 | 80.6 | 78.6 | 76.6 | 74.5 | 72.3 | 70.1 | 67.8 | 65.5 | 63 | 60.4 | 57.8 | 55.0 | 52.0 |
| | 1 | 102.3 | 99.8 | 97.2 | 94.6 | 91.8 | 89.0 | 86.1 | 83.1 | 80 | 76.8 | 73.4 | 69.8 | 66.1 |
| 100 | 0.63 | 78.3 | 76.5 | 74.8 | 72.9 | 71.1 | 69.1 | 67.1 | 65.1 | 63 | 60.8 | 58.6 | 56.2 | 53.8 |
| | 0.8 | 99.4 | 97.2 | 94.9 | 92.6 | 90.2 | 87.8 | 85.3 | 82.7 | 80 | 77.2 | 74.4 | 71.4 | 68.3 |
| | 1 | 124.3 | 121.5 | 118.7 | 115.8 | 112.8 | 109.7 | 106.6 | 103.3 | 100 | 96.5 | 93.0 | 89.2 | 85.3 |
| 125 | 0.63 | 94.0 | 92.4 | 90.7 | 89.0 | 87.3 | 85.5 | 83.7 | 81.9 | 80 | 78.1 | 76.1 | 74.1 | 72.0 |
| | 0.8 | 117.5 | 115.5 | 113.4 | 111.3 | 109.1 | 106.9 | 104.7 | 102.4 | 100 | 97.6 | 95.1 | 92.6 | 90.0 |
| | 1 | 146.9 | 144.3 | 141.7 | 139.1 | 136.4 | 133.6 | 130.8 | 127.9 | 125 | 122.0 | 118.9 | 115.7 | 112.5 |
| 160 | 0.63 | 120.1 | 117.7 | 115.4 | 113.0 | 110.5 | 108.0 | 105.4 | 102.7 | 100 | 97.2 | 94.3 | 91.3 | 88.3 |
| | 0.8 | 150.1 | 147.2 | 144.2 | 141.2 | 138.1 | 135.0 | 131.7 | 128.4 | 125 | 121.5 | 117.9 | 114.2 | 110.3 |
| | 1 | 192.1 | 188.4 | 184.6 | 180.7 | 176.8 | 172.7 | 168.6 | 164.4 | 160 | 155.5 | 150.9 | 146.2 | 141.2 |

Ambient temperature influences on Ir settings of the P250 TM circuit breaker

| | | Temperature °C | | | | | | | | | | | | |
|--------|-------------|----------------|-------|-------|-------|-------|-------|-------|-------|-----|-------|-------|-------|-------|
| In (A) | Ir ... x In | 10 | 15 | 20 | 25 | 30 | 35 | 40 | 45 | 50 | 55 | 60 | 65 | 70 |
| 50 | 0.63 | 40.4 | 39.4 | 38.4 | 37.4 | 36.4 | 35.4 | 34.3 | 33.2 | 32 | 30.8 | 29.5 | 28.2 | 26.9 |
| | 0.8 | 50.4 | 49.3 | 48.0 | 46.8 | 45.5 | 44.2 | 42.8 | 41.4 | 40 | 38.5 | 36.9 | 35.3 | 33.6 |
| | 1 | 63.1 | 61.6 | 60.1 | 58.5 | 56.9 | 55.3 | 53.6 | 51.8 | 50 | 48.1 | 46.2 | 44.1 | 42.0 |
| 63 | 0.63 | 52.8 | 51.3 | 49.9 | 48.4 | 46.8 | 45.2 | 43.5 | 41.8 | 40 | 38.1 | 36.1 | 34.0 | 31.7 |
| | 0.8 | 66.0 | 64.2 | 62.4 | 60.5 | 58.5 | 56.5 | 54.4 | 52.3 | 50 | 47.6 | 45.1 | 42.5 | 39.7 |
| | 1 | 83.1 | 80.9 | 78.6 | 76.2 | 73.7 | 71.2 | 68.6 | 65.9 | 63 | 60.0 | 56.9 | 53.5 | 50.0 |
| 100 | 0.63 | 81.7 | 79.6 | 77.4 | 75.2 | 72.9 | 70.6 | 68.1 | 65.6 | 63 | 60.3 | 57.4 | 54.4 | 51.2 |
| | 0.8 | 103.7 | 101.0 | 98.3 | 95.5 | 92.6 | 89.6 | 86.5 | 83.3 | 80 | 76.5 | 72.9 | 69.1 | 65.0 |
| | 1 | 129.6 | 126.3 | 122.9 | 119.4 | 115.8 | 112.0 | 108.2 | 104.2 | 100 | 95.7 | 91.1 | 86.3 | 81.2 |
| 125 | 0.63 | 97.1 | 95.1 | 93.1 | 91.0 | 88.9 | 86.8 | 84.6 | 82.3 | 80 | 77.6 | 75.1 | 72.6 | 69.9 |
| | 0.8 | 121.3 | 118.9 | 116.4 | 113.8 | 111.2 | 108.5 | 105.7 | 102.9 | 100 | 97.0 | 93.9 | 90.7 | 87.4 |
| | 1 | 151.7 | 148.6 | 145.5 | 142.3 | 139.0 | 135.6 | 132.2 | 128.6 | 125 | 121.3 | 117.4 | 113.4 | 109.3 |
| 160 | 0.63 | 124.7 | 121.9 | 119.0 | 116.1 | 113.1 | 109.9 | 106.7 | 103.4 | 100 | 96.5 | 92.8 | 89.0 | 85.0 |
| | 0.8 | 155.9 | 152.4 | 148.8 | 145.1 | 141.3 | 137.4 | 133.4 | 129.3 | 125 | 120.6 | 116.0 | 111.2 | 106.2 |
| | 1 | 199.6 | 195.1 | 190.5 | 185.7 | 180.9 | 175.9 | 170.8 | 165.5 | 160 | 154.3 | 148.5 | 142.3 | 135.9 |
| 200 | 0.63 | 164.9 | 160.5 | 155.9 | 151.2 | 146.3 | 141.3 | 136.1 | 130.7 | 125 | 119.1 | 112.8 | 106.2 | 99.2 |
| | 0.8 | 211.1 | 205.4 | 199.5 | 193.5 | 187.3 | 180.9 | 174.2 | 167.2 | 160 | 152.4 | 144.4 | 136.0 | 127.0 |
| | 1 | 263.8 | 256.7 | 249.4 | 241.9 | 234.1 | 226.1 | 217.7 | 209.0 | 200 | 190.5 | 180.5 | 170.0 | 158.7 |
| 250 | 0.63 | 198.5 | 194.1 | 189.6 | 185.0 | 180.3 | 175.4 | 170.4 | 165.3 | 160 | 154.5 | 148.8 | 142.9 | 136.7 |
| | 0.8 | 248.1 | 242.6 | 237.0 | 231.3 | 225.4 | 219.3 | 213.1 | 206.6 | 200 | 193.1 | 186.0 | 178.6 | 170.9 |
| | 1 | 310.2 | 303.3 | 296.3 | 289.1 | 281.7 | 274.1 | 266.3 | 258.3 | 250 | 241.4 | 232.5 | 223.3 | 213.7 |

Ambient temperature influences on nominal ratings (In) of the electronic circuit breakers

The temperature of the electronic circuit breaker depends on the current flow and the ambient temperature.

Above 50 °C ambient temperature a derating on the nominal rating must be applied to not exceed the maximum thermal withstand of the circuit breaker.

However the ambient temperature does not affect the protection setting of electronic circuit breakers.

| | In (A) | Temperature °C | | | |
|-------------|------------|----------------|-----|-----|-----|
| | | 50 | 60 | 65 | 70 |
| P160 | 40 | 40 | 40 | 40 | 40 |
| | 100 | 100 | 100 | 100 | 100 |
| | 160 | 160 | 159 | 145 | 135 |
| P250 | 40 | 40 | 40 | 40 | 40 |
| | 100 | 100 | 100 | 100 | 100 |
| | 160 | 160 | 160 | 145 | 135 |
| | 250 | 250 | 240 | 220 | 200 |
| P630 | 250 | 250 | 250 | 250 | 250 |
| | 400 | 400 | 400 | 400 | 400 |
| | 630 | 630 | 622 | 570 | 510 |

Insulation distances

The insulation distances between the MCCB and its surroundings (earthed metal parts – insulators, etc.) must be maintained to prevent arcing faults which may occur due to conductive ionised gas.

In some cases where other specifications require different insulation distances to those shown here, the greater distance must be maintained. In case of two different models are installed above each other, the insulation distance between the two models should be according to the model specifications of the circuit breaker on the downside.



h3+ MCCBs can be mounted side by side without minimum insulation distance.

NOTE

Exposed conductors must be insulated up to the circuit breaker terminals. We recommend using interphase barriers or connection covers.


If the optional connector covers are used, isolate the exposed conductor until it overlaps the connector cover.

Minimum distance between h3+ MCCB and top, bottom or side panel

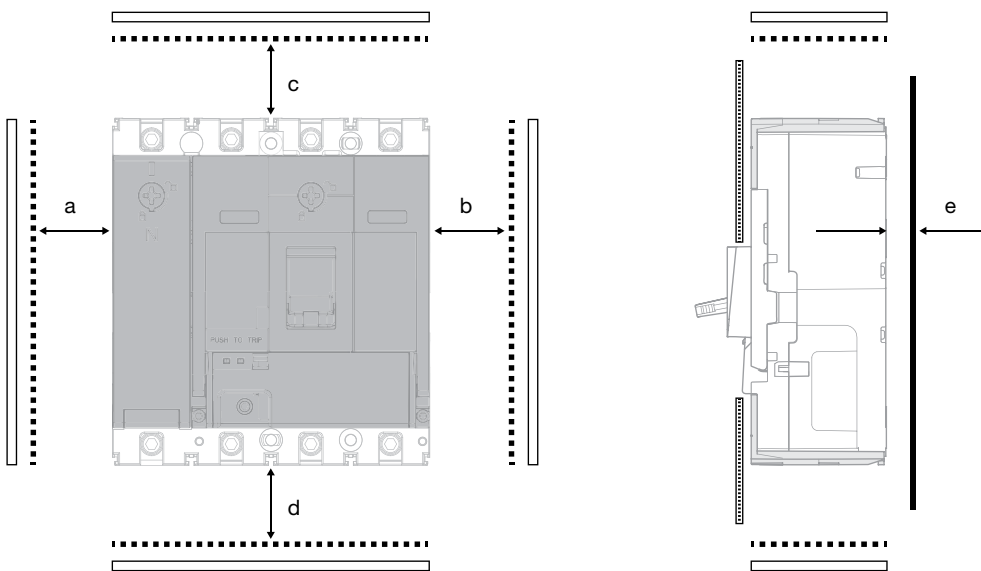

| $U_e \leq 690 \text{ V}$ | Earthed metallic plate | | | Non-metallic plate | | |
|--------------------------|------------------------|-----------|-----------|--------------------|------------|------------|
| | P160 | P250 | P630 | P160 | P250 | P630 |
| a (mm) | ≥ 50 | ≥ 50 | ≥ 50 | 0 | 0 | 0 |
| b (mm) | ≥ 50 | ≥ 50 | ≥ 50 | 0 | 0 | 0 |
| c (mm) | ≥ 50 | ≥ 50 | ≥ 50 | ≥ 75 | ≥ 100 | ≥ 100 |
| d (mm) | ≥ 50 | ≥ 50 | ≥ 50 | ≥ 75 | ≥ 100 | ≥ 100 |
| e (mm) | 0 | 0 | 0 | 0 | 0 | 0 |

Minimum distance h3 breaker connections

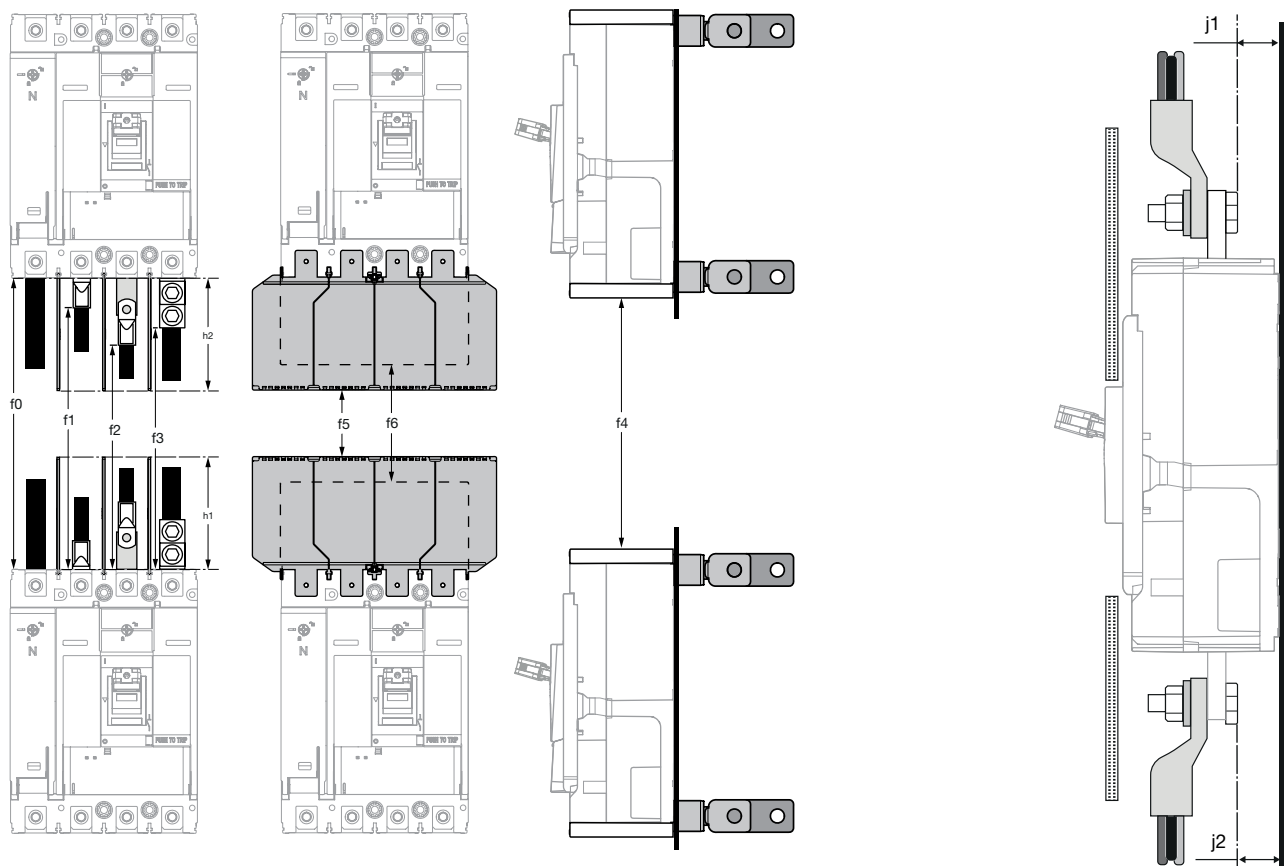

| Dimension (mm) | Type of connection | Type of protection | P160 | P250 | P630 | |
|----------------|------------------------------|-------------------------|--------|-------|-------|-------|
| | | | ≤ 415V | 690V | | |
| f0 | Isolated bar | Interpole barrier | ≥ 100 | ≥ 200 | ≥ 350 | - |
| f1 | Ring Lug | Interpole barrier | ≥ 100 | ≥ 200 | ≥ 350 | - |
| f2 | Extender | Interpole barrier | ≥ 100 | ≥ 200 | ≥ 350 | - |
| f3 | External alu collar | Interpole barrier | ≥ 100 | ≥ 200 | ≥ 350 | - |
| f4 | Rear connection | Terminal cover zero | ≥ 75 | ≥ 150 | ≥ 220 | ≥ 260 |
| f5 | Spreader | Terminal cover spreader | ≥ 50 | ≥ 50 | ≥ 50 | ≥ 50 |
| f6 | Ring Lug | Terminal cover straight | ≥ 50 | ≥ 50 | ≥ 110 | ≥ 110 |
| f6 | Extender | Terminal cover straight | ≥ 50 | ≥ 50 | ≥ 110 | ≥ 110 |
| f6 | External alu collar | Terminal cover straight | ≥ 50 | ≥ 50 | ≥ 110 | ≥ 110 |
| h1 | Ring Lug + Interpole barrier | Normal Feeding | ≥ 50 | ≥ 100 | 0 | ≥ 110 |
| | | Reverse Feeding | ≥ 50 | ≥ 100 | 0 | ≥ 110 |
| h2 | Ring Lug + Interpole barrier | Normal Feeding | 0 | 0 | 0 | ≥ 110 |
| | | Reverse Feeding | ≥ 50 | ≥ 100 | 0 | ≥ 110 |

| Dimension (mm) | | P160 | P250 | P630 |
|---------------------------------------|----------------------------------|------|------|------|
| j1 (mm) upstream / j2 (mm) downstream | Normal Feeding / Reverse Feeding | ≥ 8 | ≥ 8 | ≥ 25 |

In case j1 or j2 is lower than the indicated values, an insulation earth plate is mandatory.

Installation and operating recommendations

Power loss

Thermal power loss values of h3+ Circuit breakers are used to calculate total temperature rise in the switchboard in which they are installed.

The values indicated in the tables below are typical values for a device operating at a full rated load with a frequency of 50/60 Hz.

The value of the resistance per pole is provided as a general indication for a new device. It is determined on the basis of the measured voltage drop.

The value indicated is the power loss per pole at I_n , 50/60 Hz. Measurement and calculation of power loss are carried out in compliance with the recommendations of Appendix G of standard IEC 60947-2.

Total power loss at full rated load and 50/60 Hz is equal to power losses per pole multiplied by 3.

Power loss TM circuit breakers

| | Rating I_n (A) | Z per pole (m Ω) | P / pole (W) | P / product 3P or 4P (W) |
|-------------|------------------|--------------------------|--------------|--------------------------|
| P160 | 25 | 10.4 | 6.5 | 19.5 |
| | 32 | 8.8 | 9 | 27 |
| | 40 | 5.8 | 9.3 | 27.9 |
| | 63 | 0.88 | 3.5 | 10.5 |
| | 80 | 0.92 | 5.9 | 17.7 |
| | 100 | 0.67 | 6.7 | 20.1 |
| | 125 | 0.68 | 10.7 | 32.1 |
| | 160 | 0.55 | 14.1 | 42.3 |
| P250 | 50 | 2.00 | 5 | 15 |
| | 63 | 1.17 | 4.65 | 13.95 |
| | 100 | 0.60 | 6 | 18 |
| | 125 | 0.60 | 9.3 | 27.9 |
| | 160 | 0.38 | 9.7 | 29.1 |
| | 200 | 0.30 | 12 | 36 |
| | 250 | 0.27 | 16.9 | 50.7 |

Power loss electronic circuit breakers

| | Rating I_n (A) | Z per pole (m Ω) | P / pole (W) | P / product 3P or 4P (W) |
|-------------|------------------|--------------------------|--------------|--------------------------|
| P160 | 40 | 0.35 | 0.56 | 1.68 |
| | 100 | 0.35 | 3.5 | 10.5 |
| | 160 | 0.35 | 9 | 27 |
| P250 | 40 | 0.24 | 0.38 | 1.2 |
| | 100 | 0.24 | 2.4 | 7.2 |
| | 160 | 0.24 | 6.14 | 18.4 |
| | 250 | 0.24 | 15 | 45 |
| P630 | 250 | 0.196 | 12.3 | 36.8 |
| | 400 | 0.19 | 30 | 90 |
| | 630 | 0.15 | 58.6 | 175.8 |

Additional power loss


Power loss caused by the mounting accessories has to be taken into account. Thus, the total power loss is equal to the sum of the power loss of the circuit breaker and all the corresponding mounting accessories.

| | Rating In (A) | P/MCCB 3P or 4P (W) | Additional P/ accessory kit (W) | | | | | | Rear connection | Straight bar | Spreader | Plug-in/ Withdr. |
|------------------------|---------------|---------------------------|---------------------------------|-------------------------|---------|---------|-------|------|-----------------|--------------|----------|---------------------|
| | | | RCD add-on block | External cable terminal | | | | | | | | |
| | | | | 1 wire | 2 wires | 6 wires | | | | | | |
| P160 TM | 25 | 19.5 | - | 0.05 | - | 0.04 | 0.58 | 0.14 | 0.12 | 0.53 | | |
| | 32 | 27 | | 0.08 | | 0.07 | 0.95 | 0.23 | 0.20 | 0.86 | | |
| | 40 | 27.9 | | 0.12 | | 0.11 | 1.48 | 0.35 | 0.31 | 1.34 | | |
| | 63 | 10.5 | | 0.30 | | 0.28 | 1.31 | 0.88 | 0.77 | 1.95 | | |
| | 80 | 17.7 | | 0.48 | | 0.46 | 2.12 | 1.42 | 1.24 | 3.15 | | |
| | 100 | 20.1 | | 0.75 | | 0.71 | 3.31 | 2.21 | 1.93 | 4.92 | | |
| | 125 | 32.1 | | 1.17 | | 1.12 | 5.18 | 3.46 | 3.02 | 7.50 | | |
| | 160 | 42.3 | | 1.92 | | 1.83 | 8.48 | 5.67 | 4.95 | 10.4 | | |
| P250 TM | 50 | 15 | 3.2 | 0.18 | 0.20 | 0.20 | 0.56 | 0.17 | 0.20 | 0.4 | | |
| | 63 | 13.95 | | 0.29 | 0.32 | 0.32 | 0.89 | 0.26 | 0.31 | 0.7 | | |
| | 100 | 18 | | 0.72 | 0.82 | 0.82 | 2.23 | 0.66 | 0.78 | 1.7 | | |
| | 125 | 27.9 | 5.6 | 1.13 | 1.28 | 1.28 | 3.49 | 1.03 | 1.22 | 2.6 | | |
| | 160 | 29.1 | | 1.84 | 2.09 | 2.09 | 5.71 | 1.69 | 2.00 | 4.2 | | |
| | 200 | 36 | 17.75 | 2.88 | 2.69 | 3.26 | 8.93 | 2.64 | 3.12 | 6.6 | | |
| | 250 | 50.7 | | 4.5 | 5.1 | 4.2 | 13.95 | 4.08 | 4.80 | 10.3 | | |
| P160 electronic | 40 | 1.68 | - | 0.12 | - | 0.11 | 1.48 | 0.35 | 0.31 | 1.34 | | |
| | 100 | 10.5 | | 0.75 | | 0.71 | 3.31 | 2.21 | 1.93 | 4.92 | | |
| | 160 | 27 | | 1.92 | | 1.83 | 8.48 | 5.67 | 4.95 | 10.4 | | |
| P250 electronic | 40 | 1.2 | 3.2 | 0.12 | 0.13 | 0.11 | 0.56 | 0.17 | 0.20 | 0.4 | | |
| | 100 | 7.2 | | 0.72 | 0.82 | 0.67 | 2.23 | 0.66 | 0.78 | 1.7 | | |
| | 160 | 18.4 | 5.6 | 1.84 | 2.09 | 1.72 | 5.71 | 1.69 | 2.00 | 4.2 | | |
| | 250 | 45 | 12.75 | 4.5 | 5.1 | 4.2 | 13.95 | 4.08 | 4.80 | 10.3 | | |
| P630 electronic | 250 | 36.8 | 13.6 | 82.5 | 50.63 | - | 7 | 4.8 | 5.4 | 11.4 | | |
| | 400 | 90 | 21.7 | 211.2 | 129.6 | | 17.9 | 12.6 | 13.8 | 29.1 | | |
| | 630 | 175.8 | 34.3 | - | 321.49 | | 44 | 16.7 | 19 | 58.5 | | |


Dimensions and connections

| | Page |
|-------------------------------------------------|------|
| 01 Circuit breakers and RCD add-on block | 88 |
| 02 Circuit breakers plug-in | 95 |
| 03 Circuit breakers withdrawables | 98 |
| 04 Handles and motor operators | 87 |
| 05 Front panel cut-outs | 107 |
| 06 Power connections | 110 |
| 07 Panel display | 122 |


Dimension P160

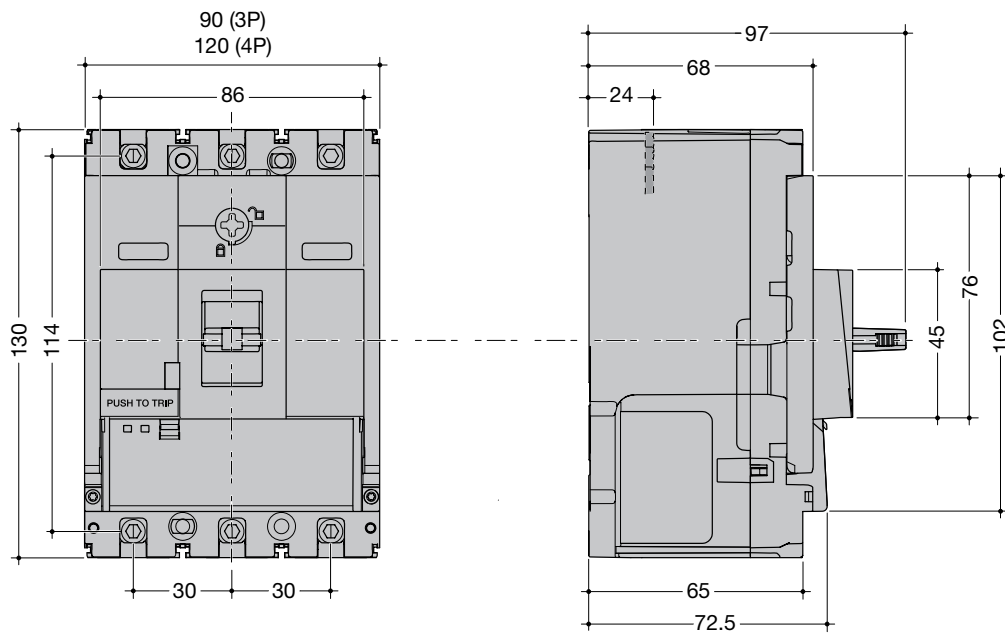


Dimension P250

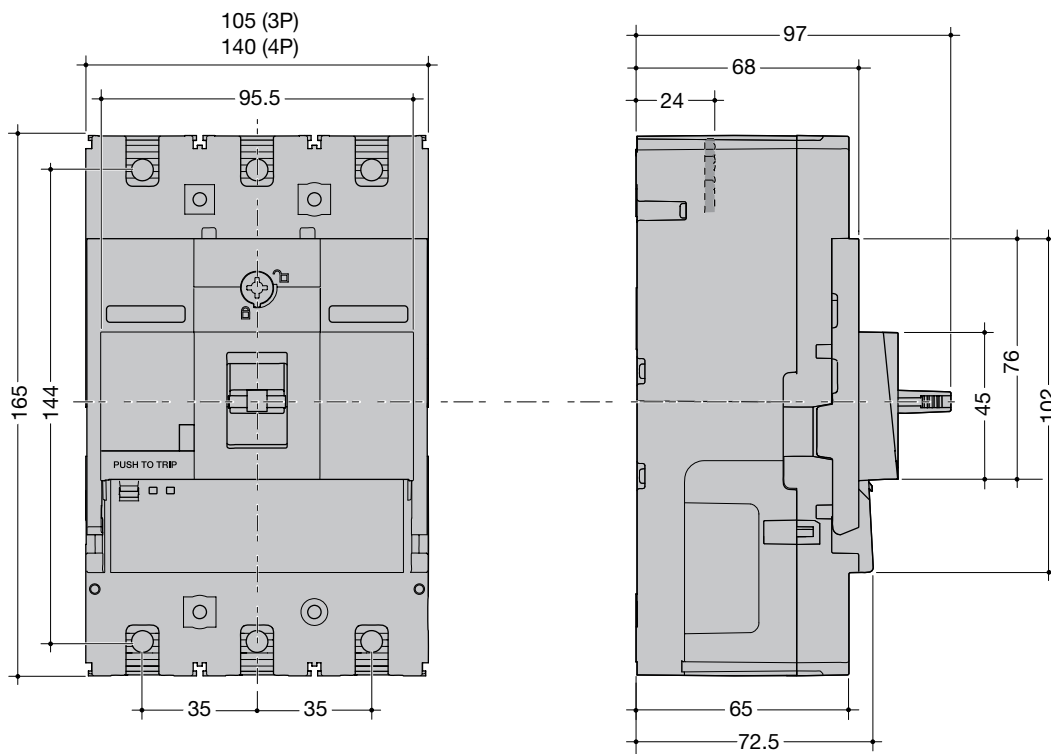


Dimension P630

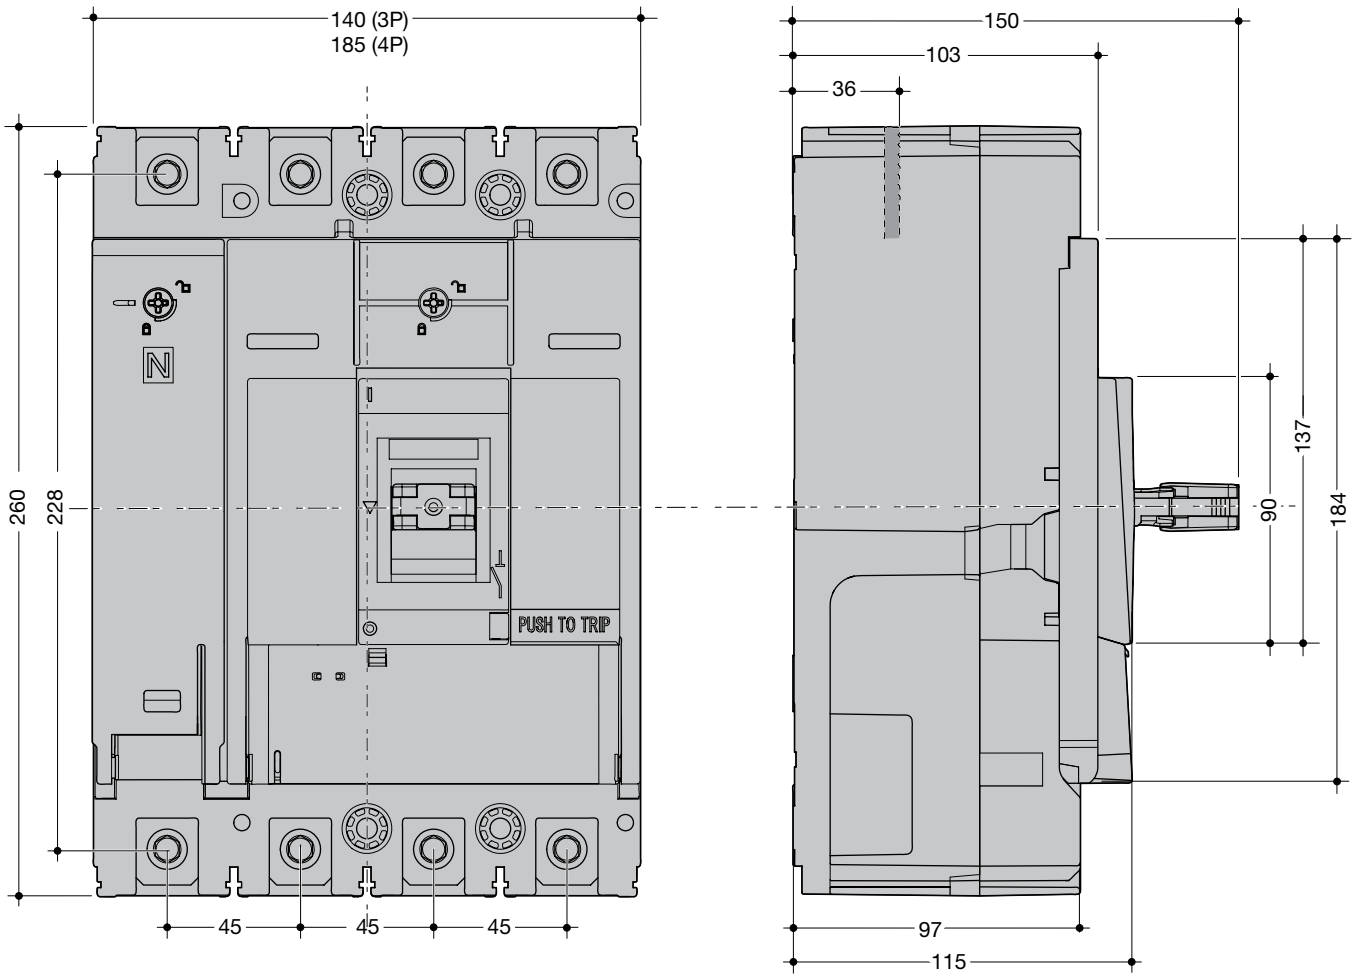

Dimension RCD Add-on block P250

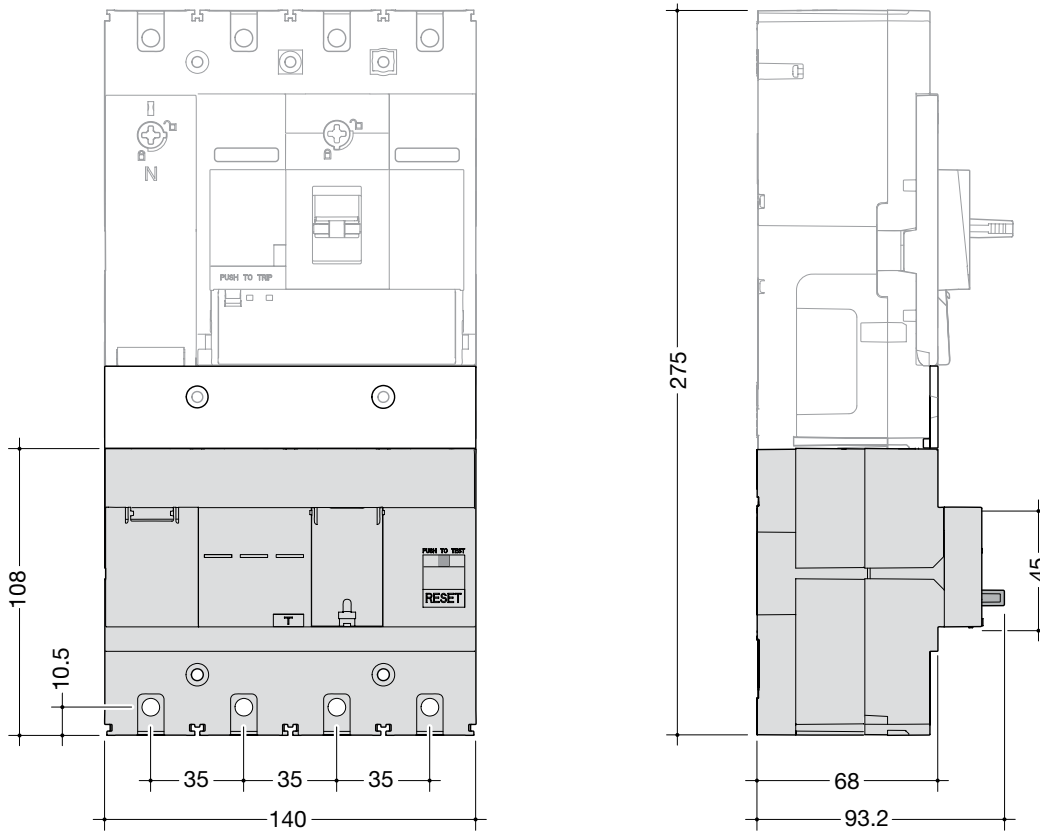


Dimension RCD Add-on block P630

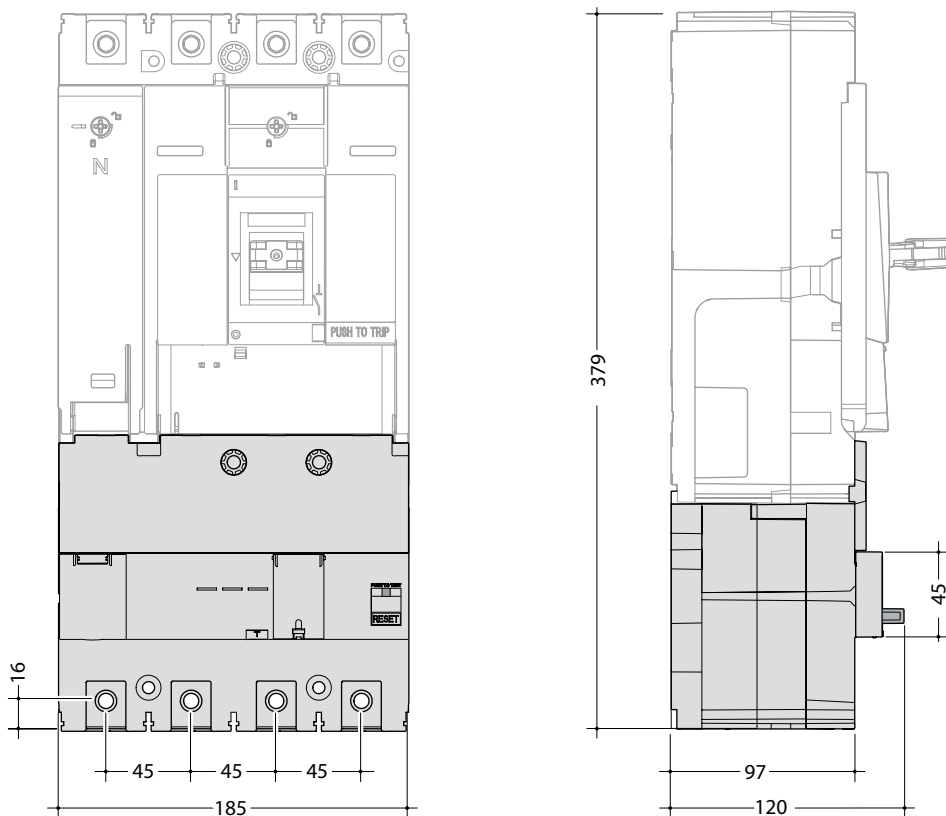


P160 back plate drilling pattern

3P

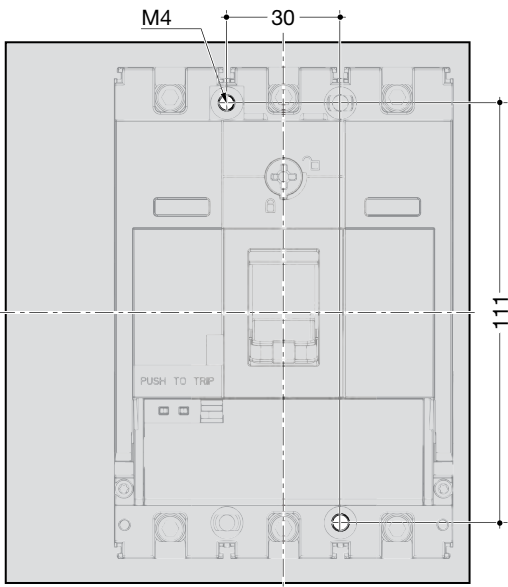


4P

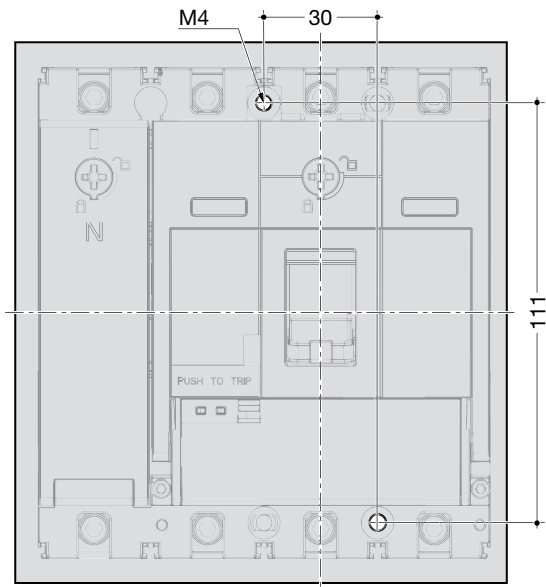


P250 back plate drilling pattern

3P

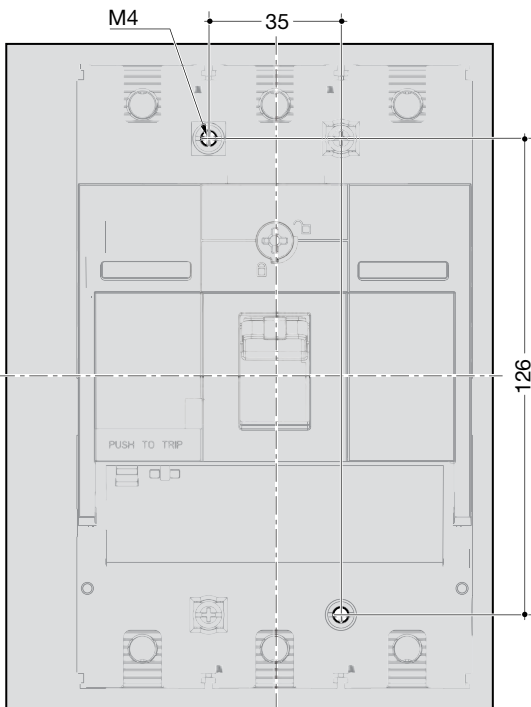


4P

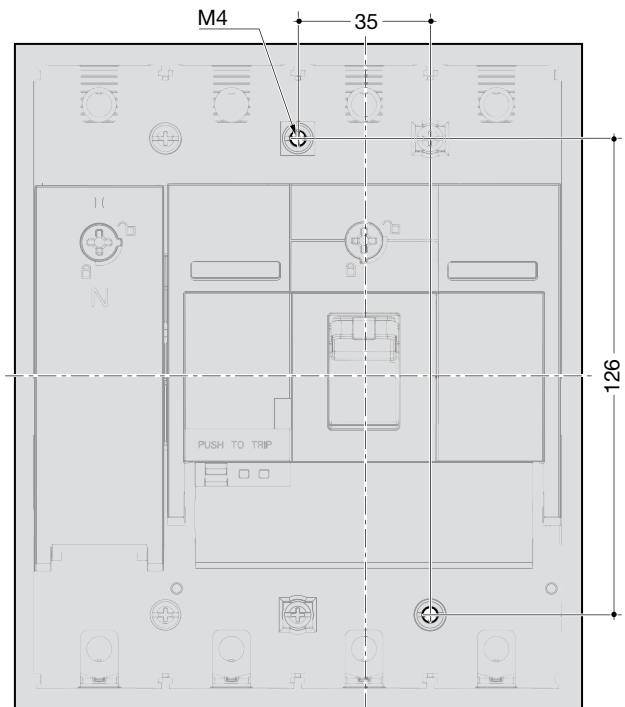


Dimensions
and
connections

P630 back plate drilling pattern

3P

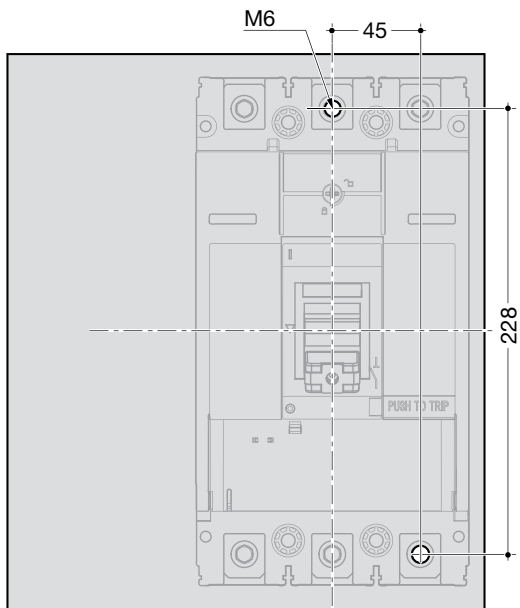


4P

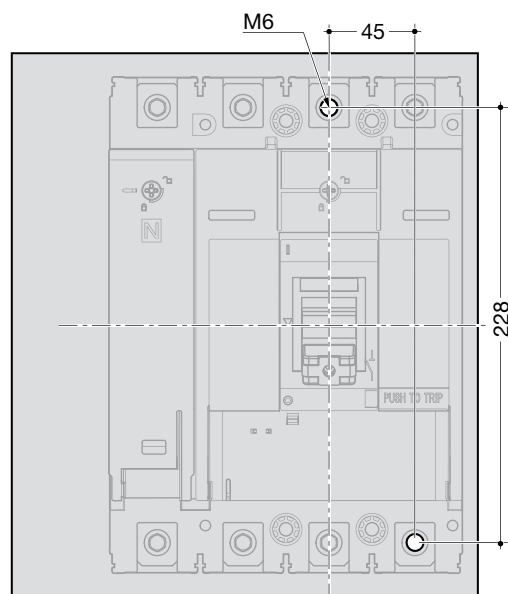


P160 rear connection back plate drilling pattern

3P

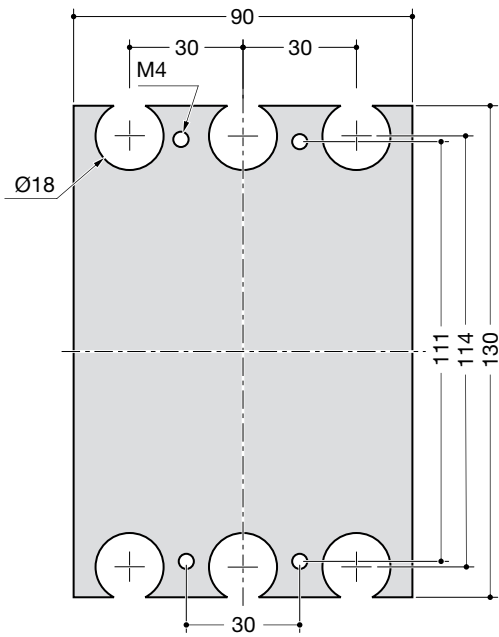


4P

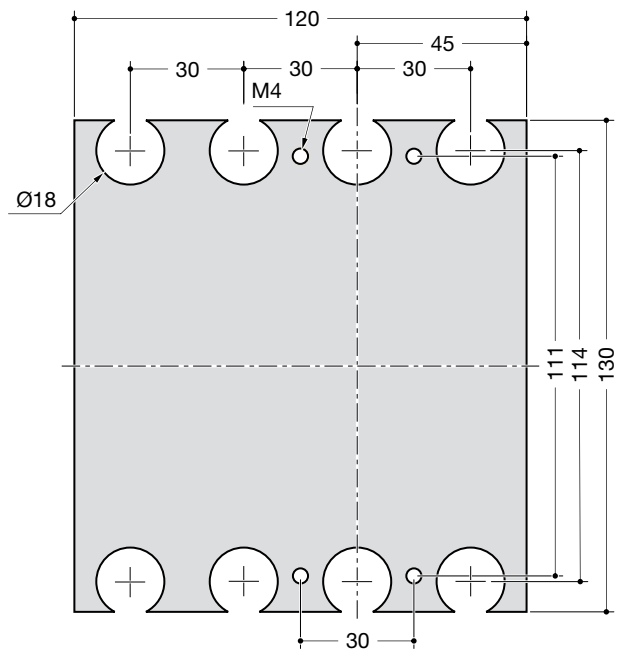


P250 rear connection back plate drilling pattern

3P

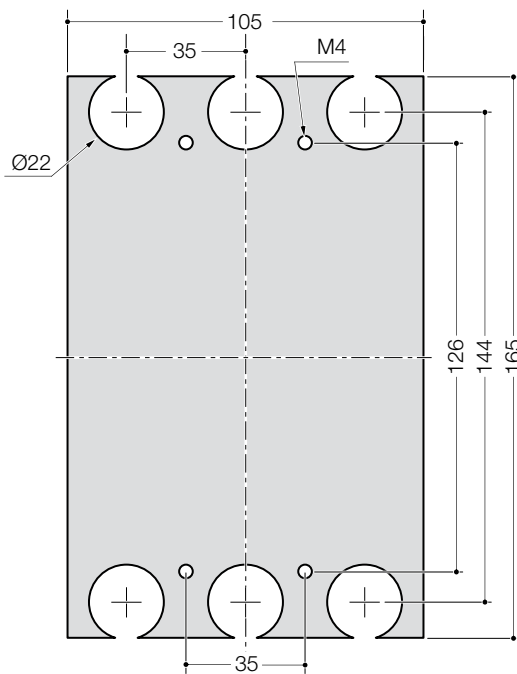


4P

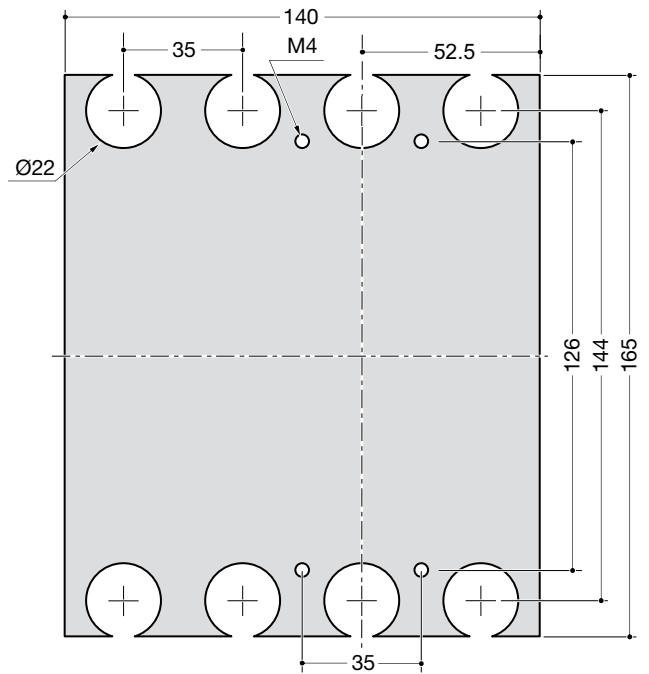


P630 rear connection back plate drilling pattern


3P

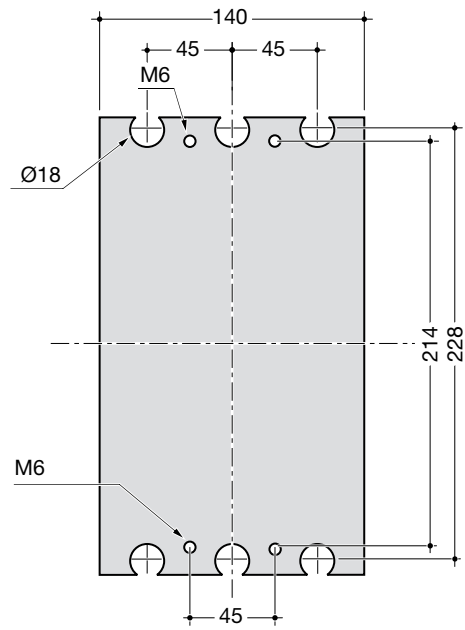


4P

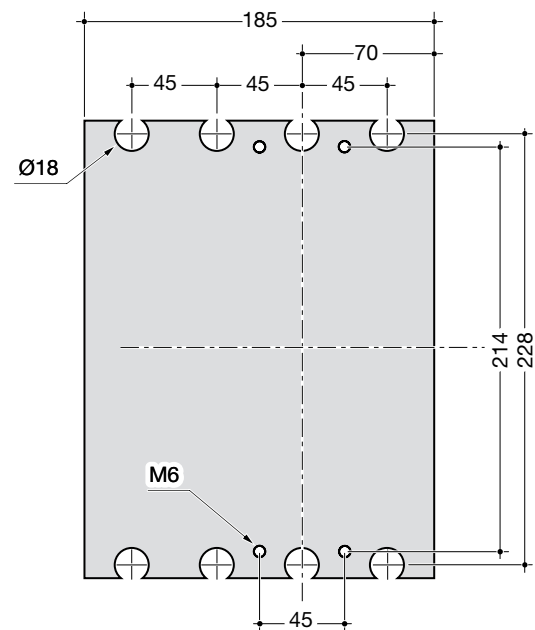


P160 DIN rail adaptor

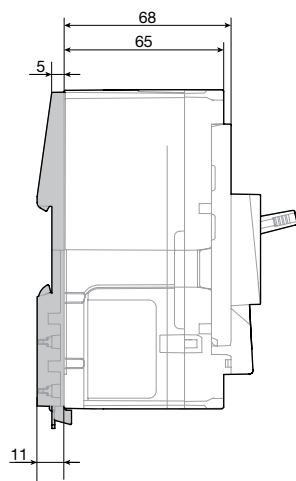


P250 DIN rail adaptor

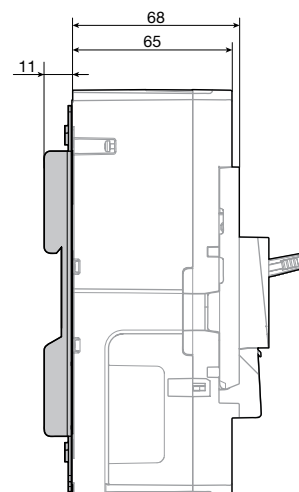


P160 plug-in kit drilling pattern for U plate
3P + 4P

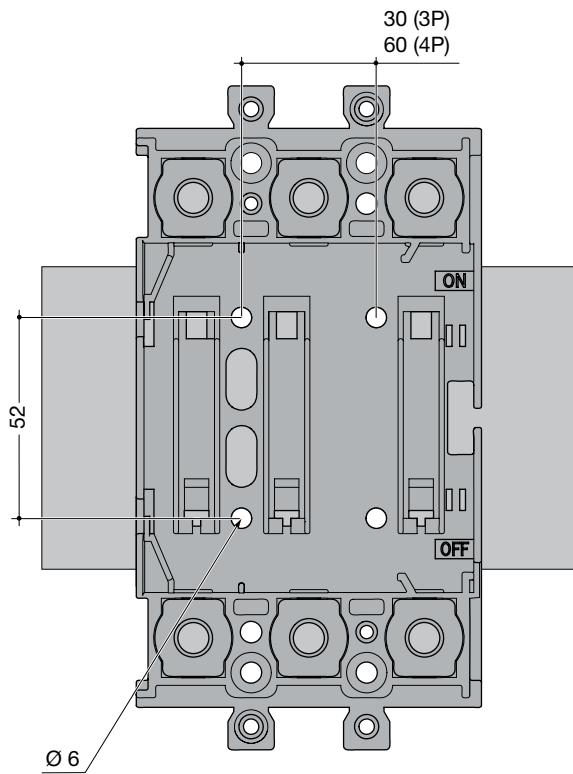


P160 plug-in kit drilling pattern for solid back plate
3P + 4P

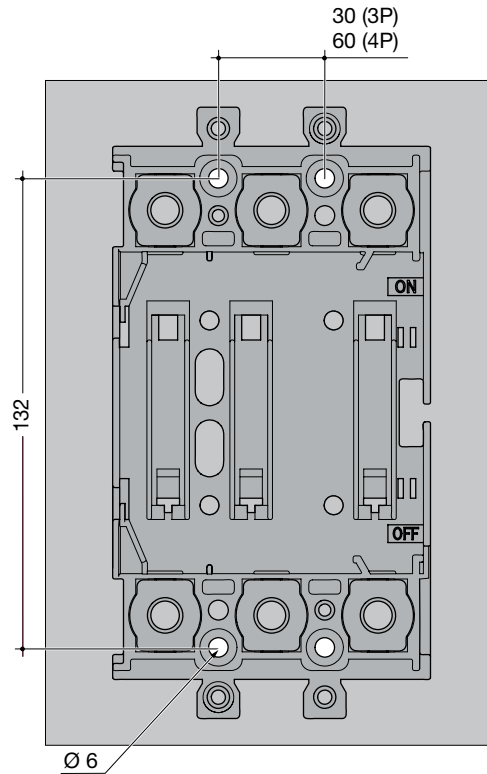


P160 plug-in kit drilling pattern for flush mounting
3P + 4P

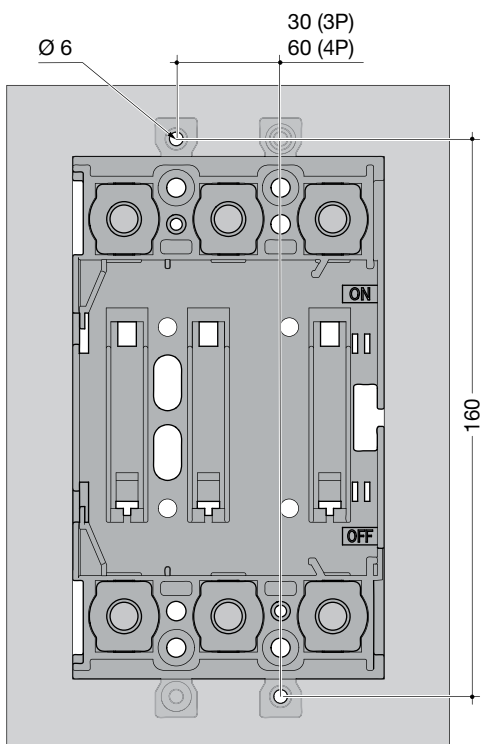


P250 plug-in kit drilling pattern for U plate
3P + 4P

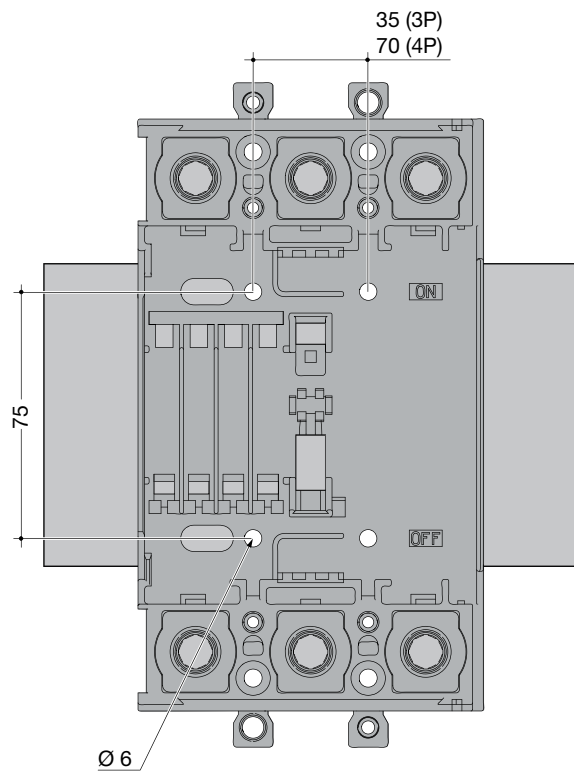


P250 plug-in kit drilling pattern for solid back plate
3P + 4P

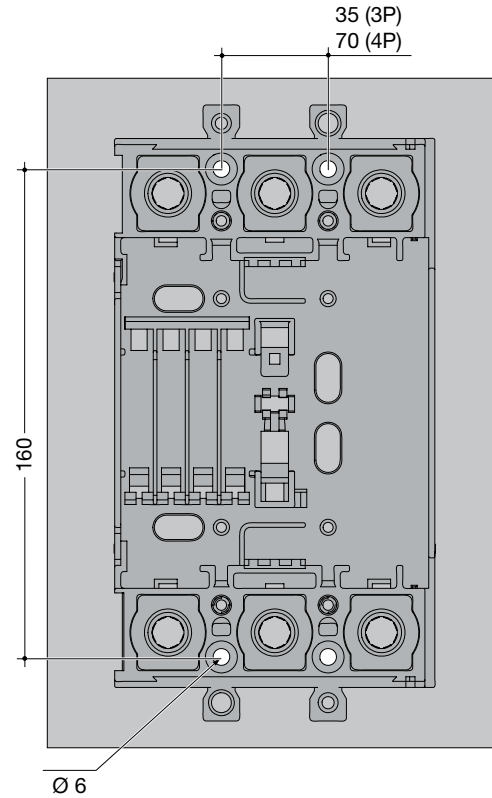


P250 plug-in kit drilling pattern for flush mounting
3P + 4P

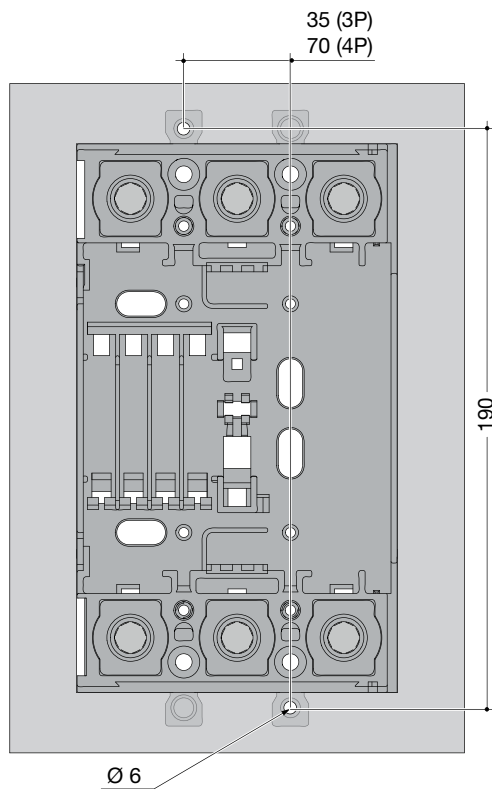


P250 circuit breaker on plug-in kit
3P + 4P

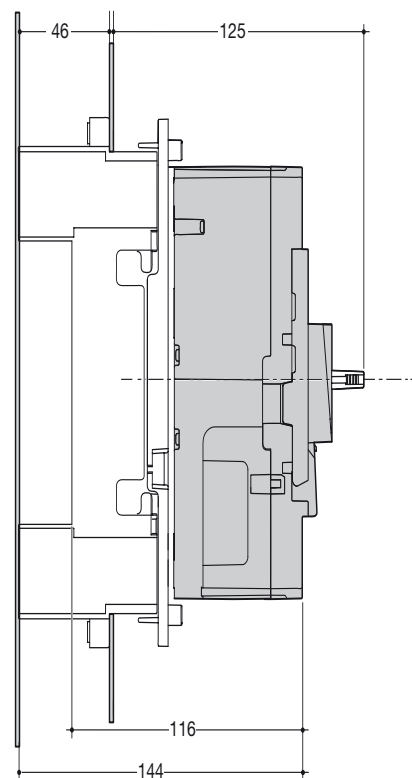


P630 plug-in kit drilling pattern for U plate
3P + 4P

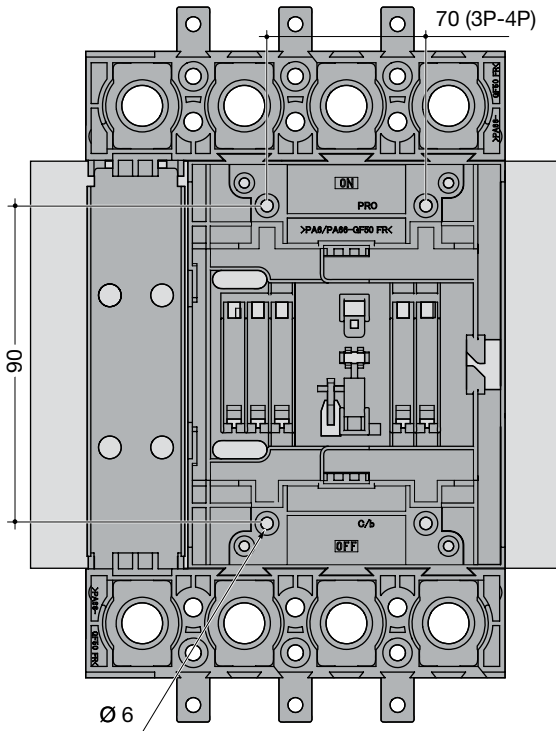


P630 plug-in kit drilling pattern for solid back plate
3P + 4P

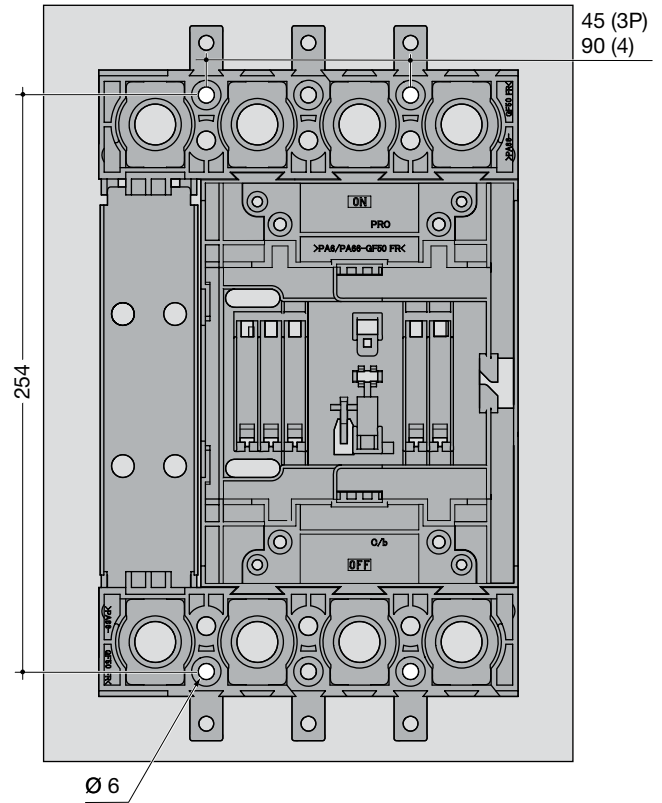

P630 plug-in kit drilling pattern for flush mounting
3P + 4P

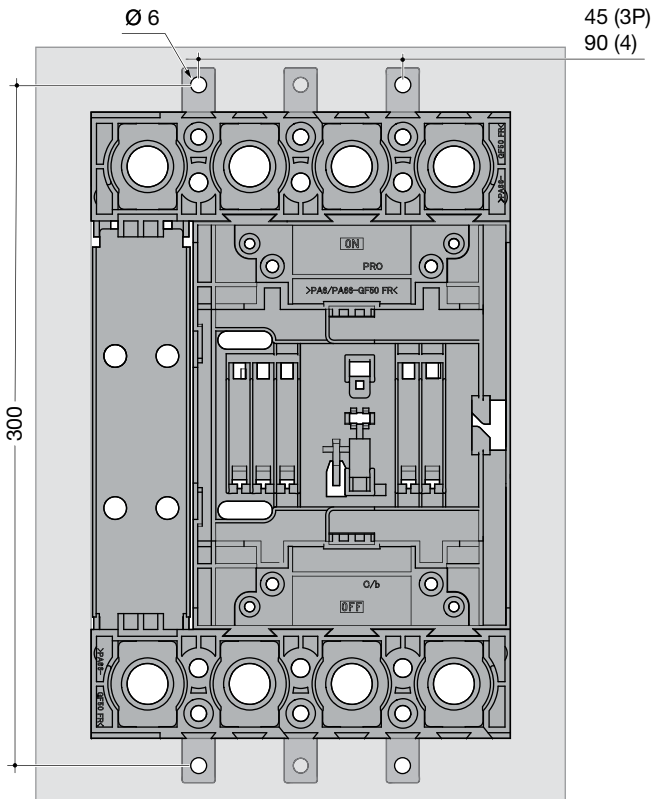


P630 circuit breaker on plug-in kit
3P + 4P

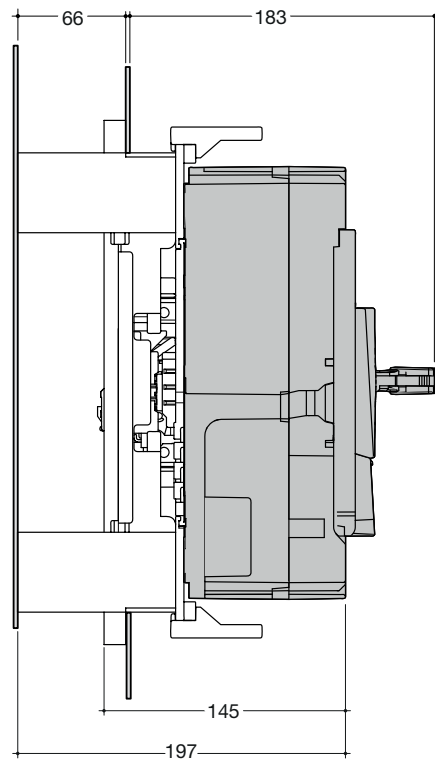

Dimensions
and
connections


P250 withdrawable plate drilling pattern

3P + 4P

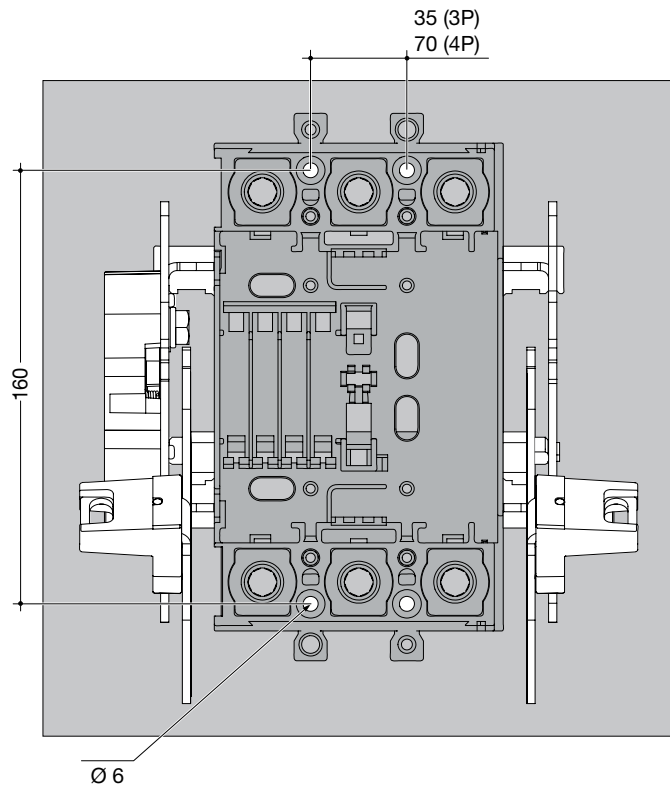


P250 circuit breaker on withdrawable plate

3P + 4P

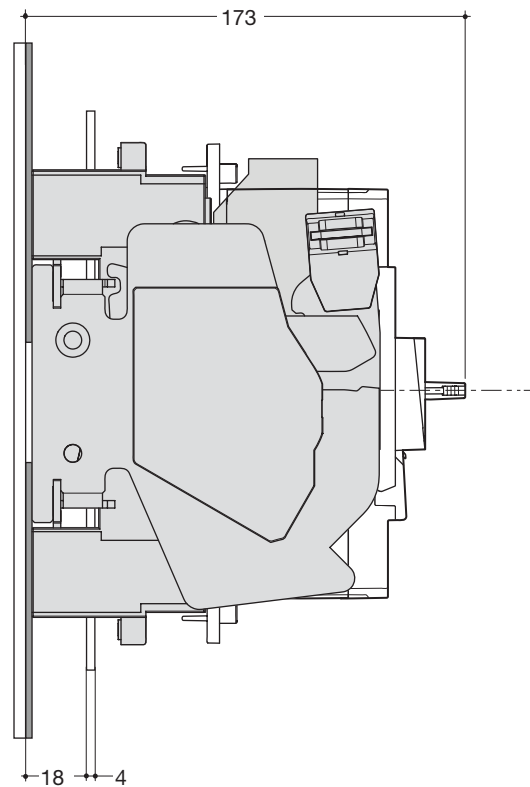


P630 withdrawable plate drilling pattern

3P + 4P

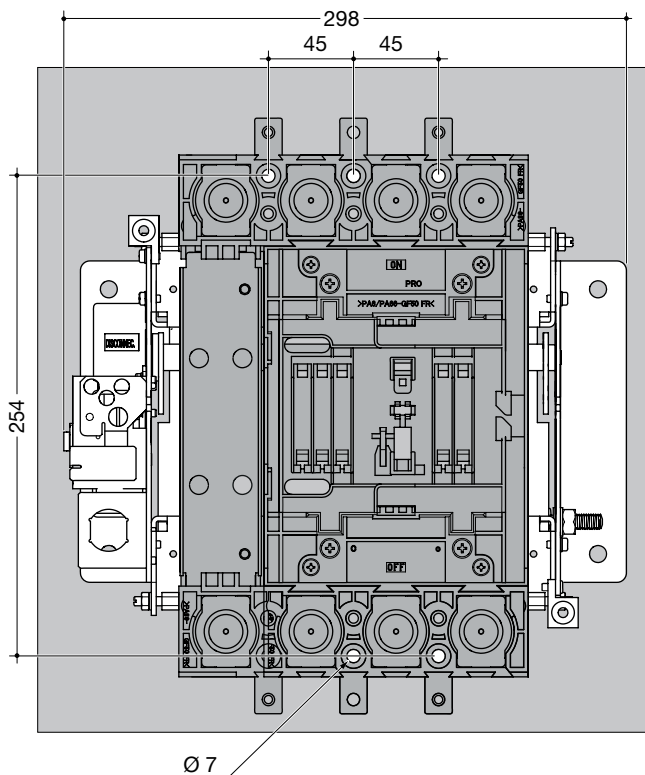


P630 circuit breaker on withdrawable plate


3P + 4P

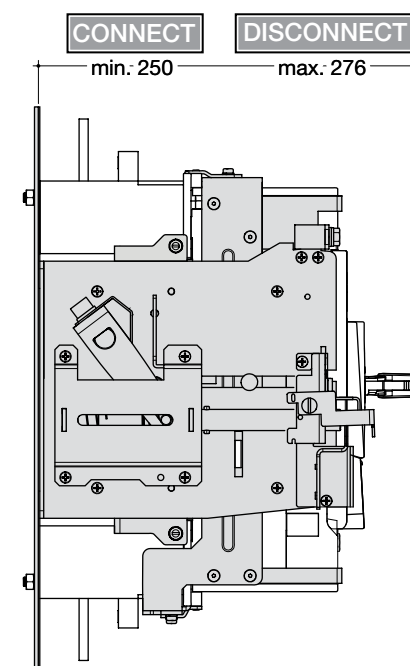


P250 Motor operator on plug-in circuit breaker
3P + 4P

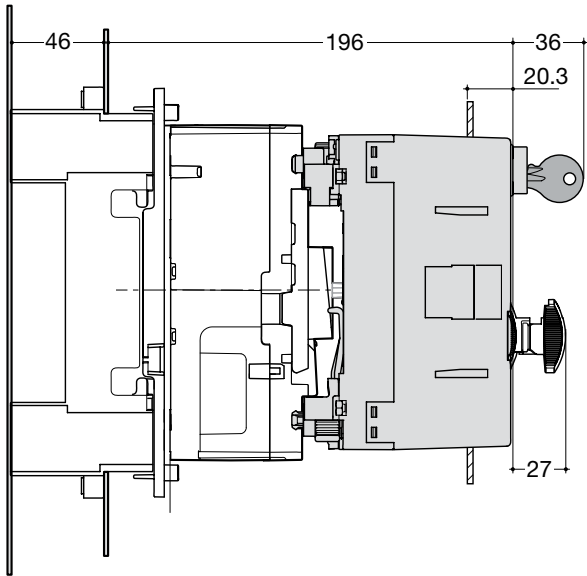


P250 Motor operator on withdrawable circuit breaker
3P + 4P

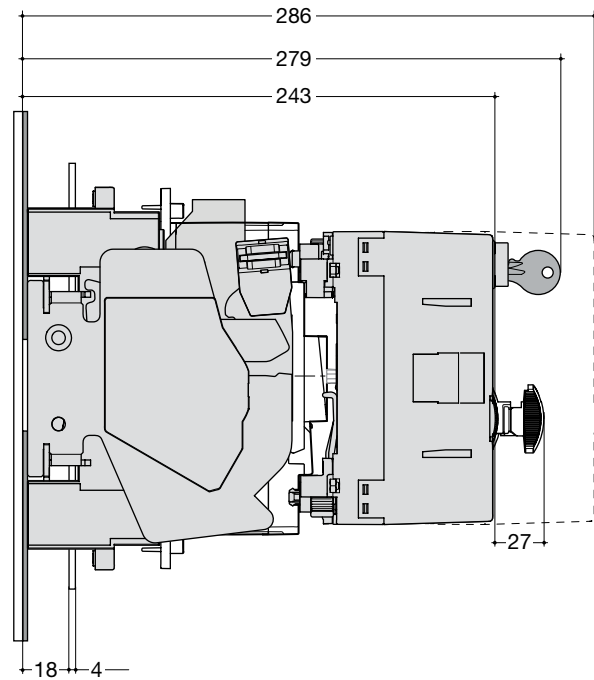

P630 Motor operator on plug-in circuit breaker
3P + 4P

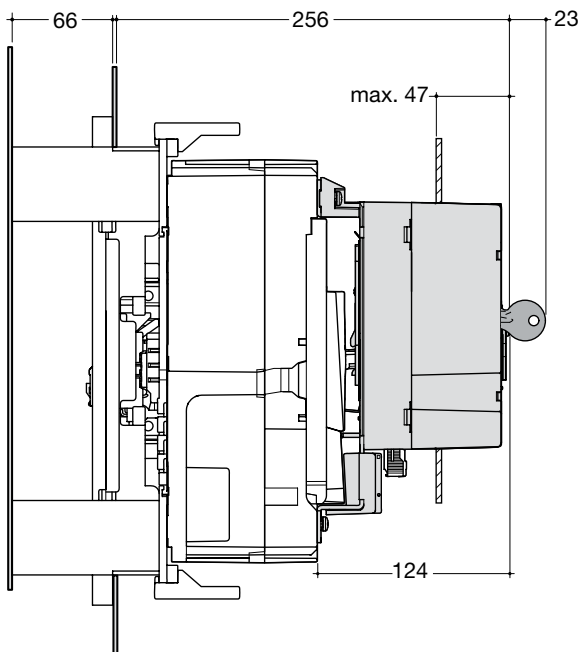


P630 Motor operator on withdrawable circuit breaker
3P + 4P

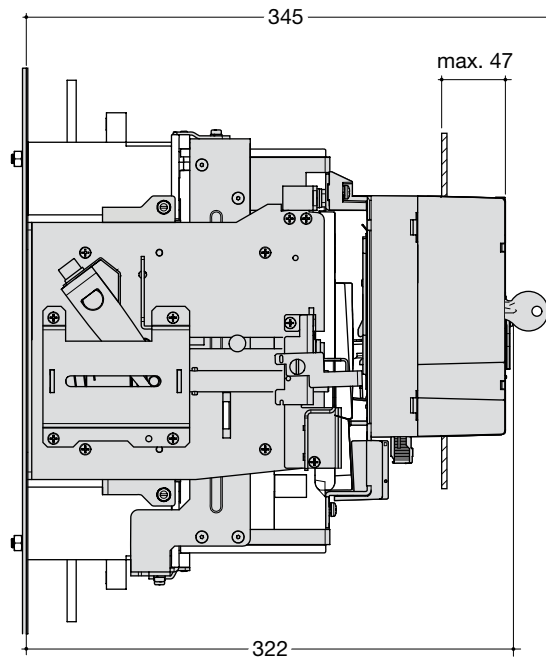


Dimensions
and
connections

Drawout system P630

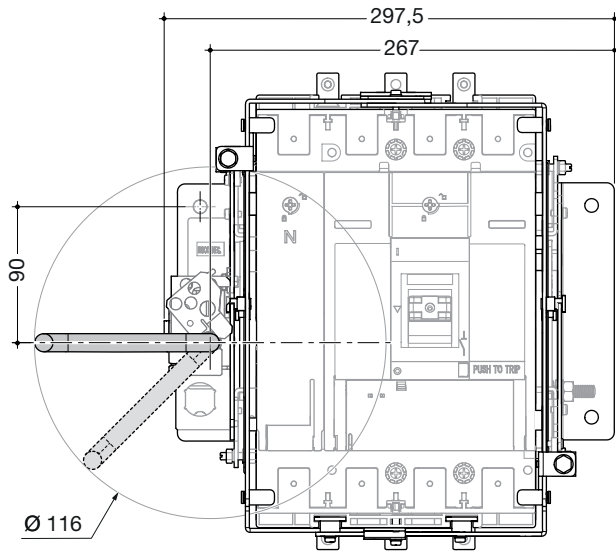


Rotary handle P160

3P

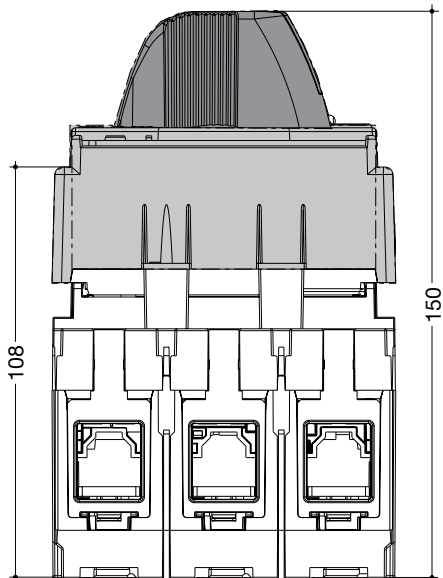


4P

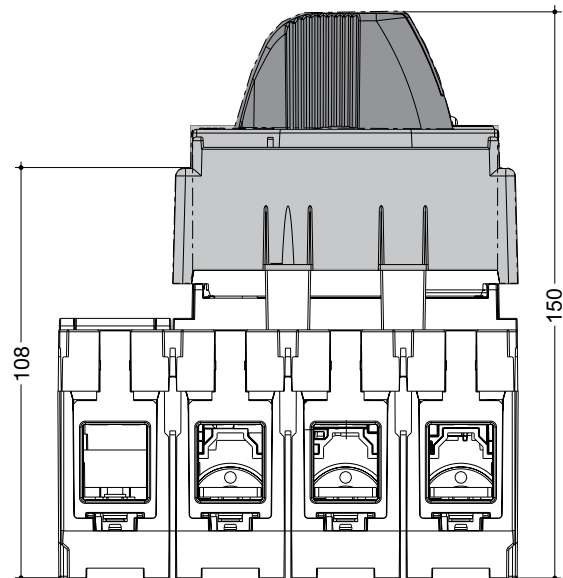


Rotary handle P250

3P

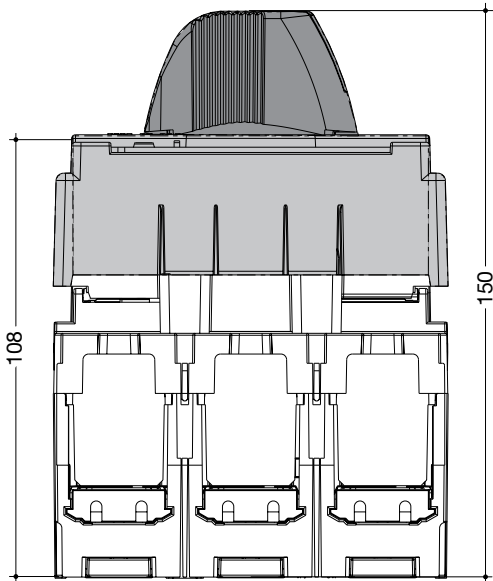


4P

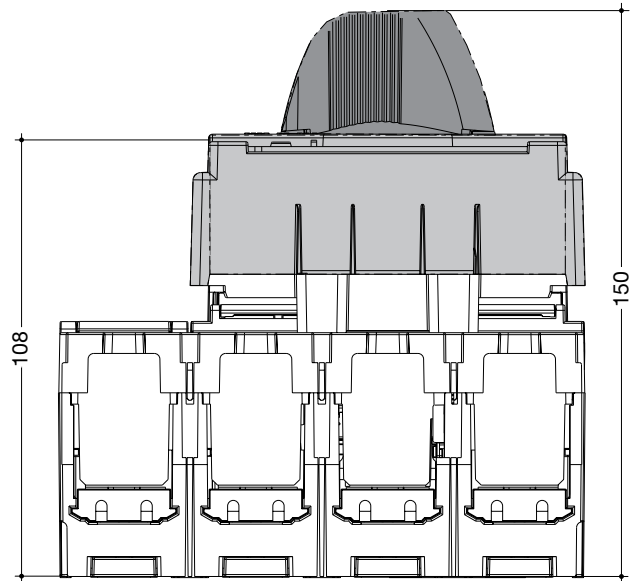


Rotary handle P630

3P

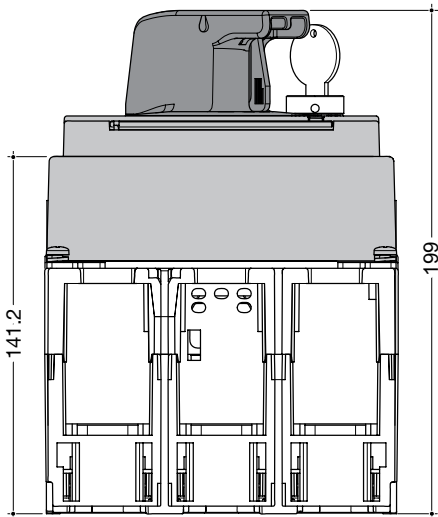


4P

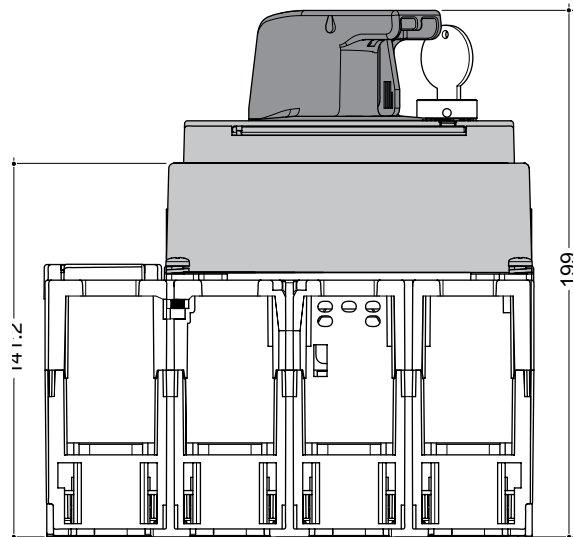


Dimensions
and
connections

Panel cut-out rotary handle P160

3P

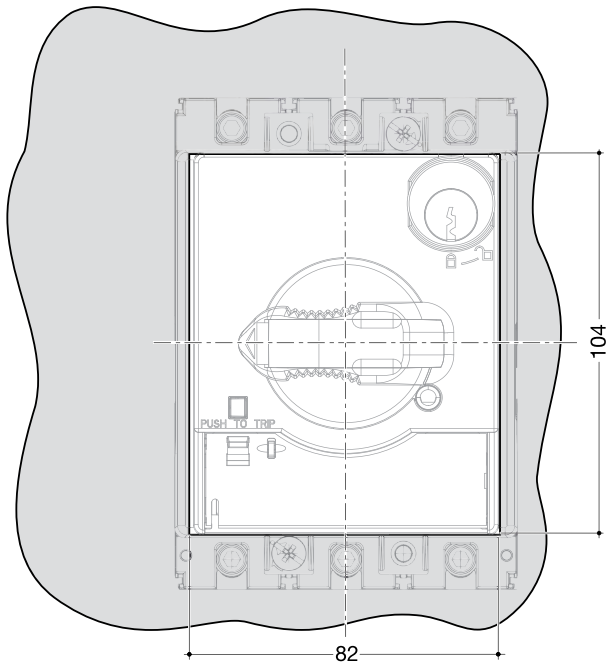


4P

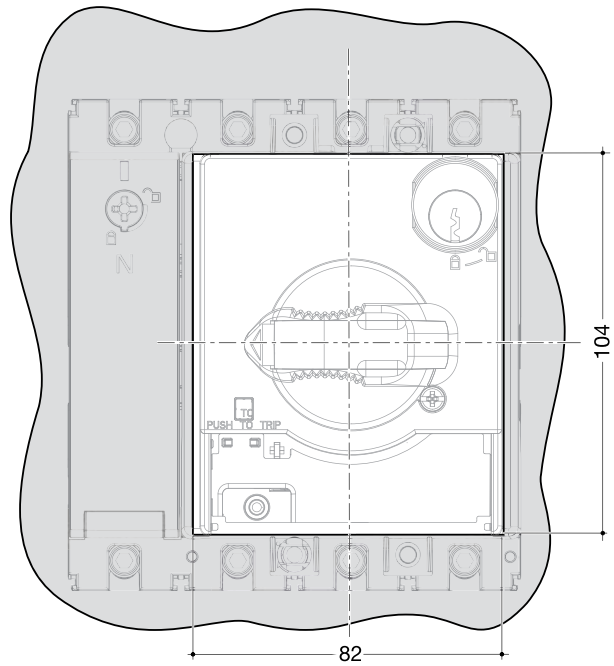


Panel cut-out rotary handle P250

3P

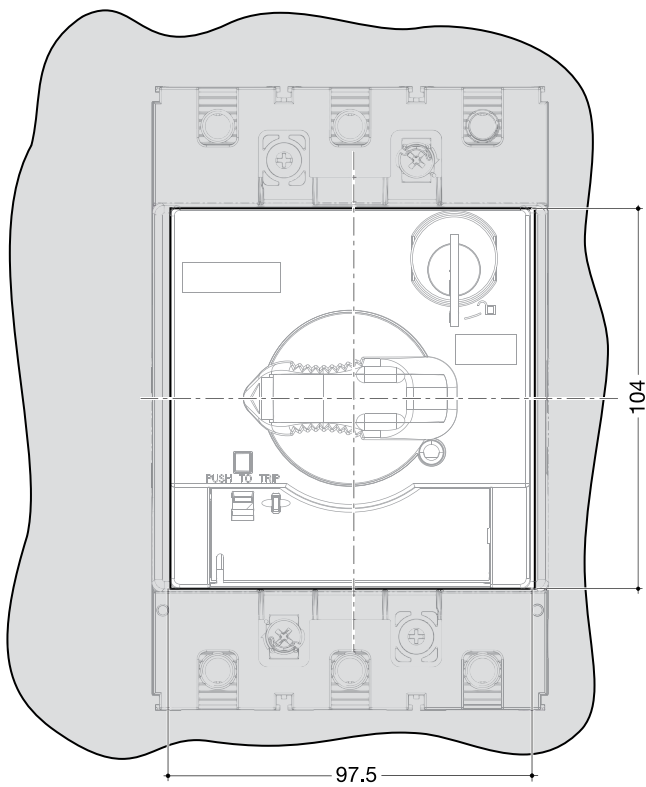


4P

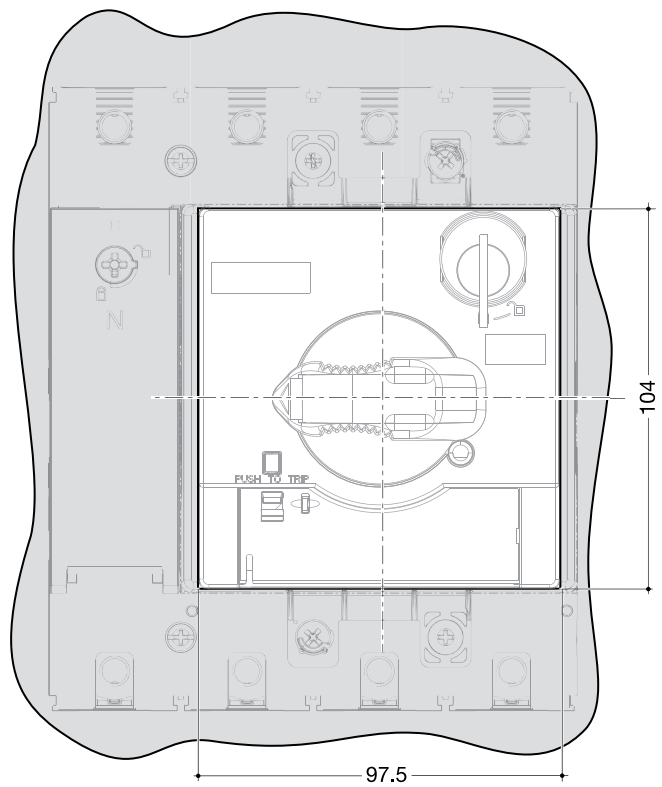


Panel cut-out rotary handle P630


3P

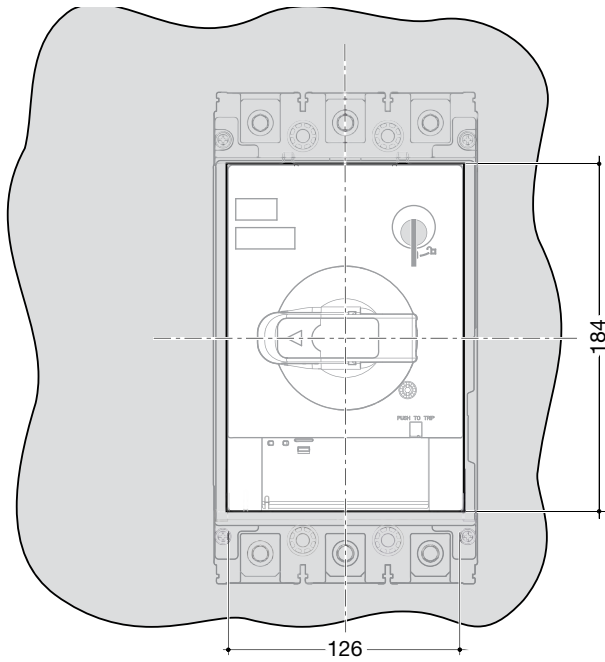

4P

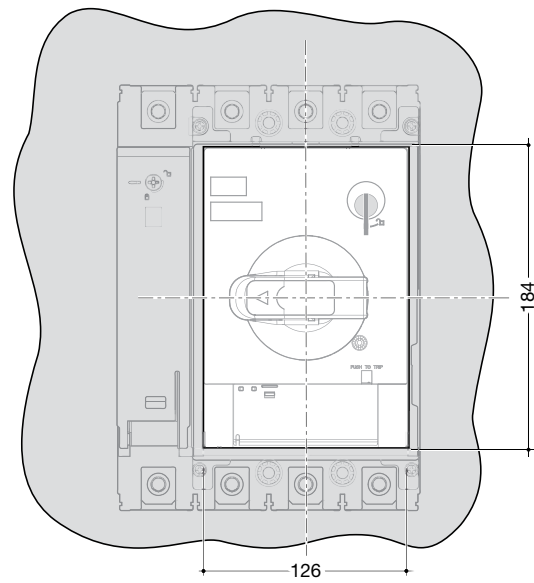


Extended rotary handle P160/P250

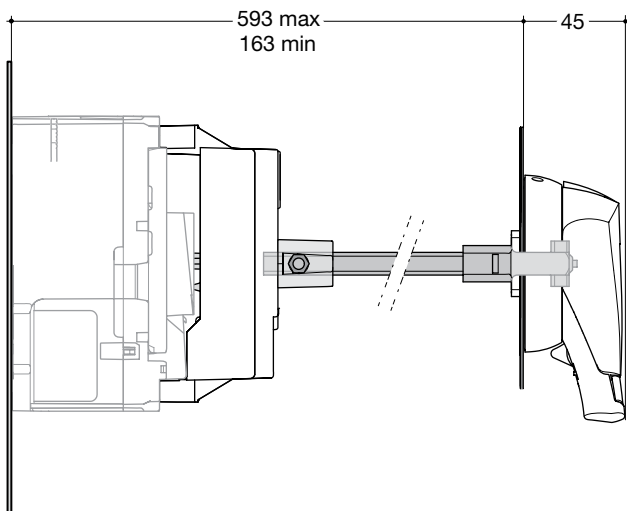


Panel cut-out extended rotary handle P160/P250


3P

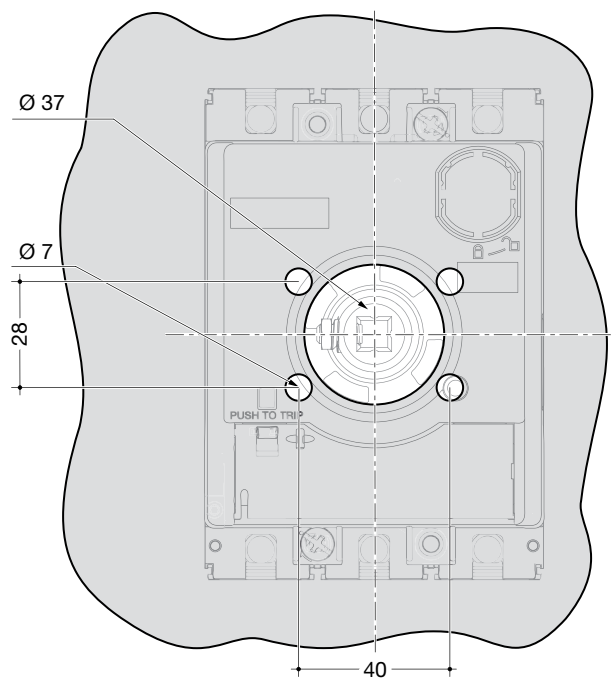


4P

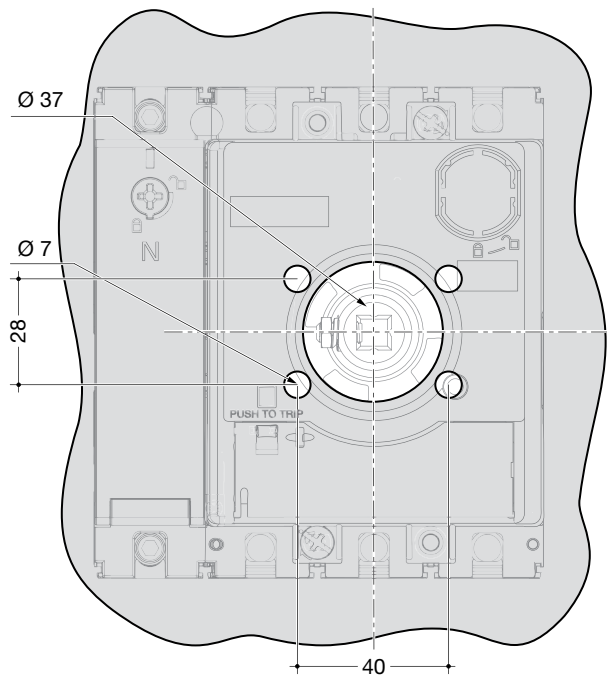

Extended rotary handle P630

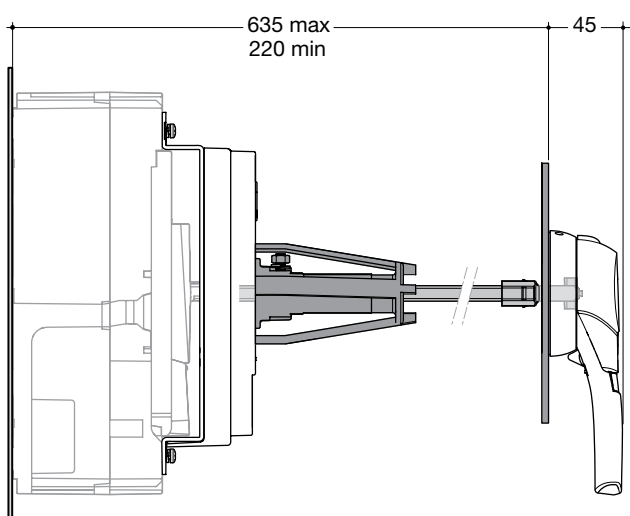


Extended rotary handle P630 on drawout

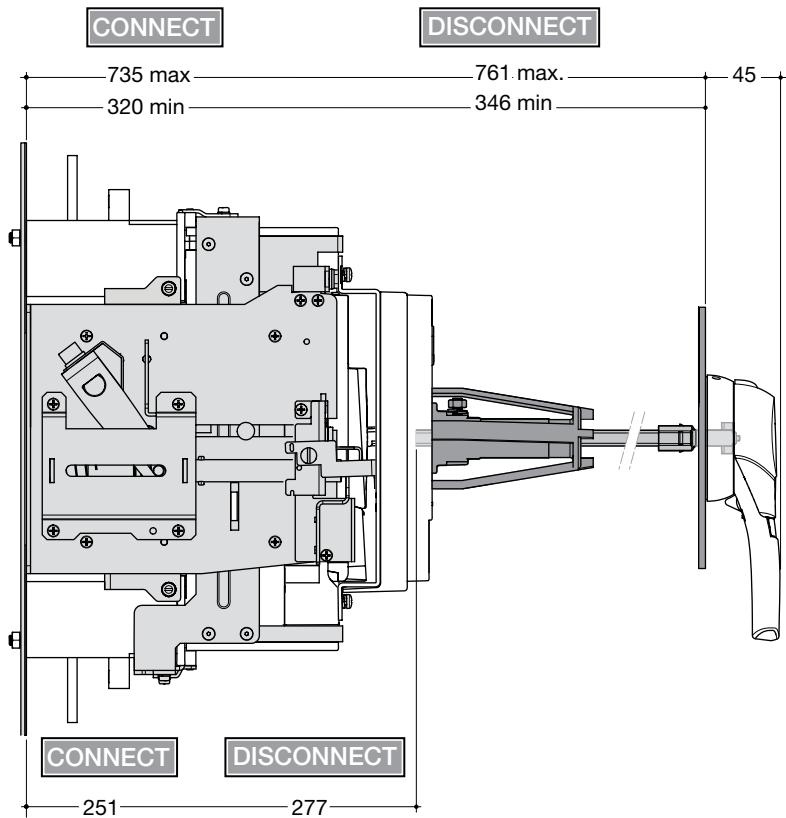


Panel cut-out extended rotary handle P630

3P

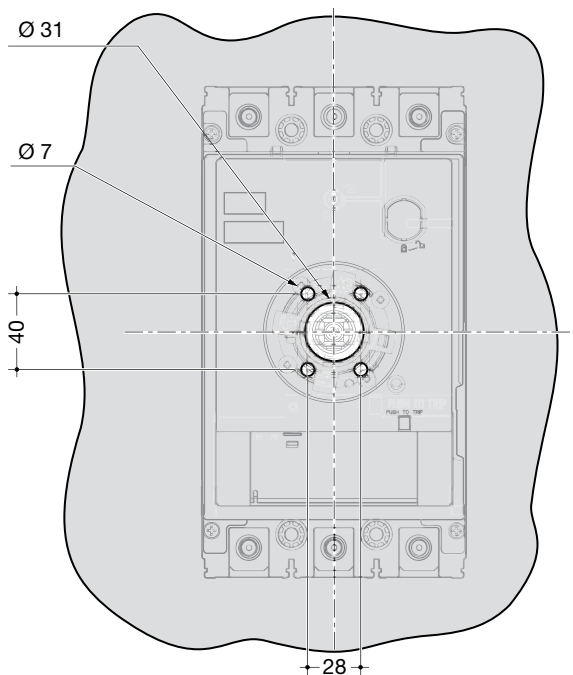


4P

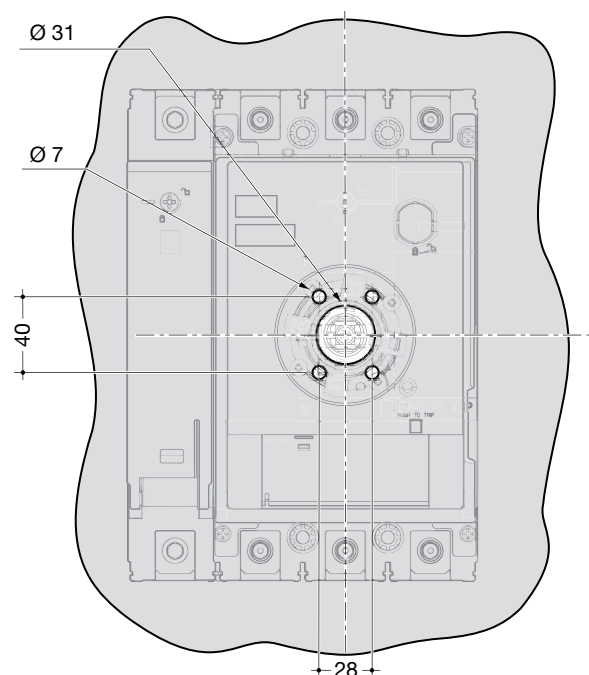


Dimensions
and
connections

Panel cut-out motor operator P250

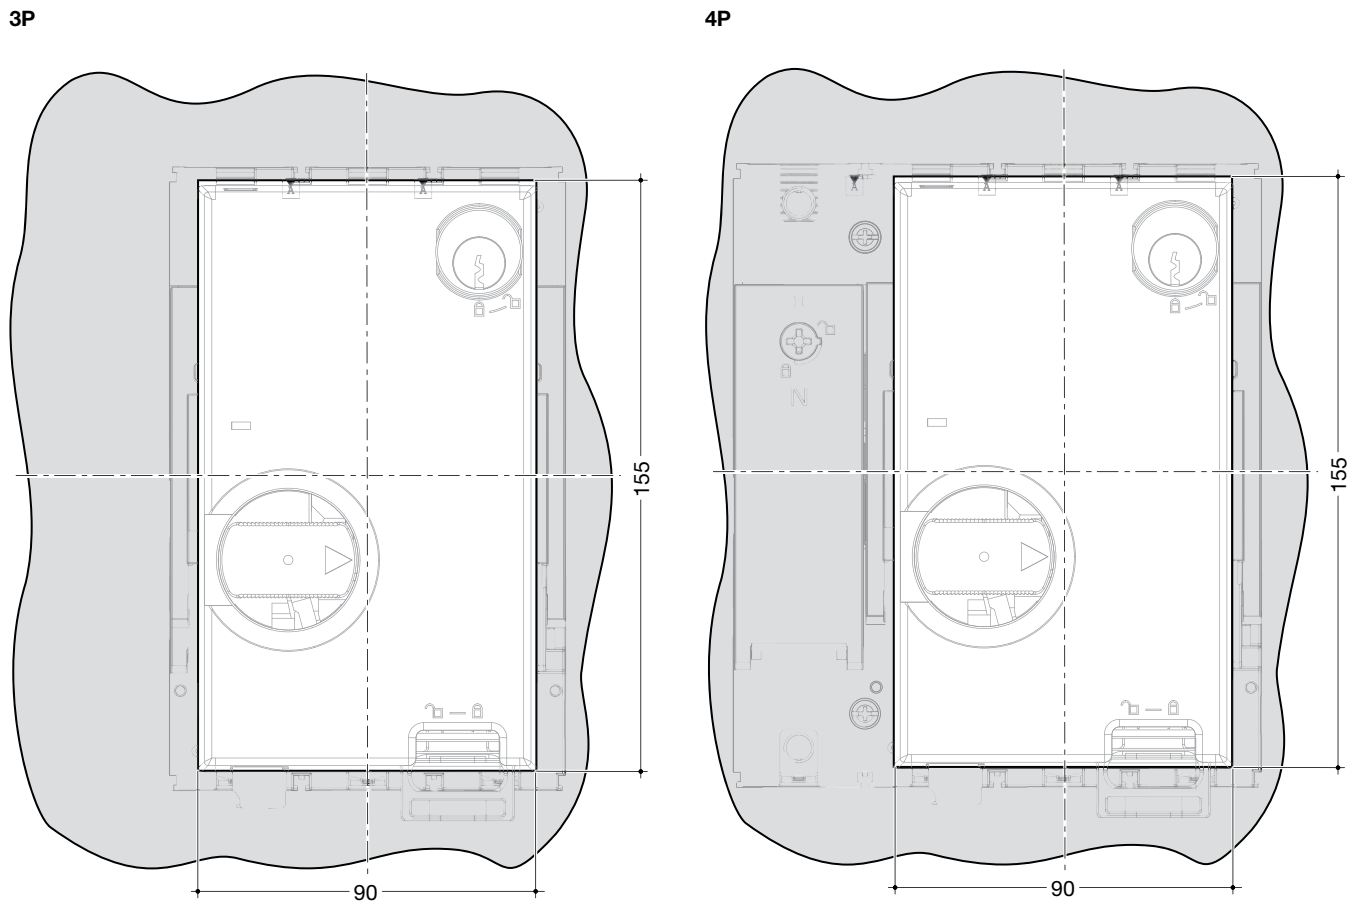


Motor operator with fixed circuit breaker P250

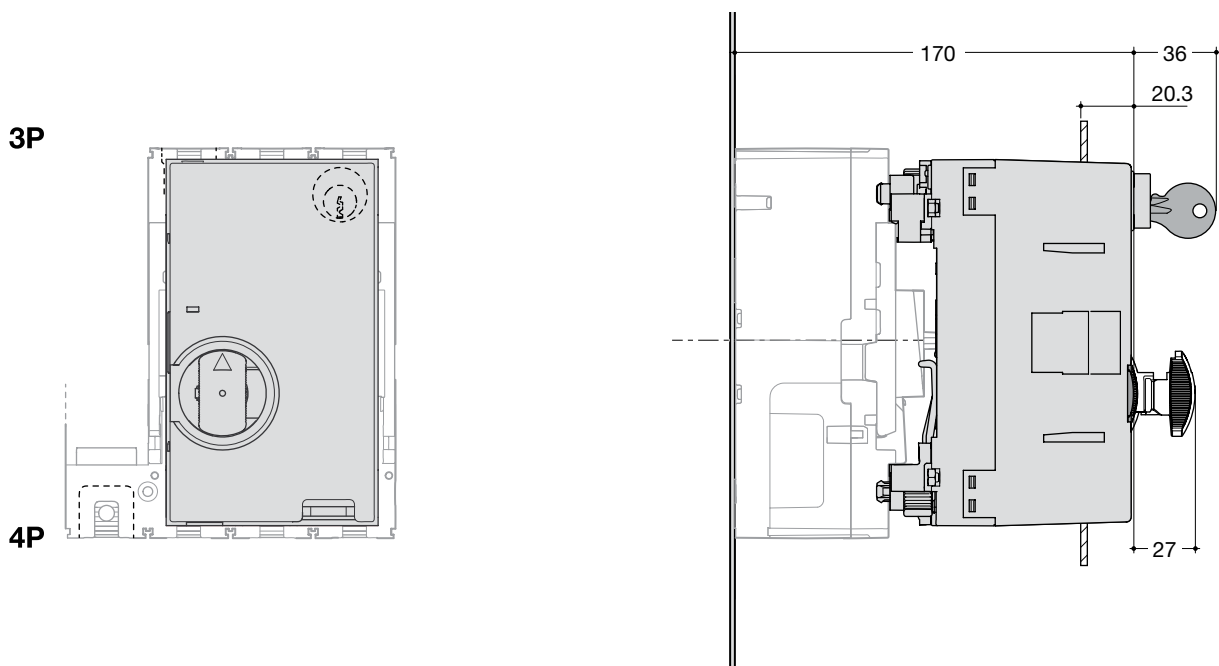


Panel cut-out motor operator P630

3P


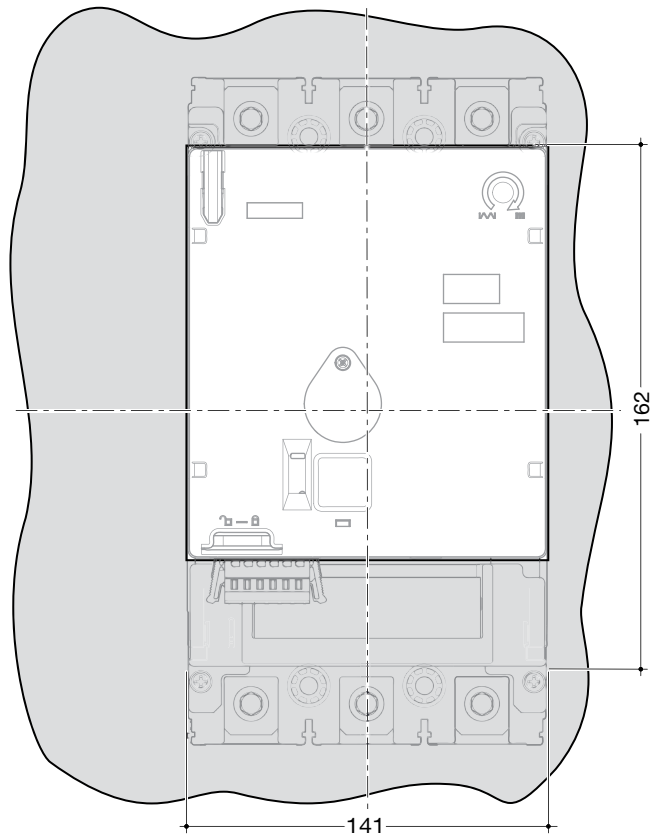


4P

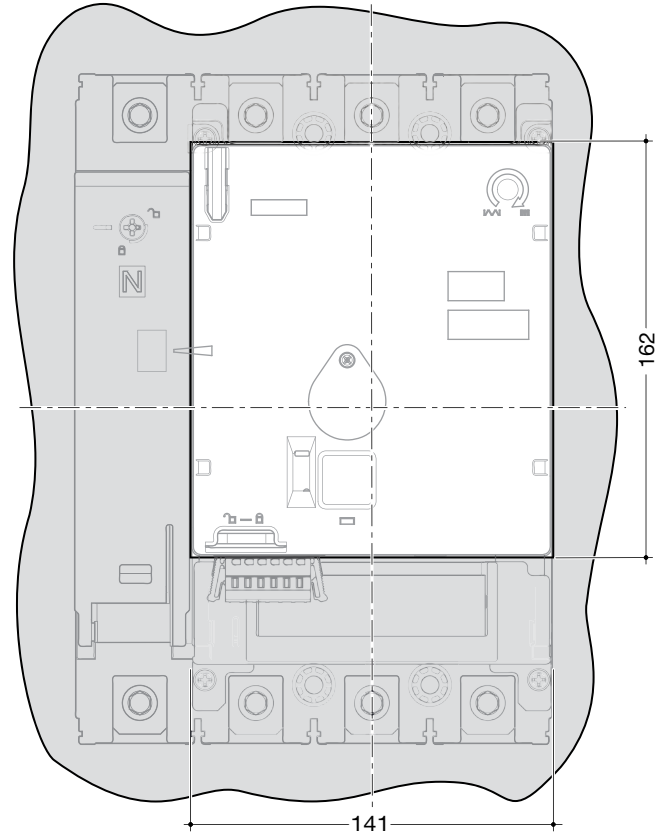

Motor operator with fixed circuit breaker P630


4P

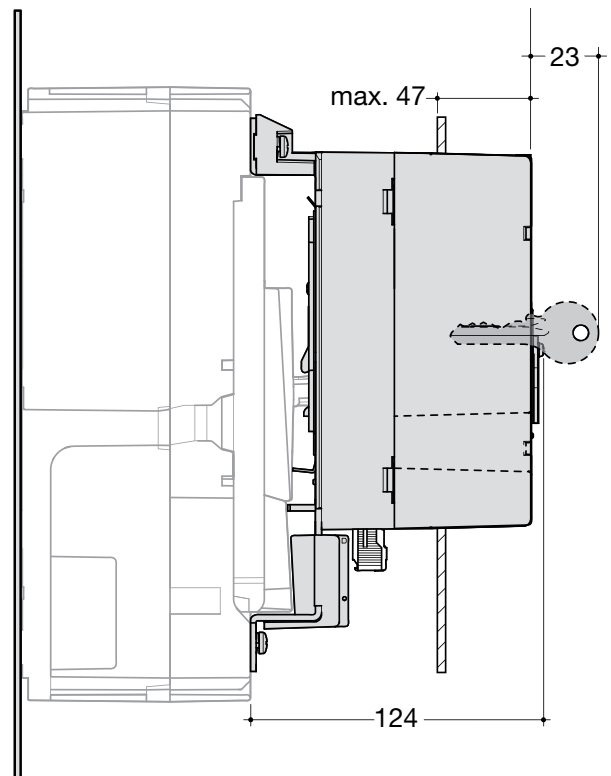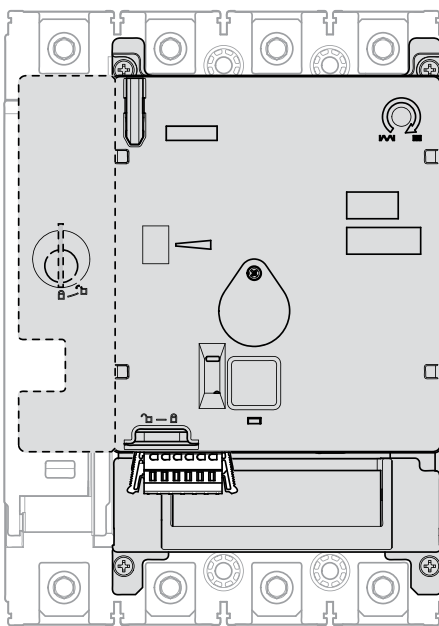


Dimensions
and
connections

Panel cut-out circuit breaker P160

3P

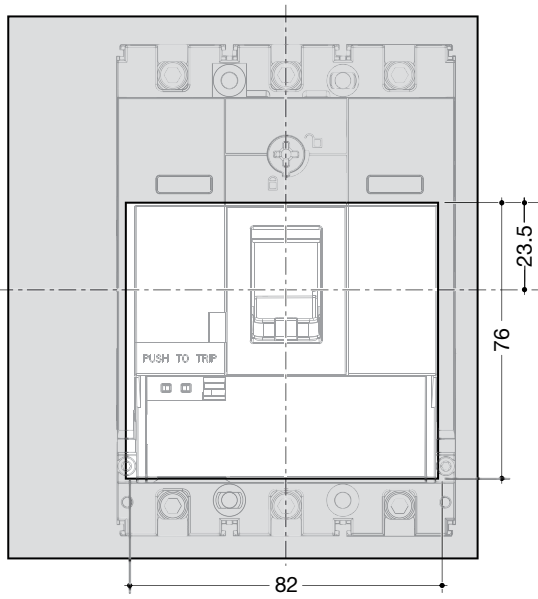


4P

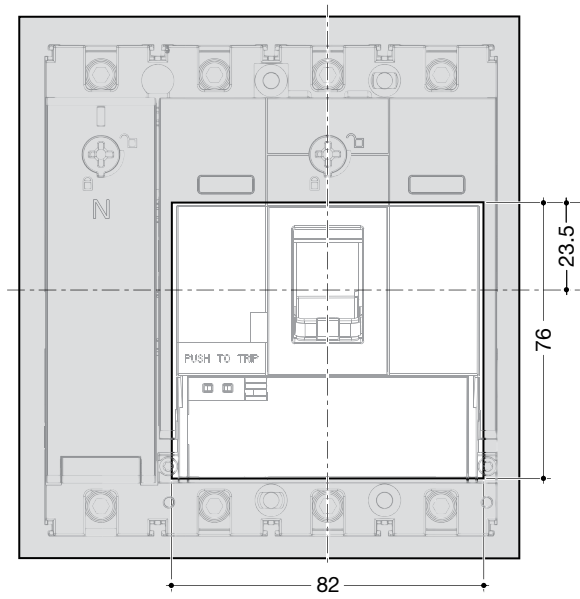


Panel cut-out circuit breaker P250

3P

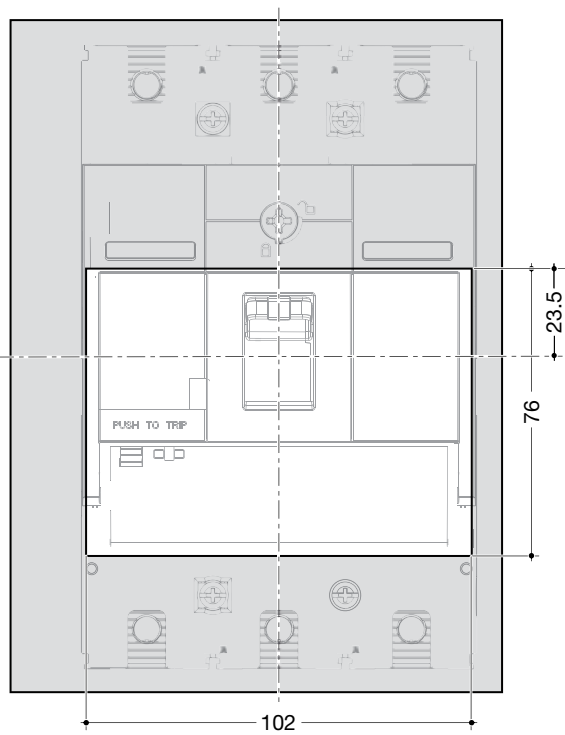


4P

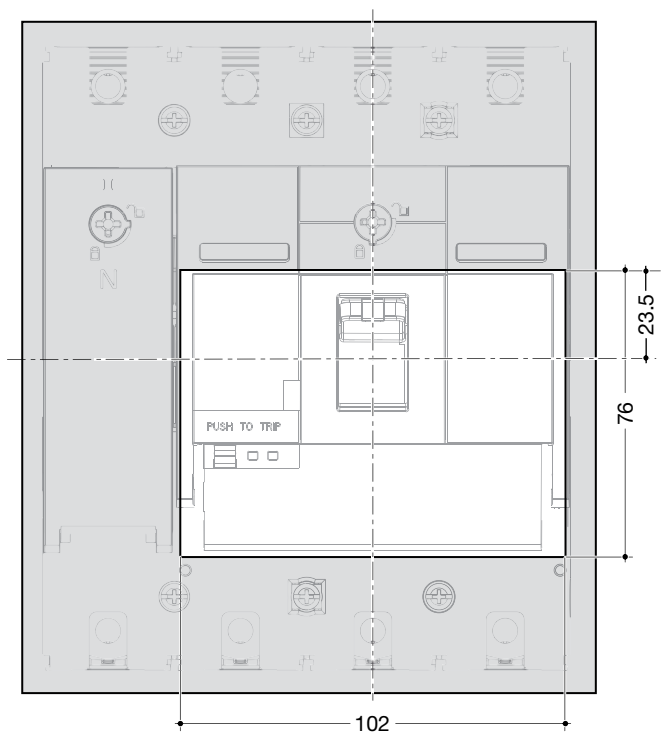


Panel cut-out circuit breaker P630


3P

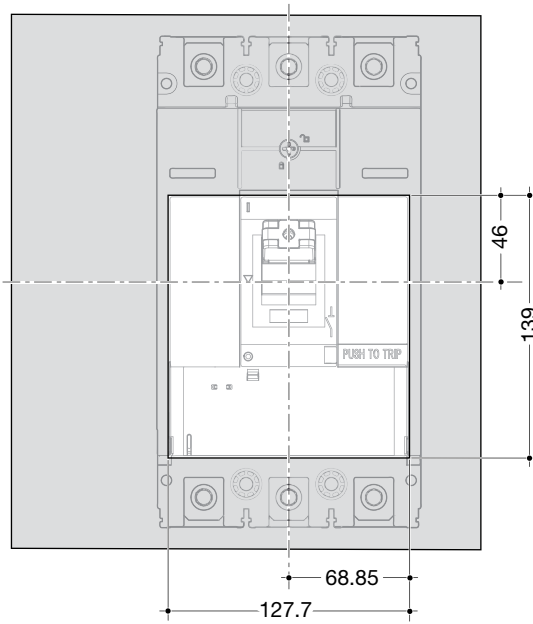


4P

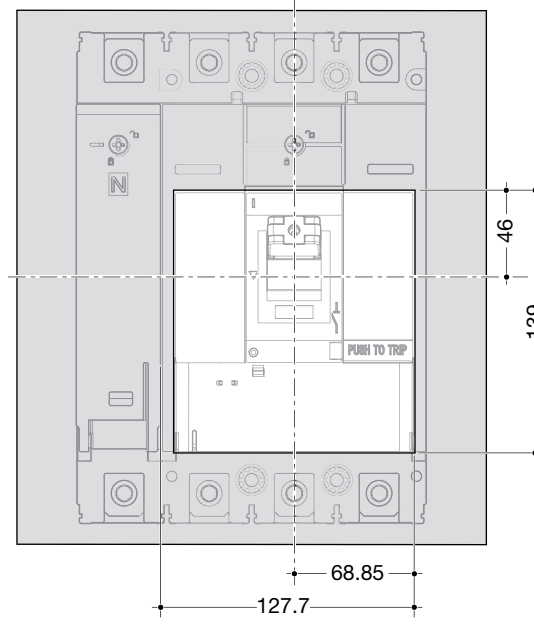

3P

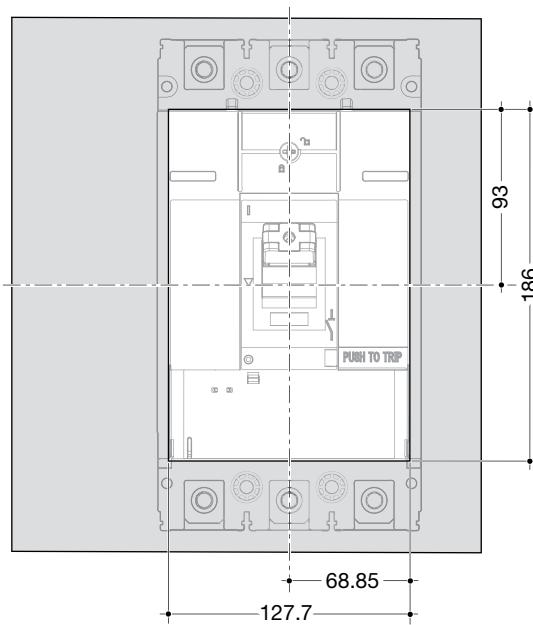


4P

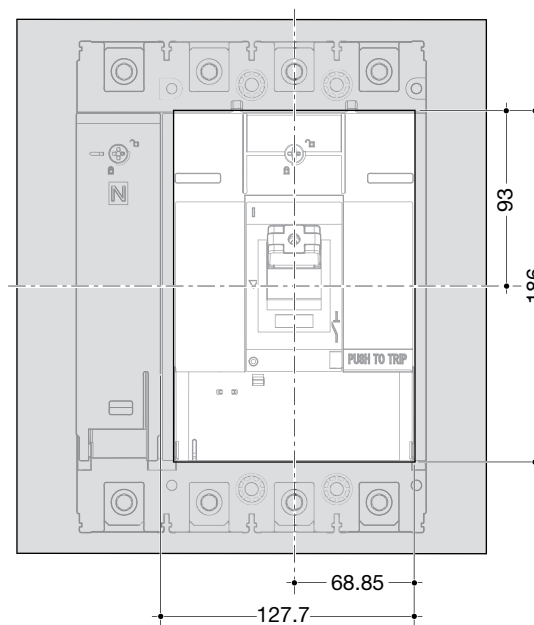


Al/Cu external cable terminals P160

1 wire

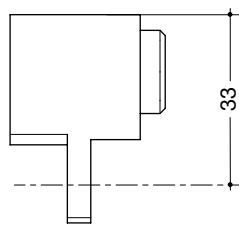


6 wires

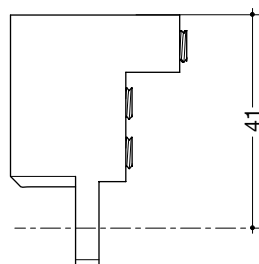


Al/Cu external cable terminals P250


1 wire

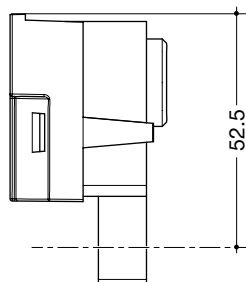

2 wires

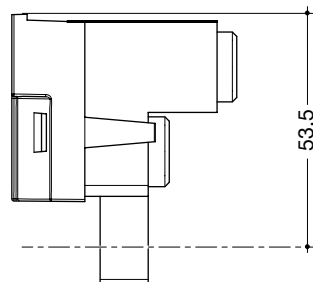


6 wires

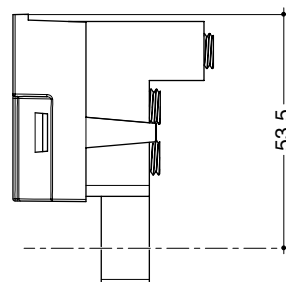


Al/Cu external cable terminals P630



1 wire

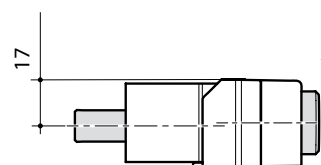



2 wires

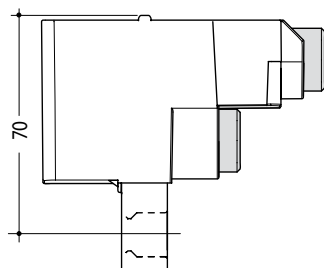

Straight terminal extensions P160

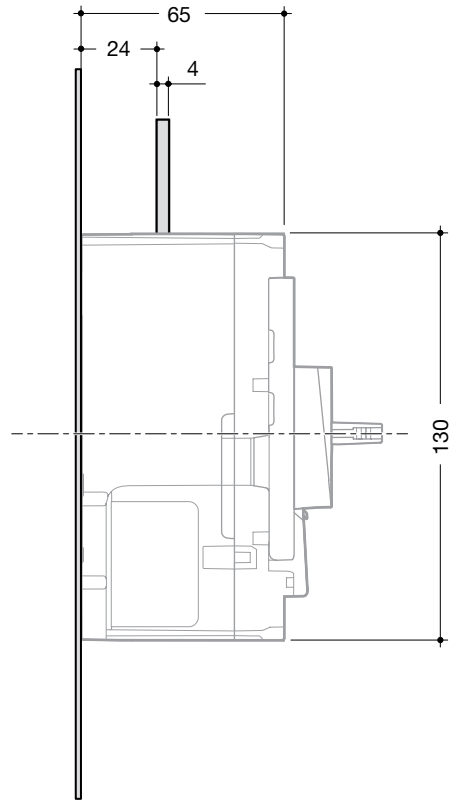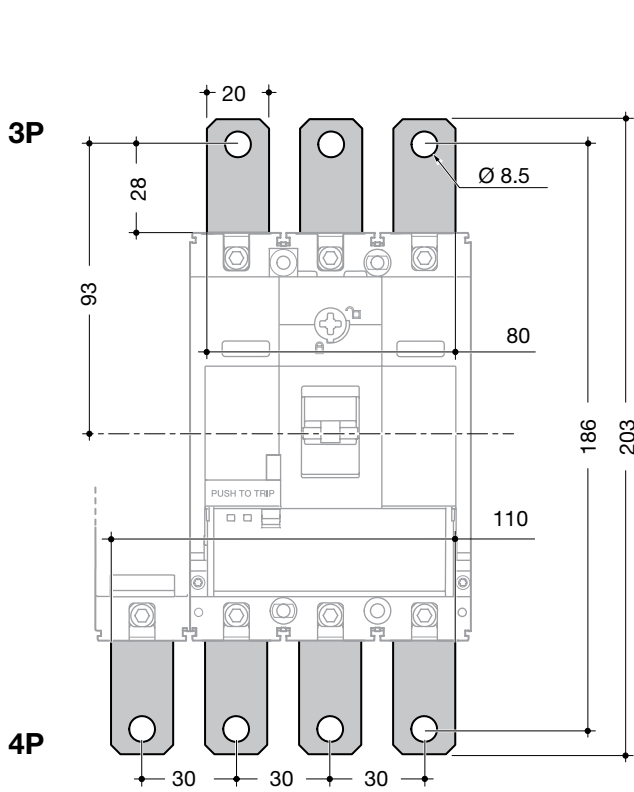


Straight terminal extensions P250

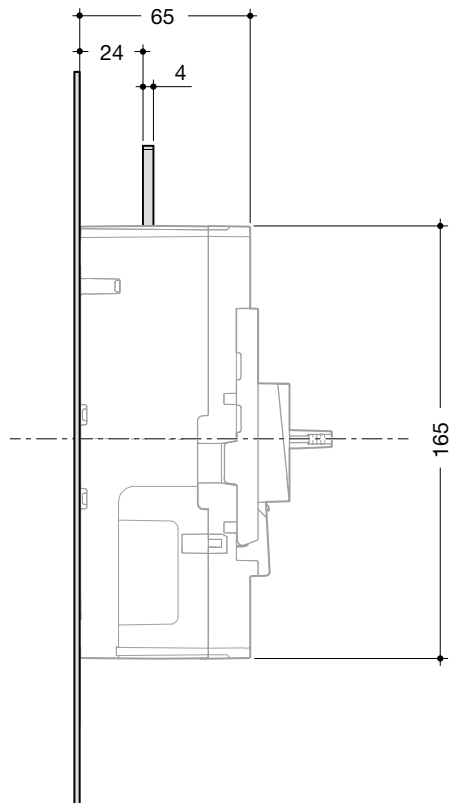
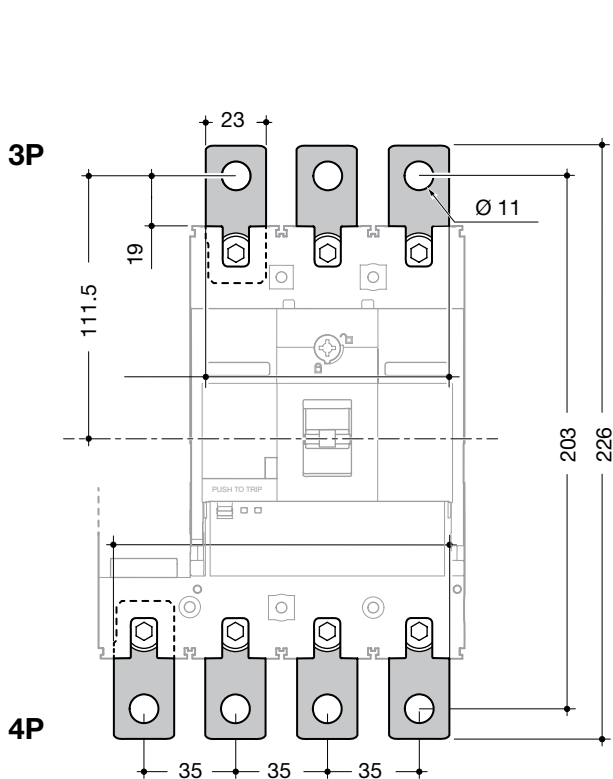


Dimensions and connections



Straight terminal extensions P630

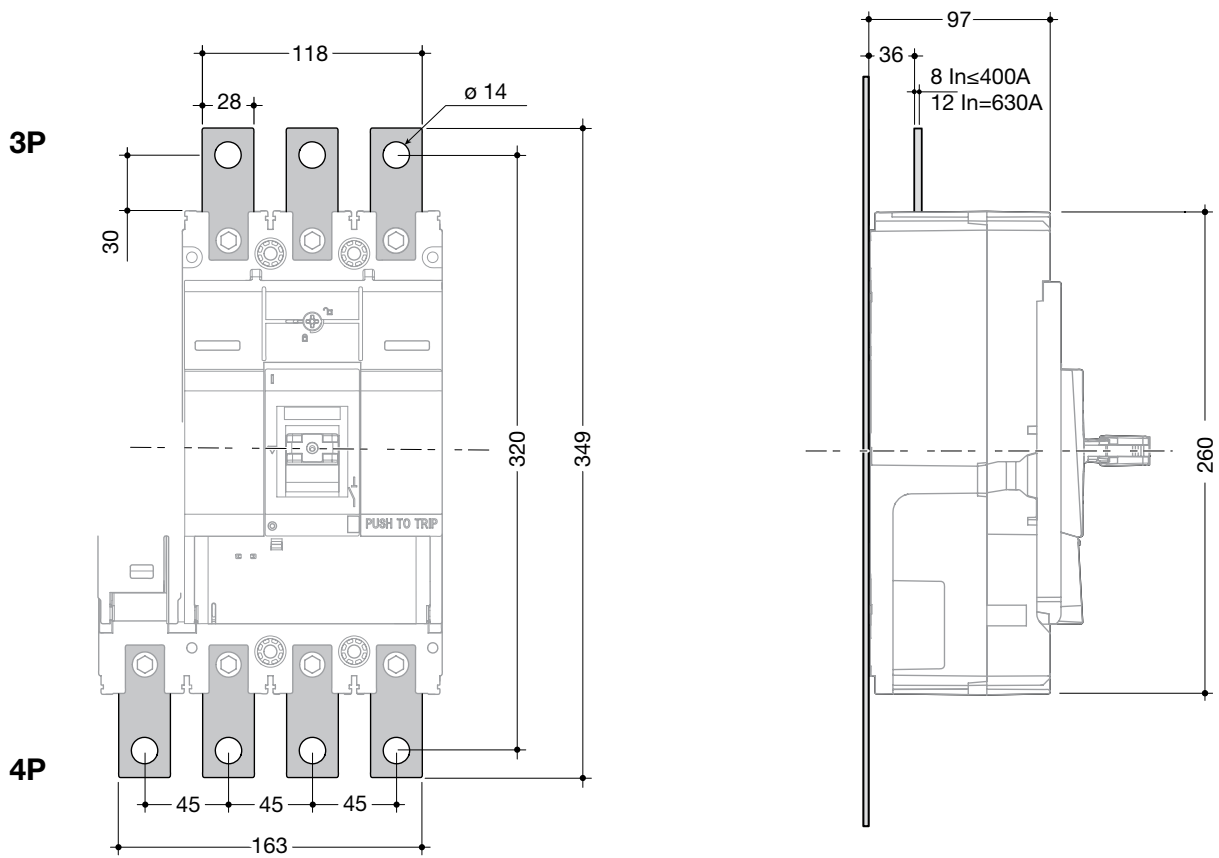

Spreaders P160

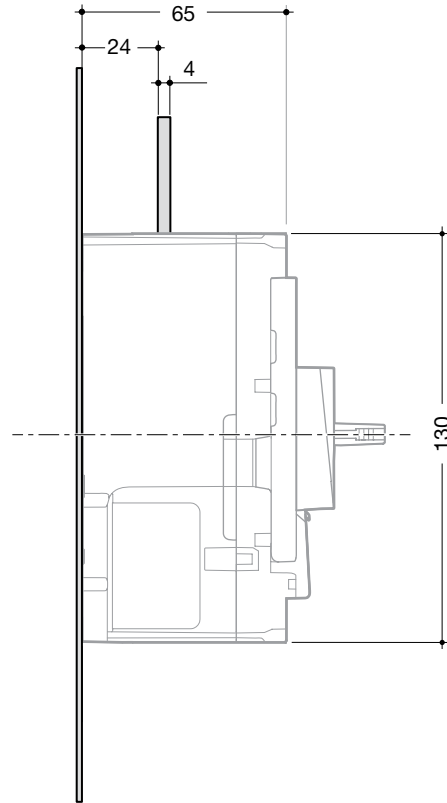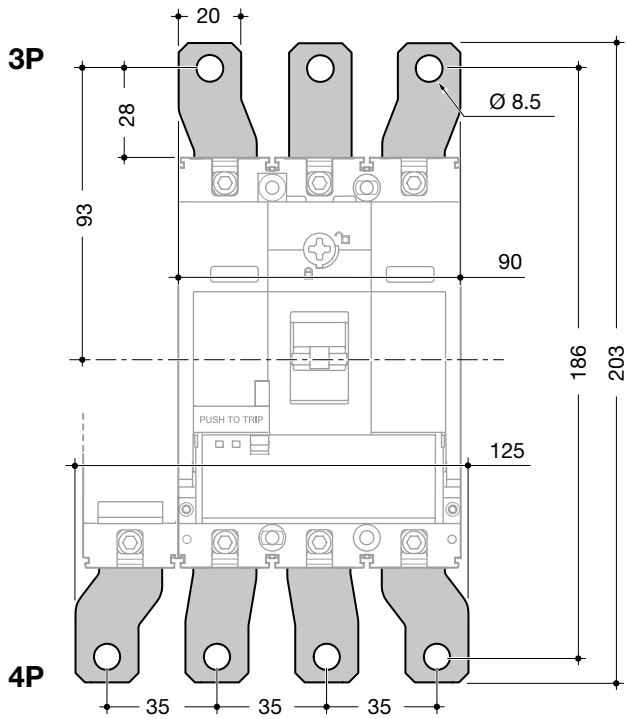


Spreaders P250

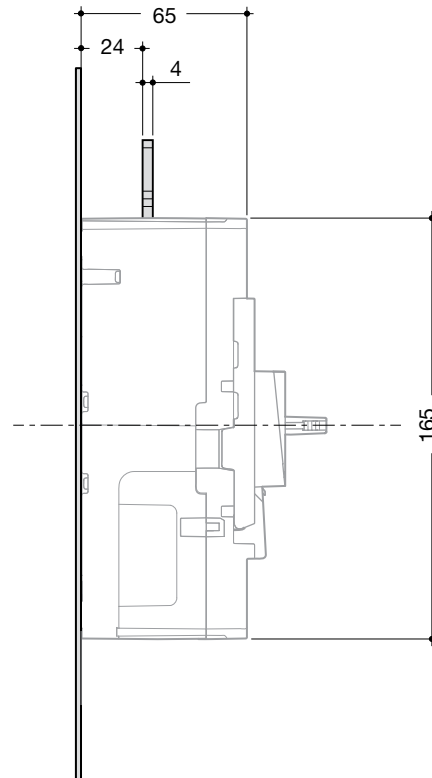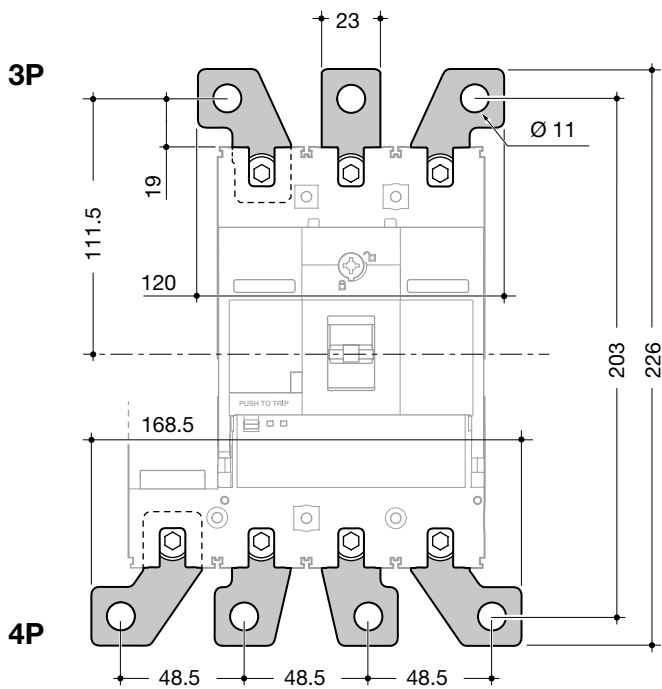


Dimensions and connections


Spreaders P630

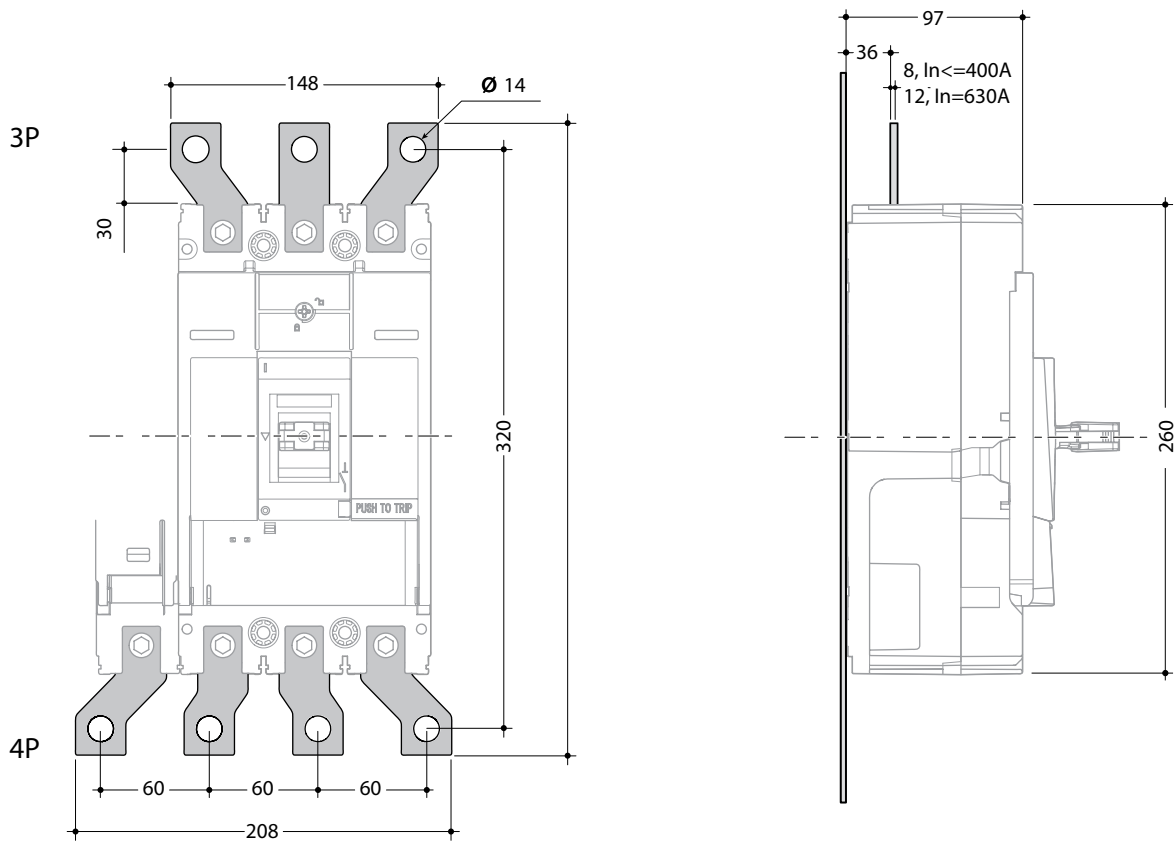


Rear connections P160

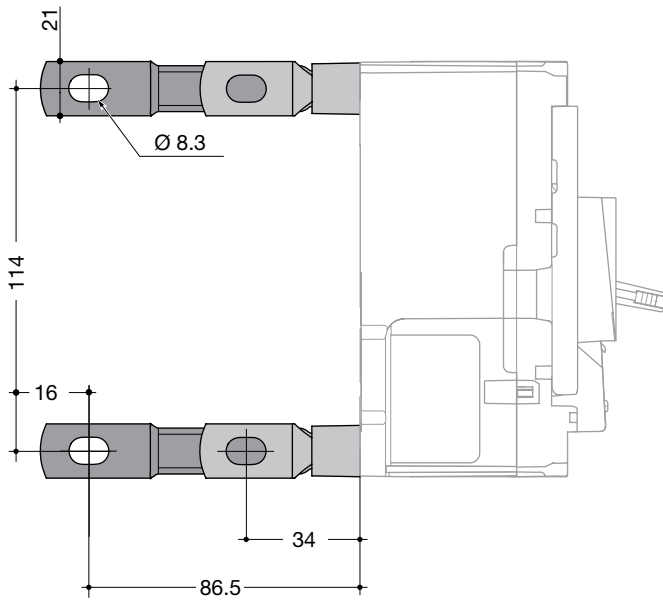


Rear connections P250

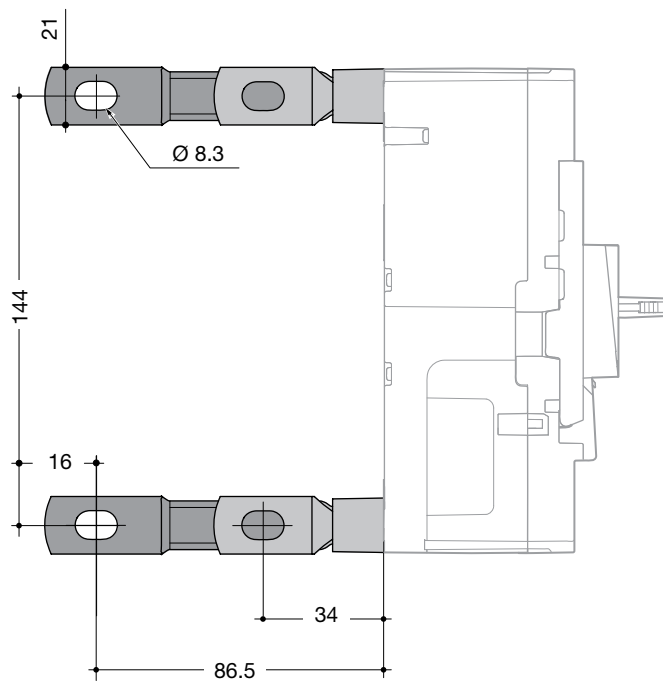


Rear connections P630

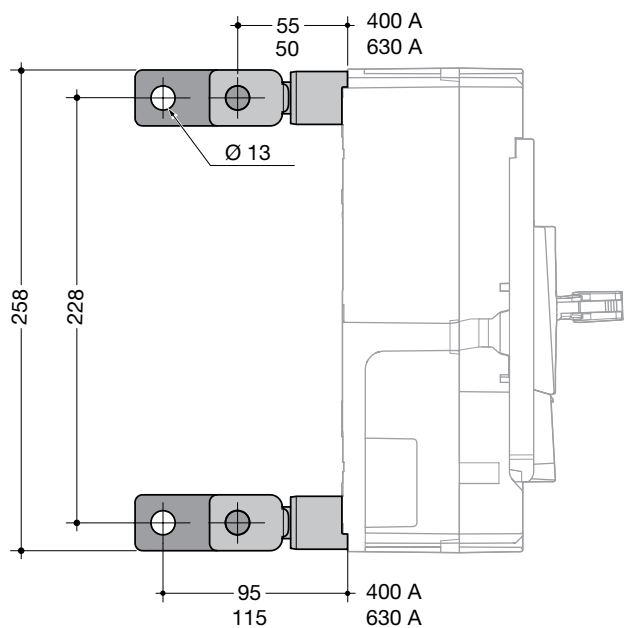


Interphase barriers P160

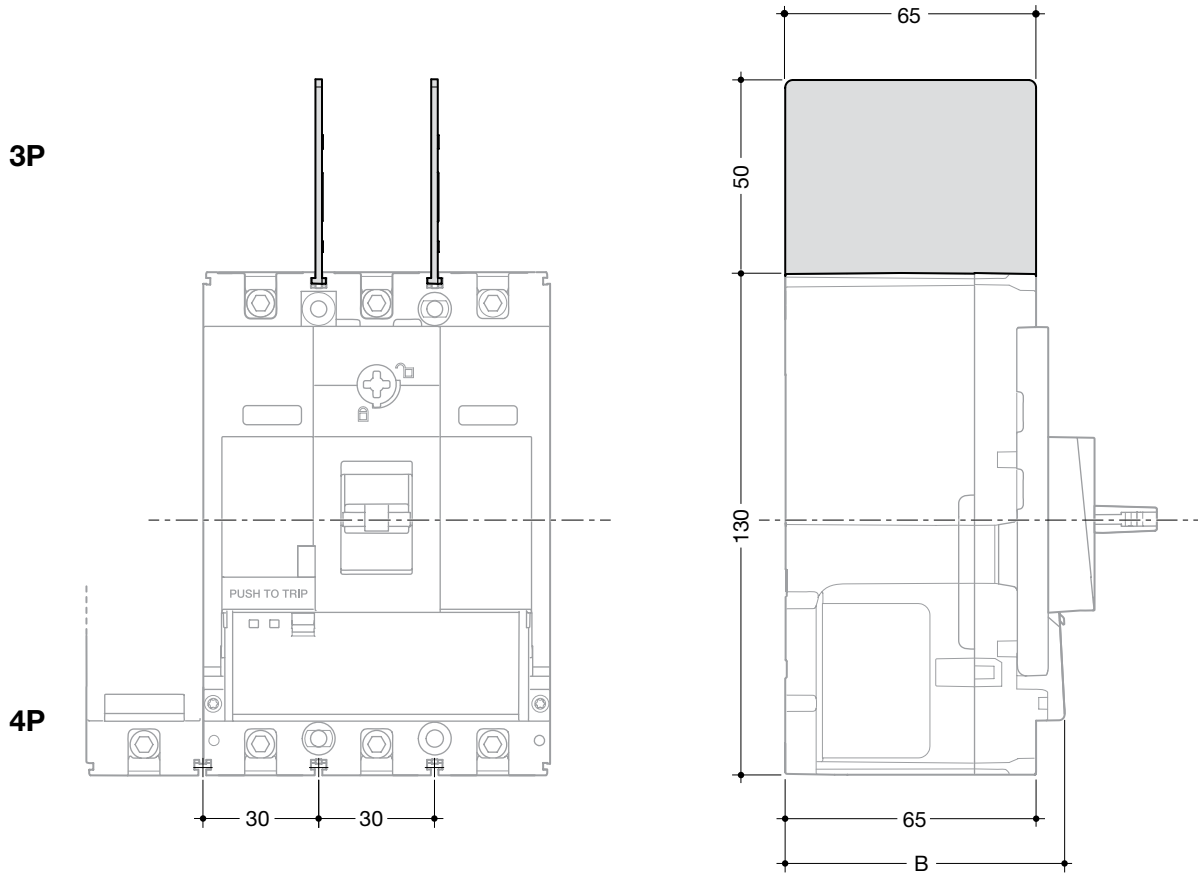


Interphase barriers P250

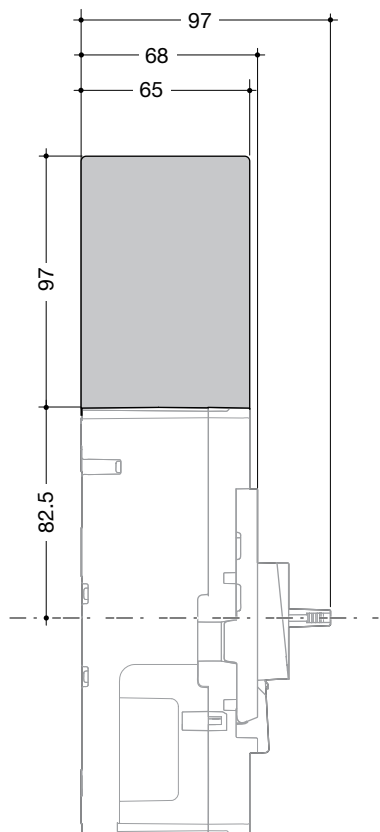

Interphase barriers P630

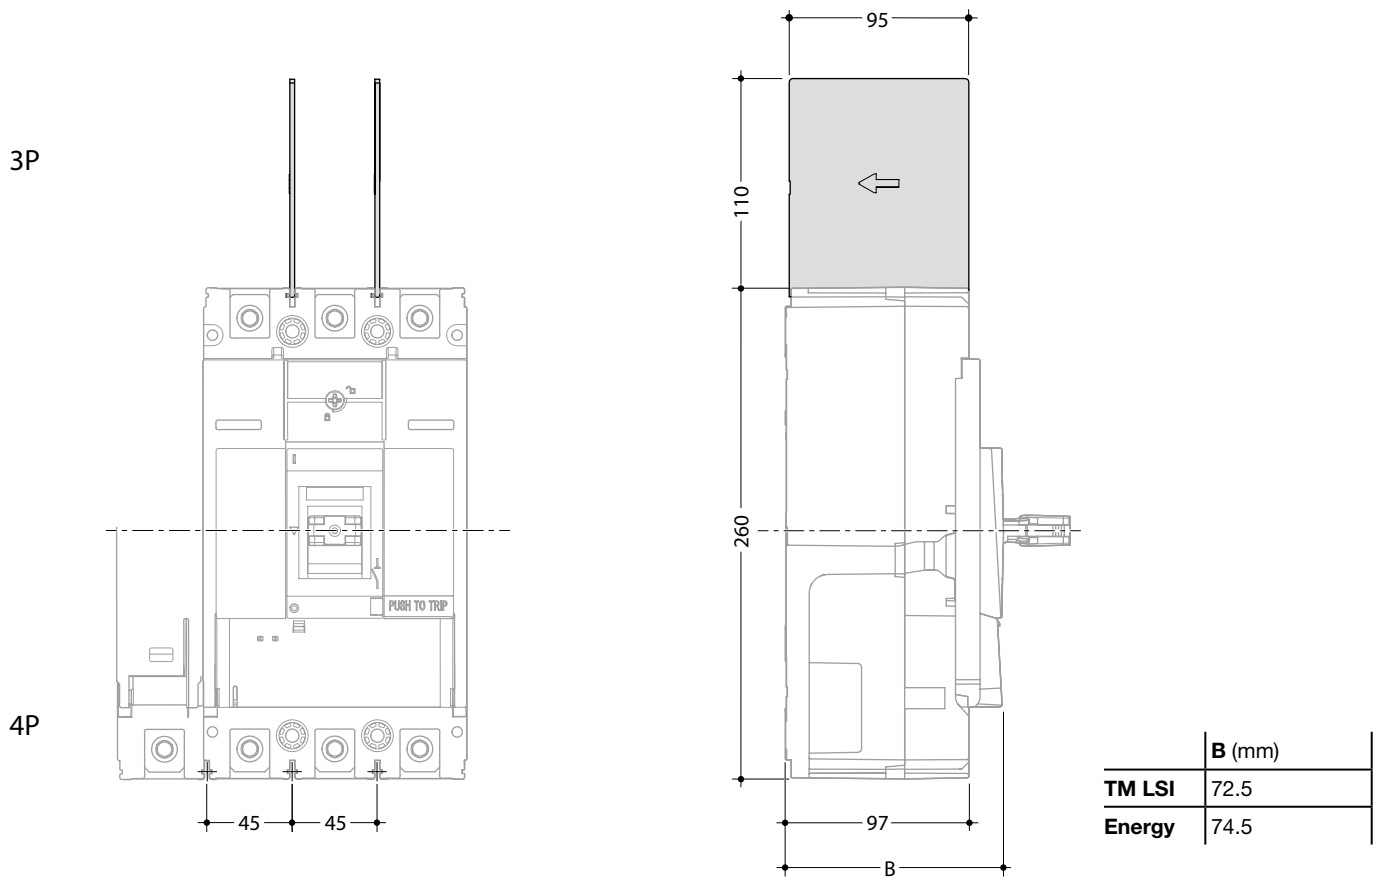


Terminal cover P160

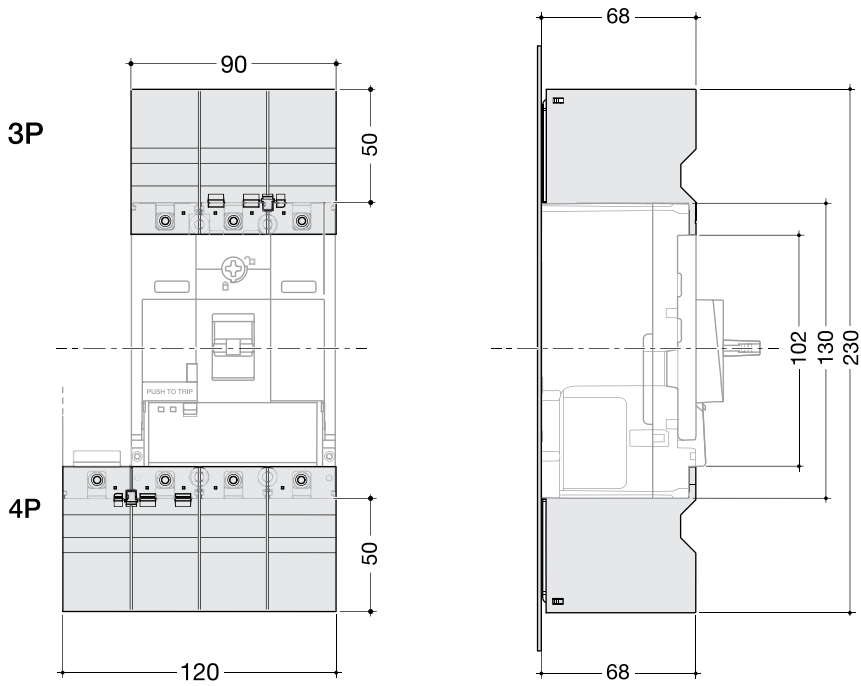

P160 Terminal cover


Terminal cover P250

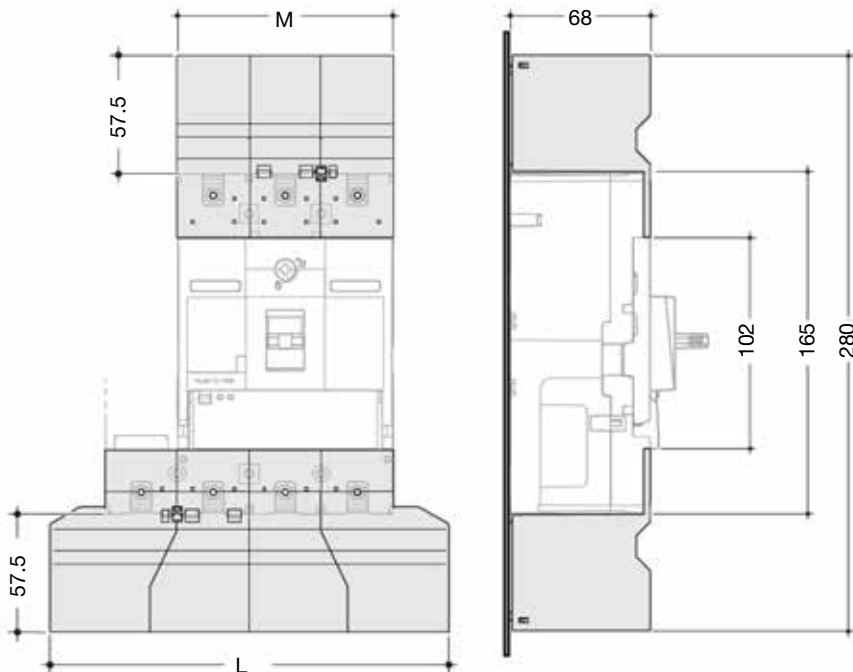

P250 Terminal cover


| | L (mm) | M (mm) |
|-----------|--------|--------|
| 3P | 145.5 | 105 |
| 4P | 193.5 | 140 |

Terminal cover P630

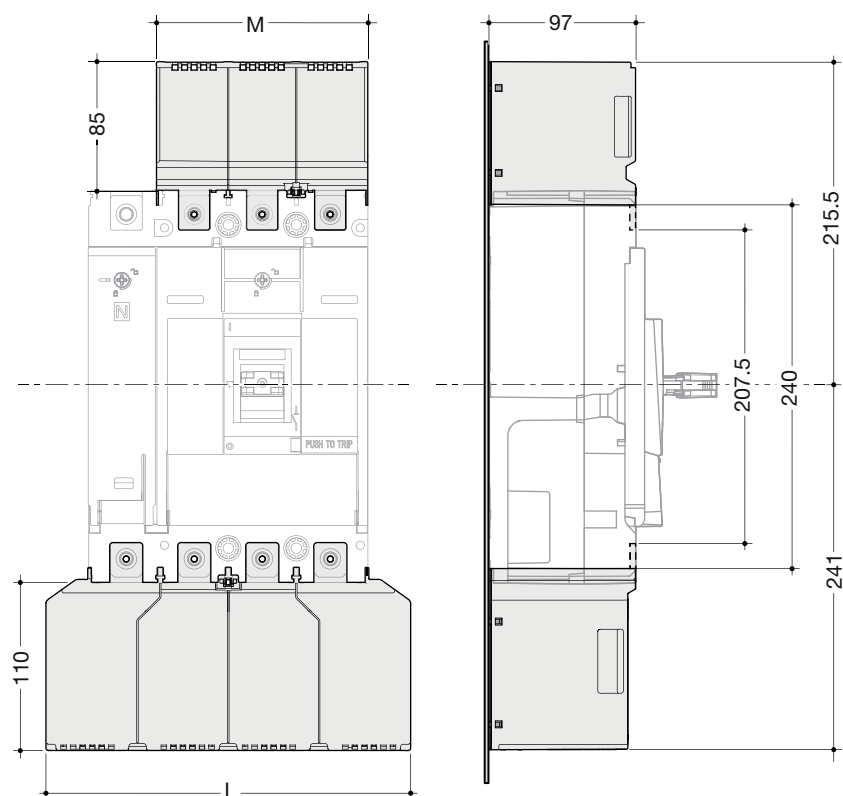


P630 Terminal cover

Panel display

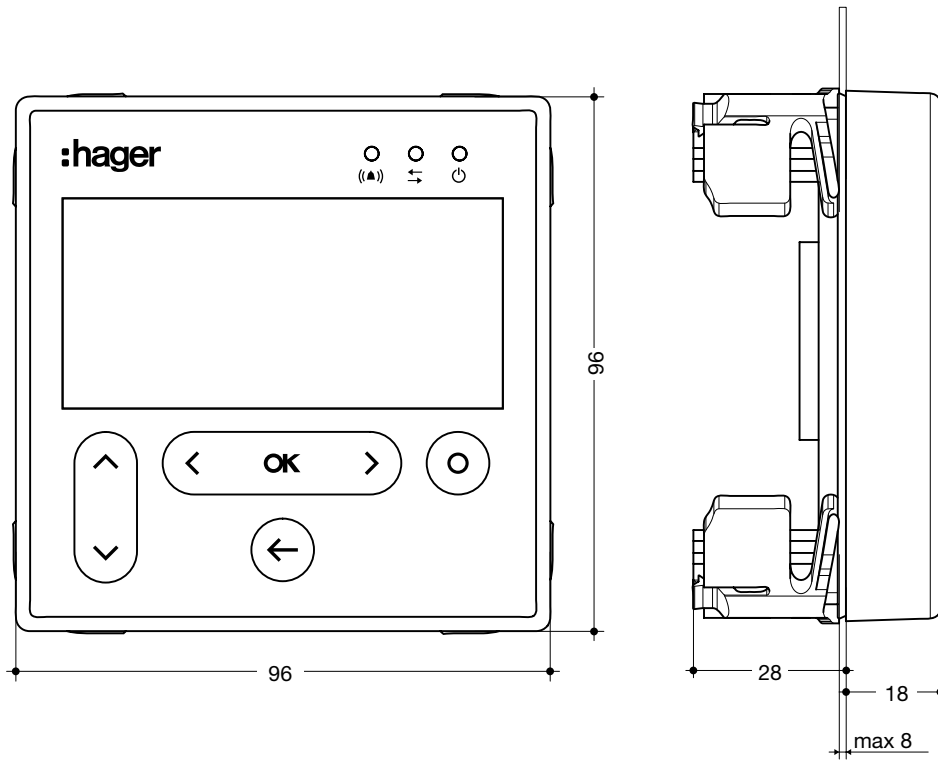

Cut-out

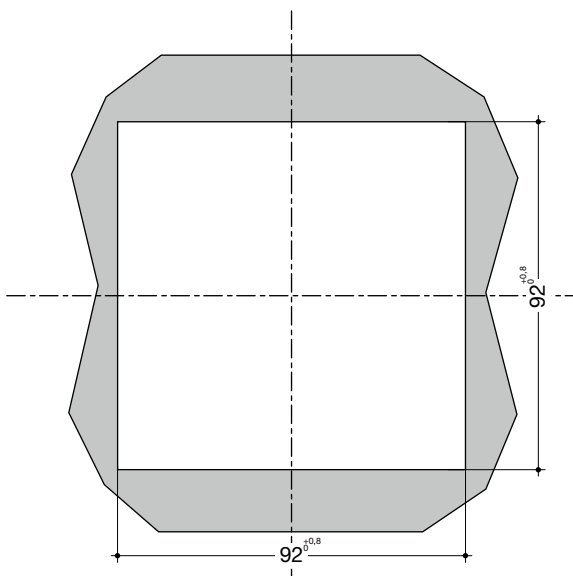


Complementary characteristics

Page


| | |
|----------------------------------------------|------------|
| 01 Tripping curves | 124 |
| 02 Current and energy limiting curves | 144 |

P160 TM


25 A

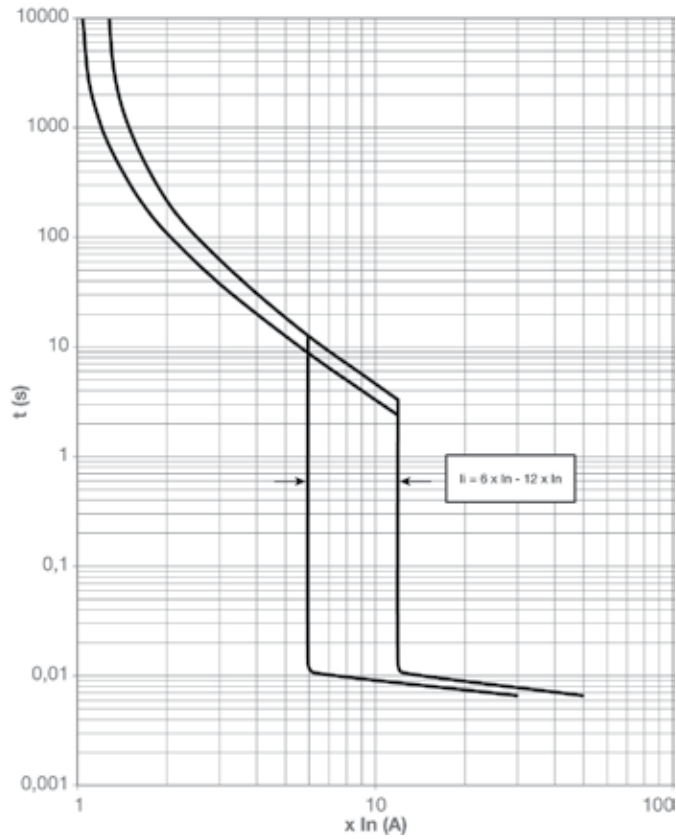


40 A

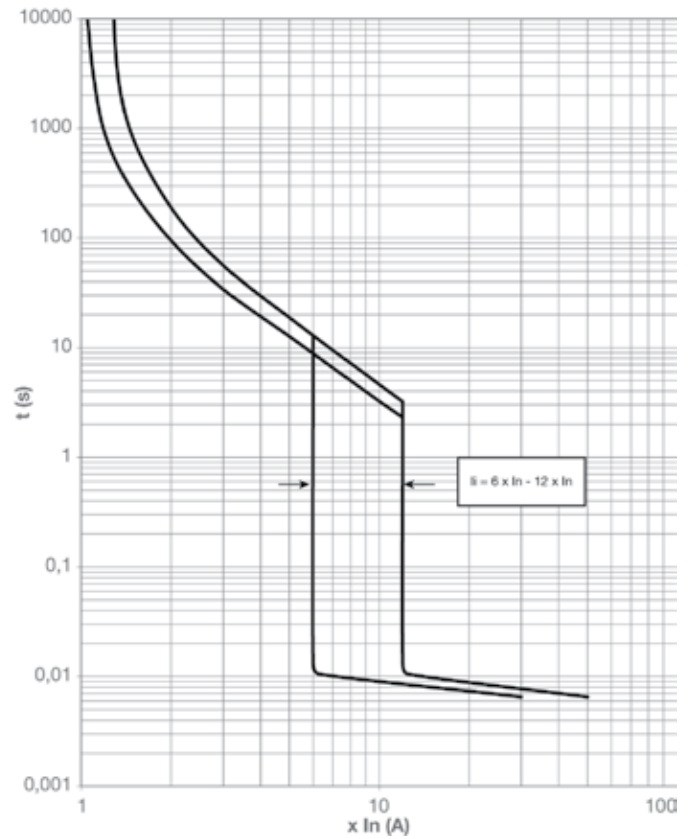

63 A

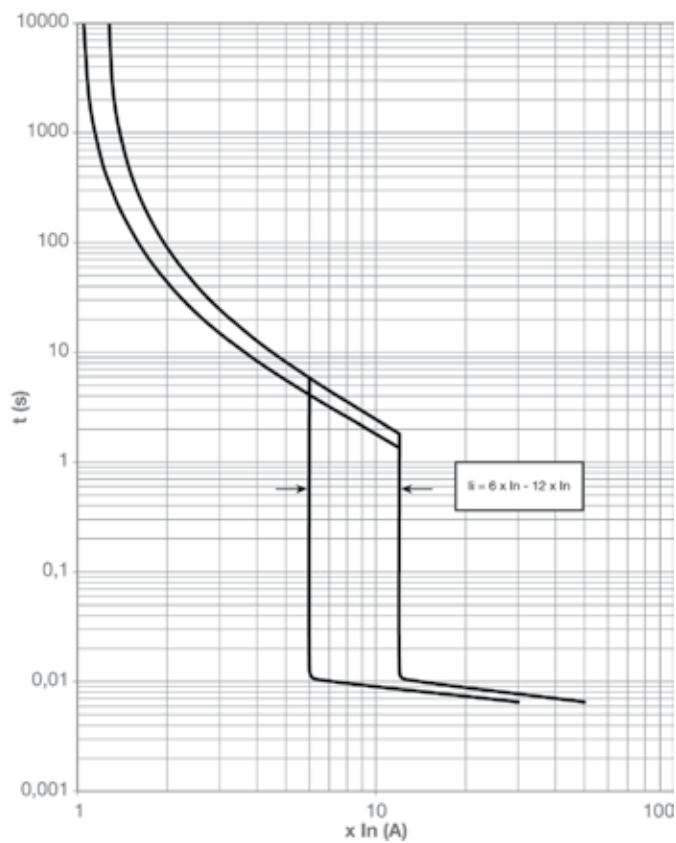


80 A

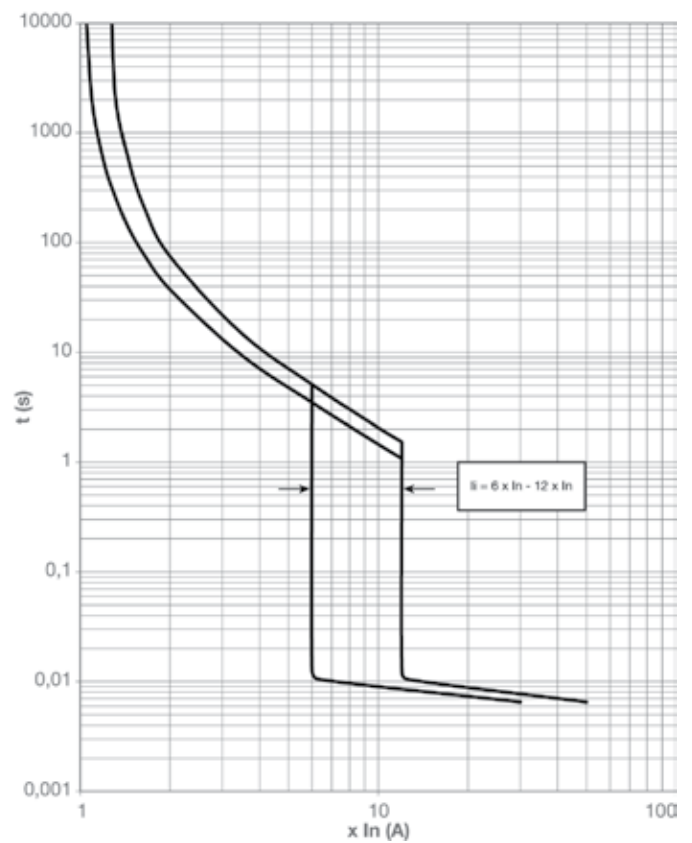


Note:
For tripping tolerances refer to chapter
"TM trip units" on page 19.

P160 TM


100 A

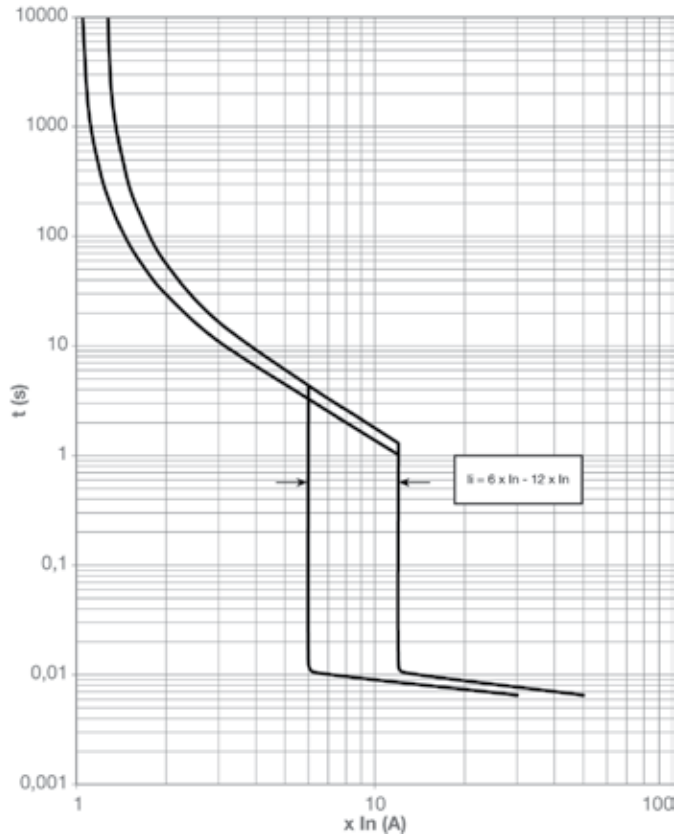

125 A

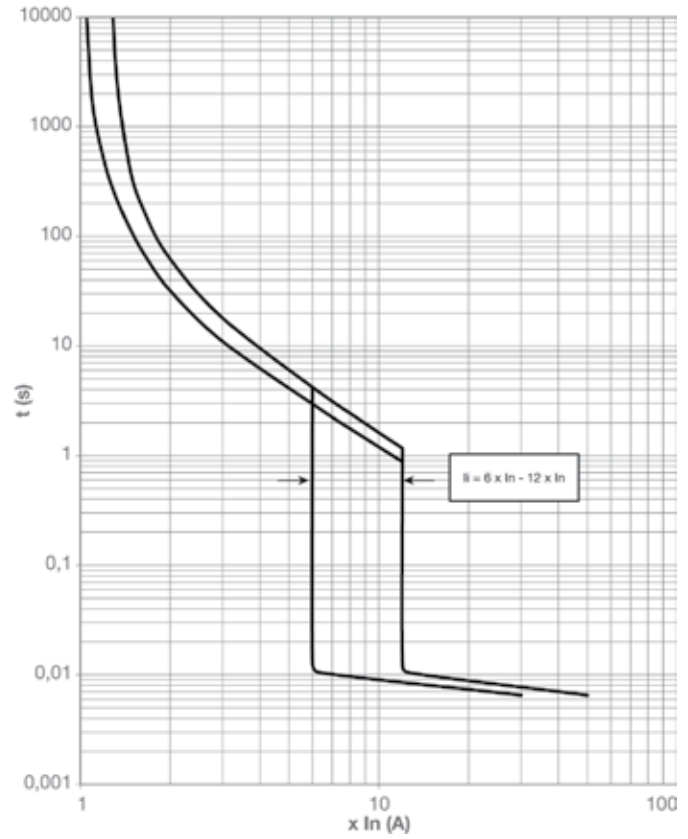

160 A

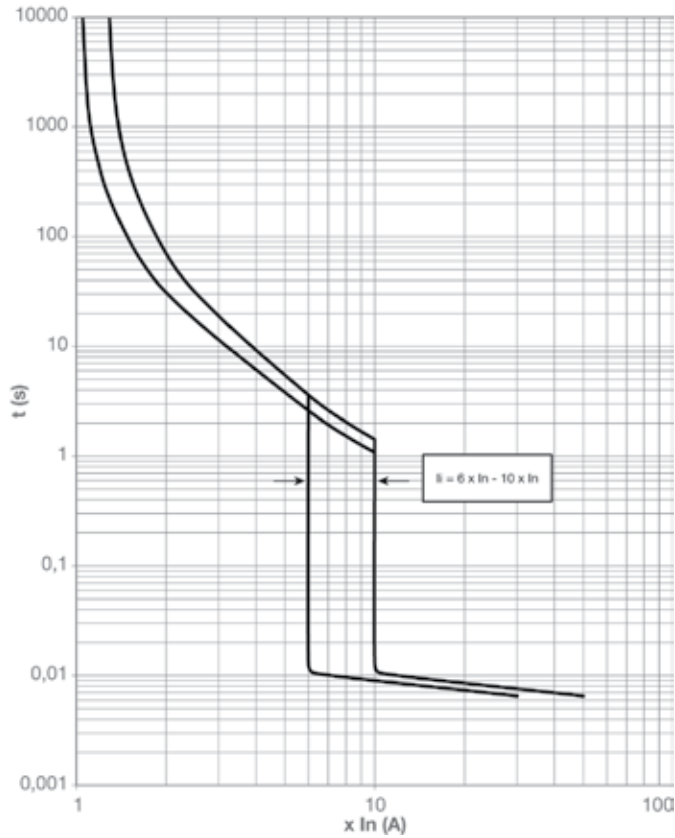


Note:


For tripping tolerances refer to chapter
"TM trip units" on page 19.

P250 TM


50 A

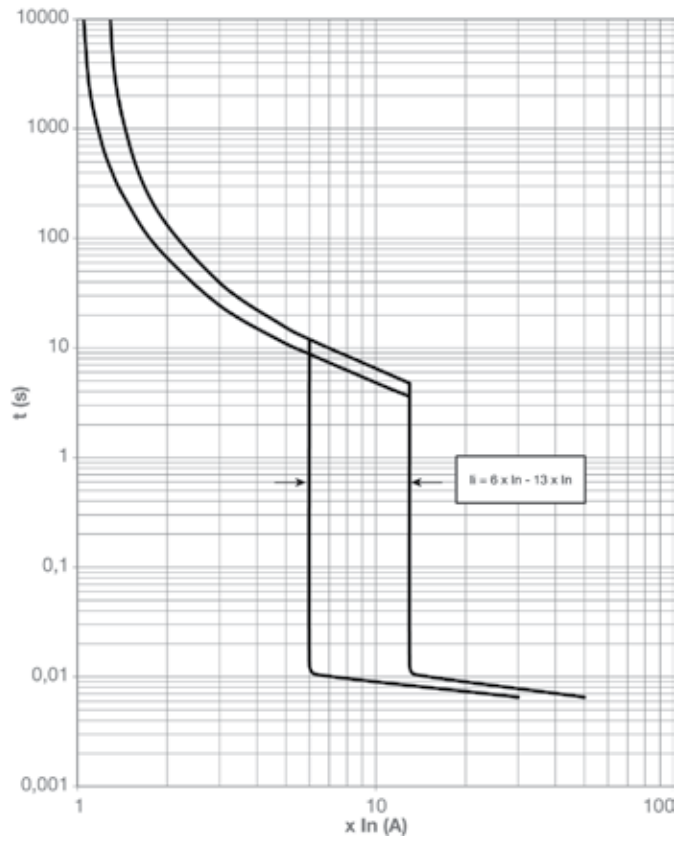


63 A

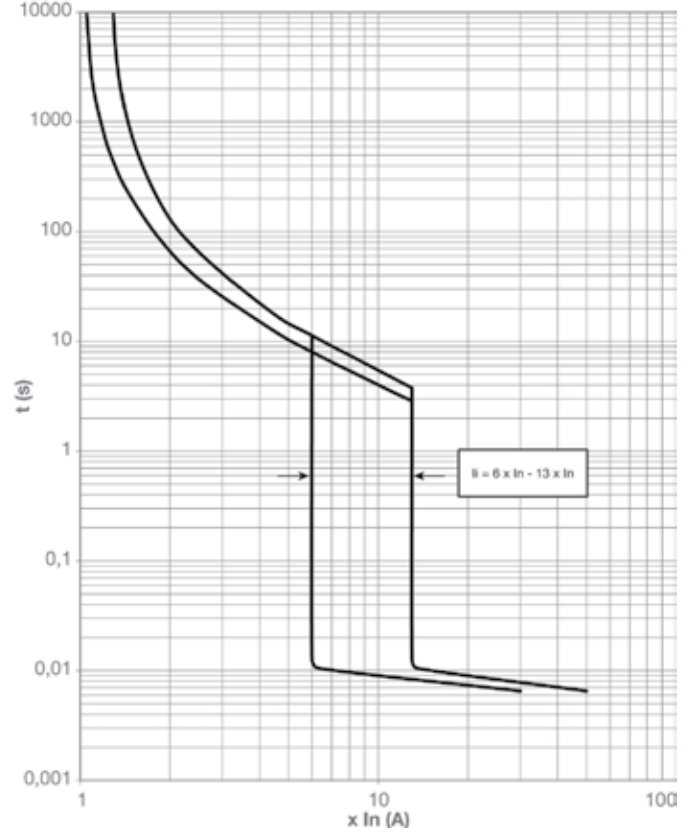

100 A

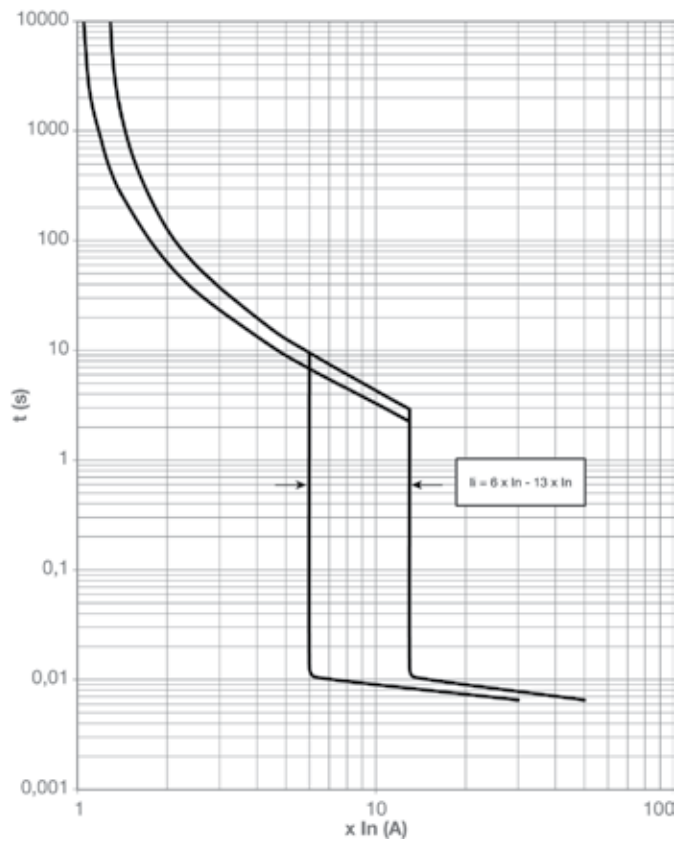


125 A

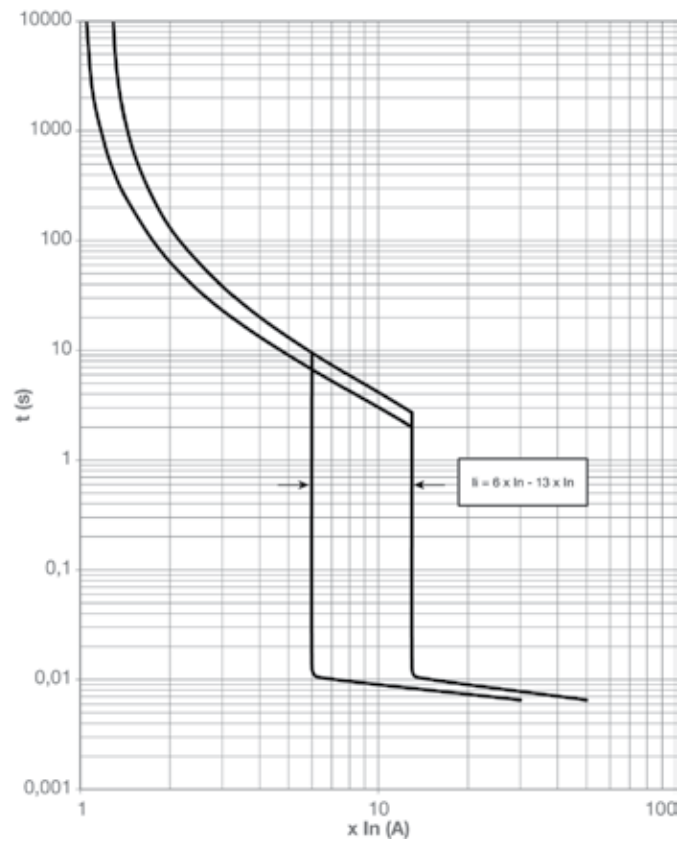


Note:
For tripping tolerances refer to chapter
"TM trip units" on page 19.

P250 TM


160 A

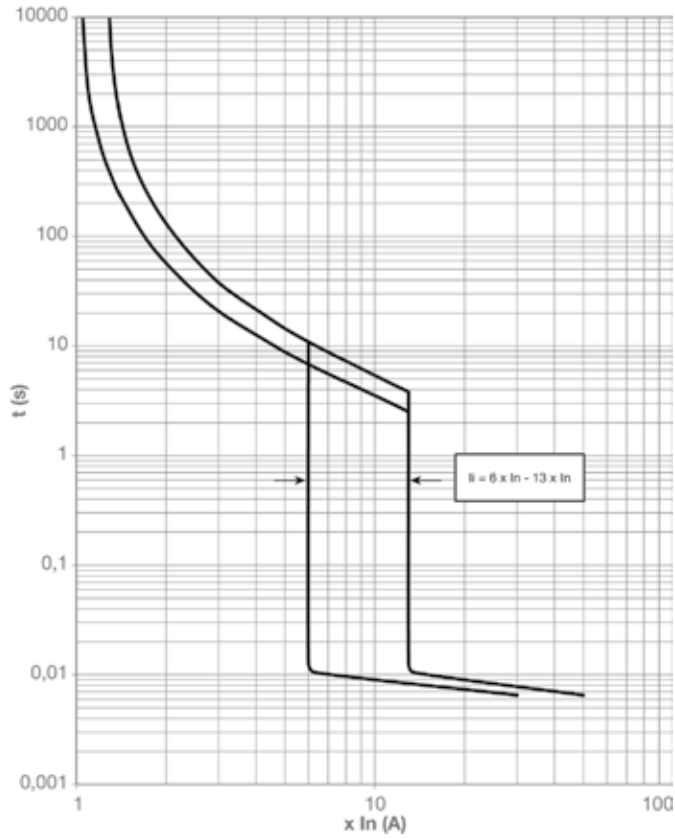

200 A

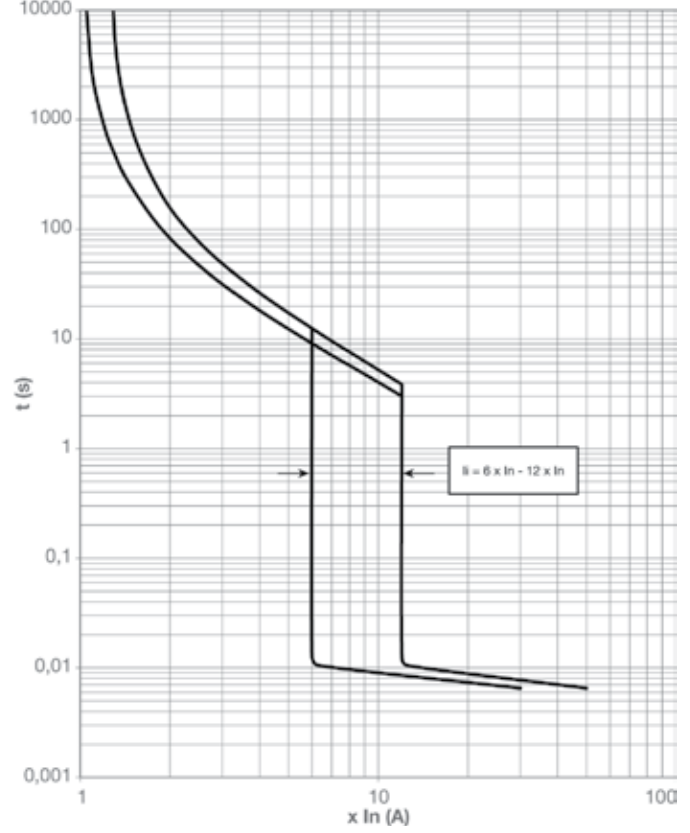


250 A

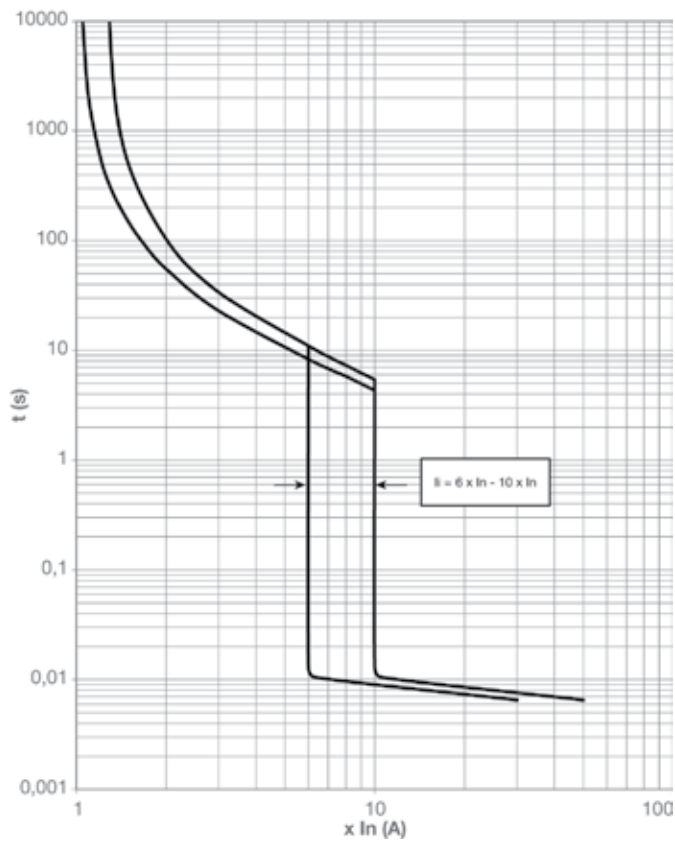

Note:

For tripping tolerances refer to chapter
"TM trip units" on page 19.

P160 MAG (ICB)

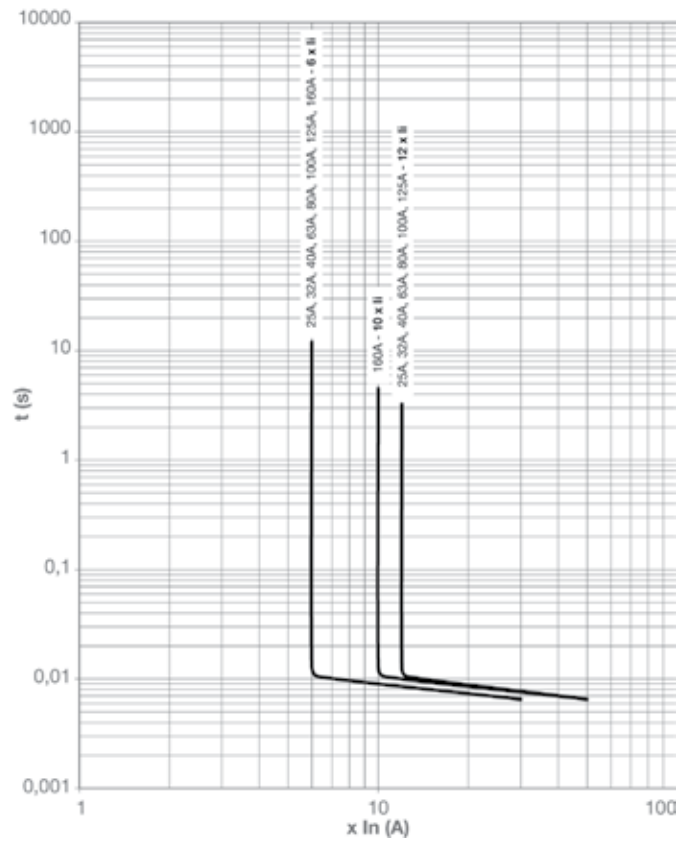


Note:
For tripping tolerances refer to chapter
"MAG trip units" on page 20.

Tripping tolerance of electronic trip units


Tolerances limits for tripping curves of electronic trip units are not described on tripping curves drawing.

Both following diagrams give the tolerance to take in account on further LSnl, LSI, Energy and G tripping curves drawings

Tolerance limits of LSnl, LSI and Energy tripping curves

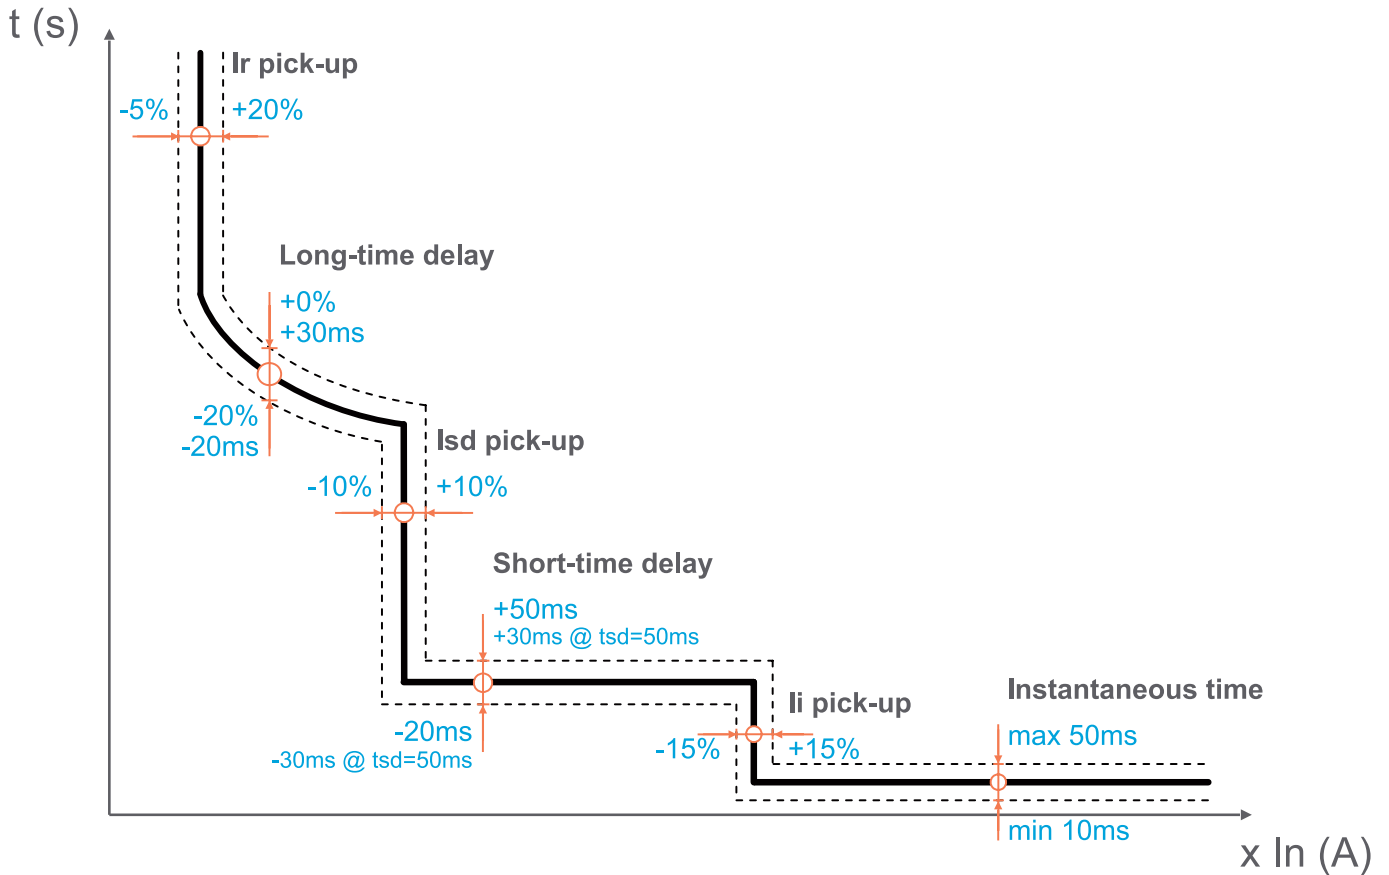


Tolerance limits of G characteristic of Energy trip unit

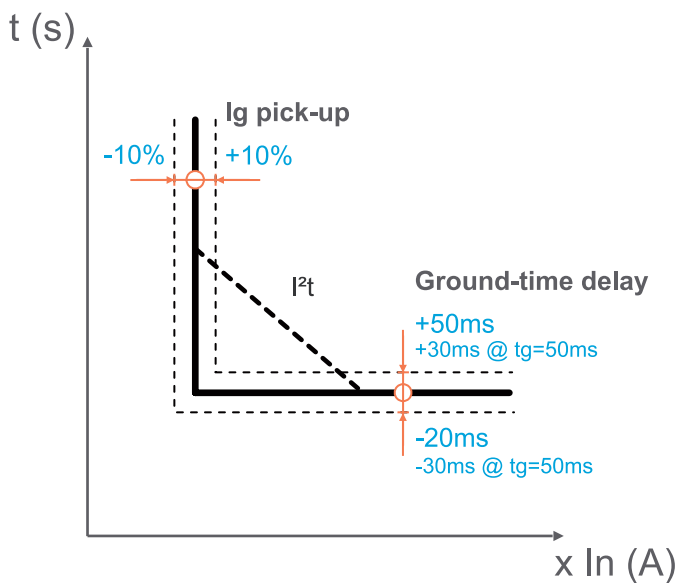


P160 LSnl

40 - 100 A

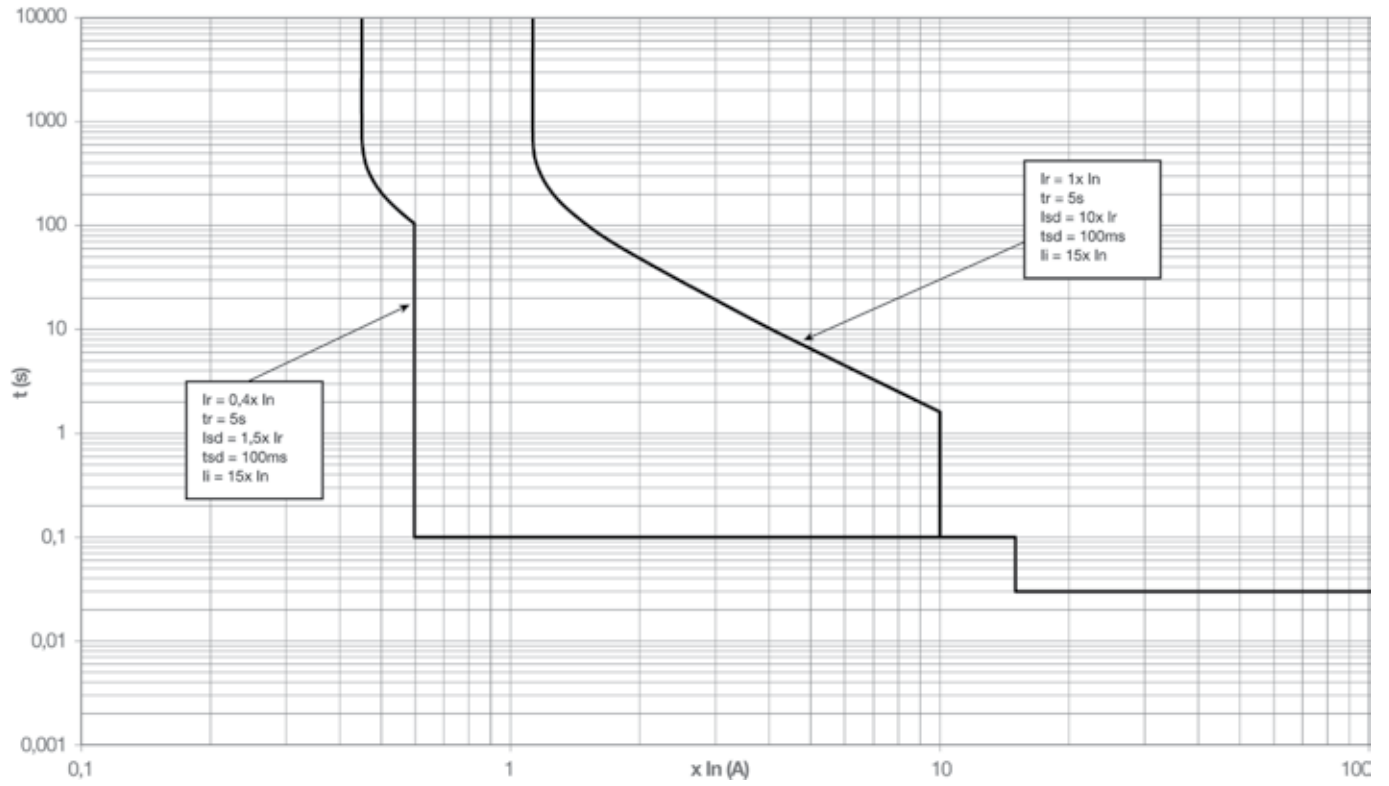


160 A

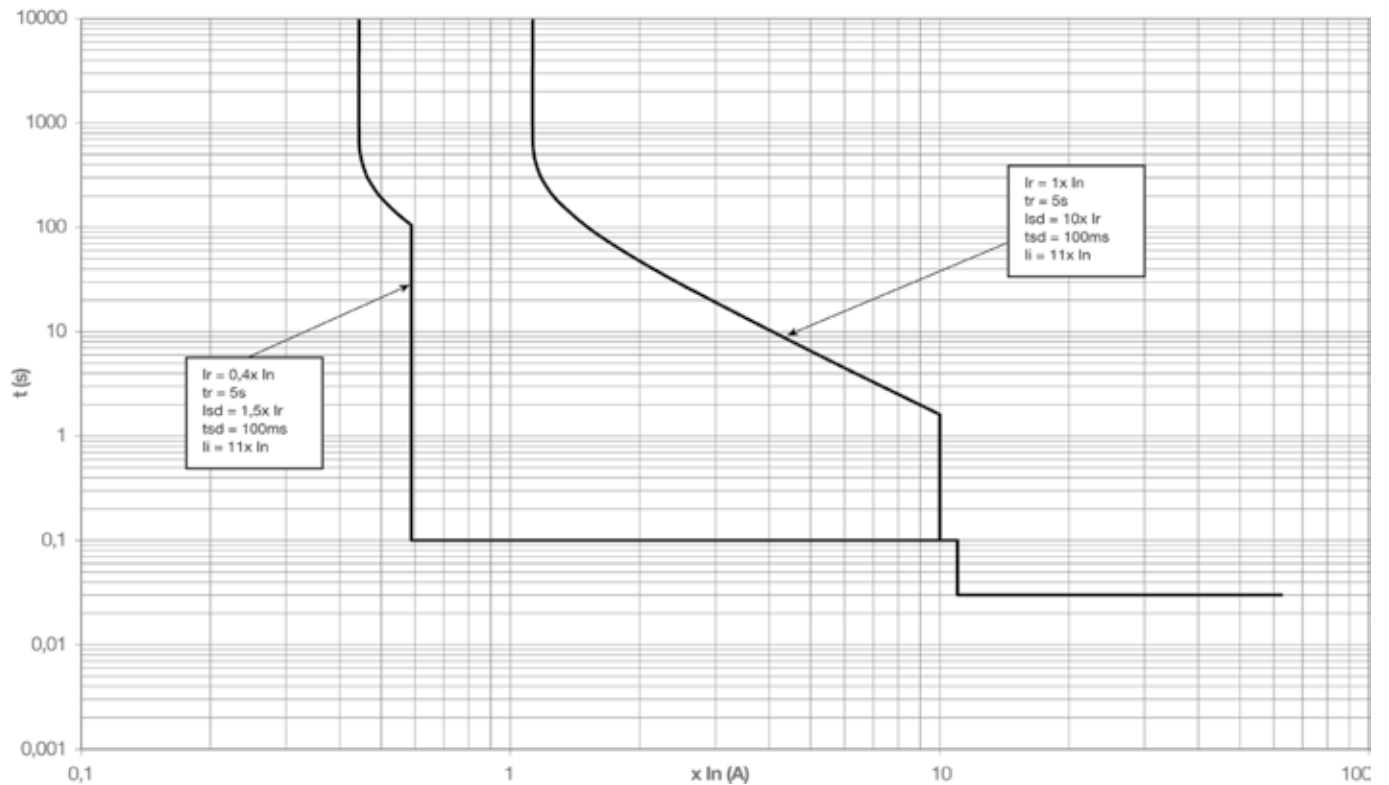


P250 LSnl

40 - 100 A

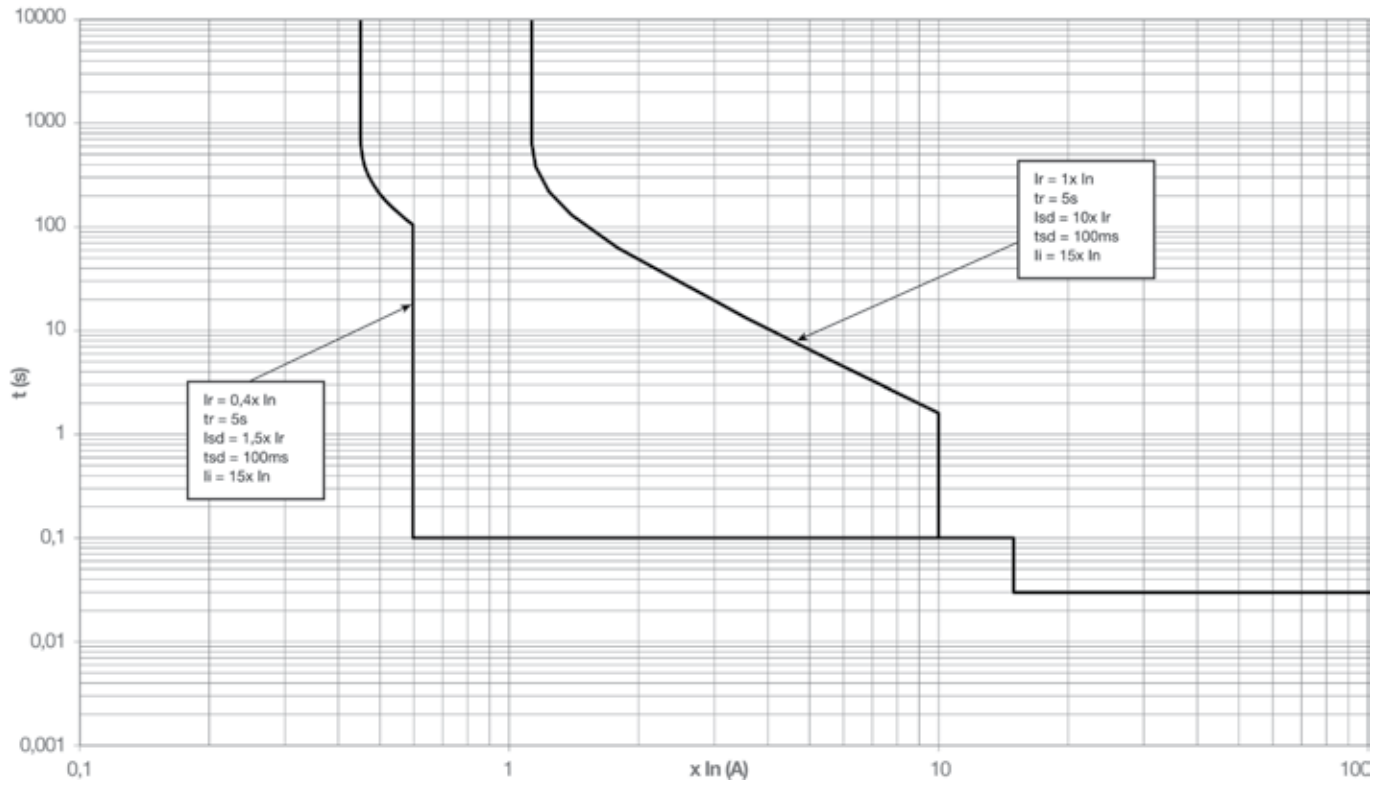


160 - 250 A

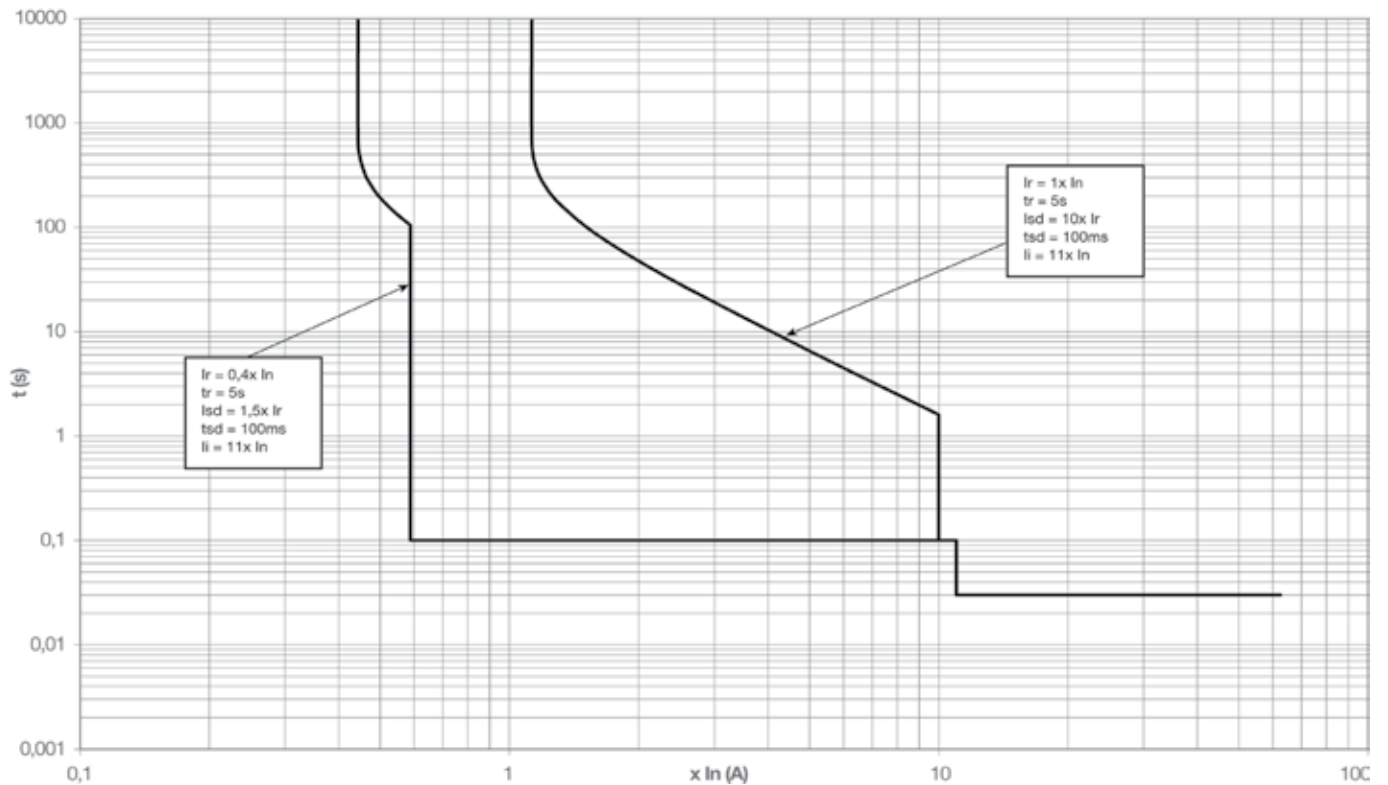


P160 LSI

40 - 100 A

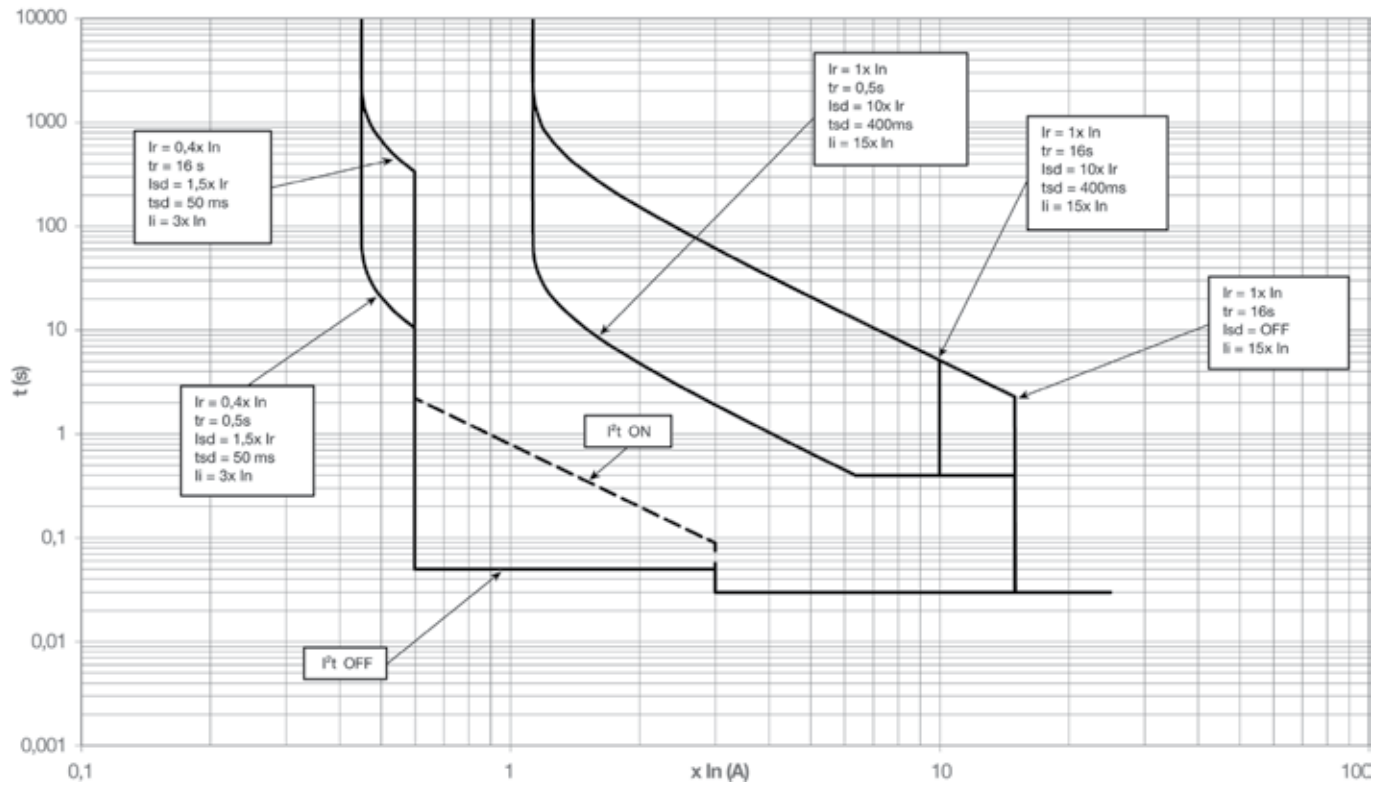


160 A

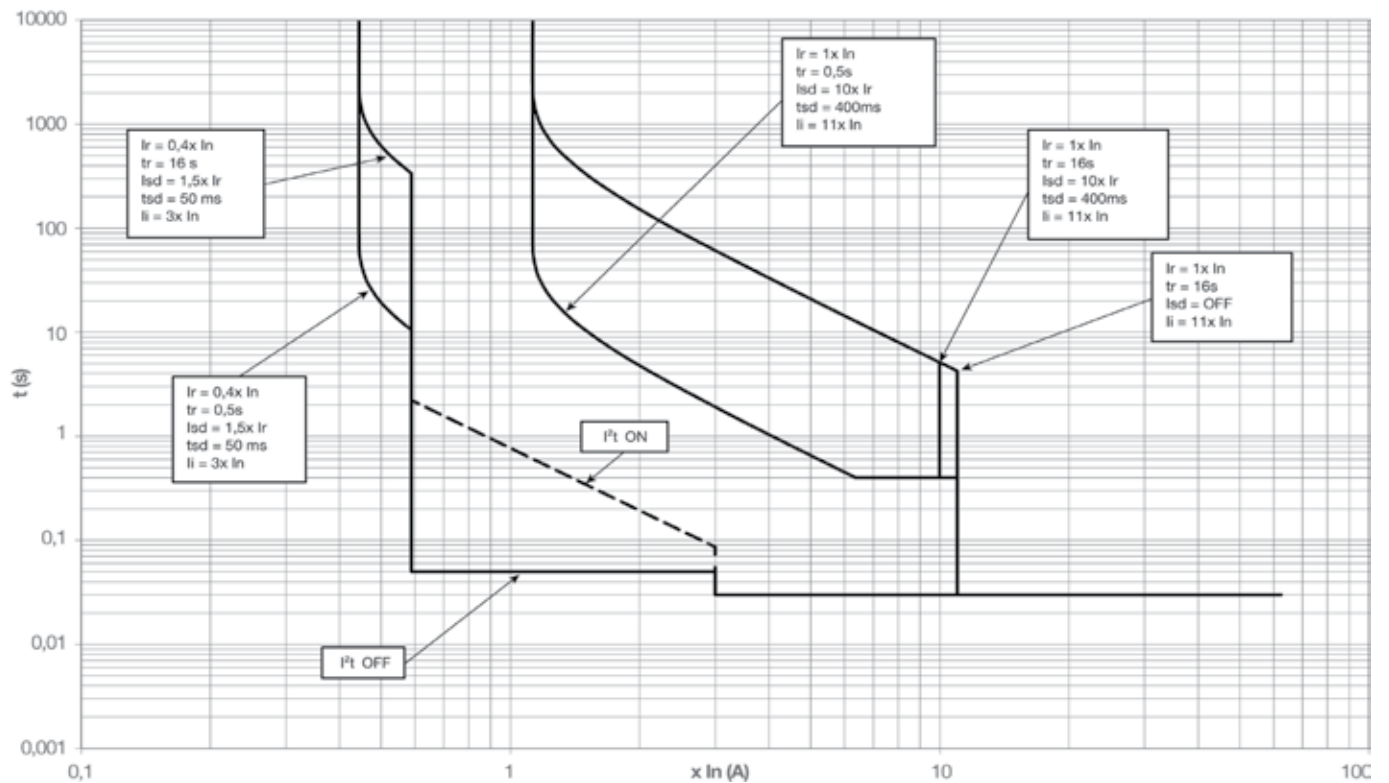


P250 LSI

40 - 100 A

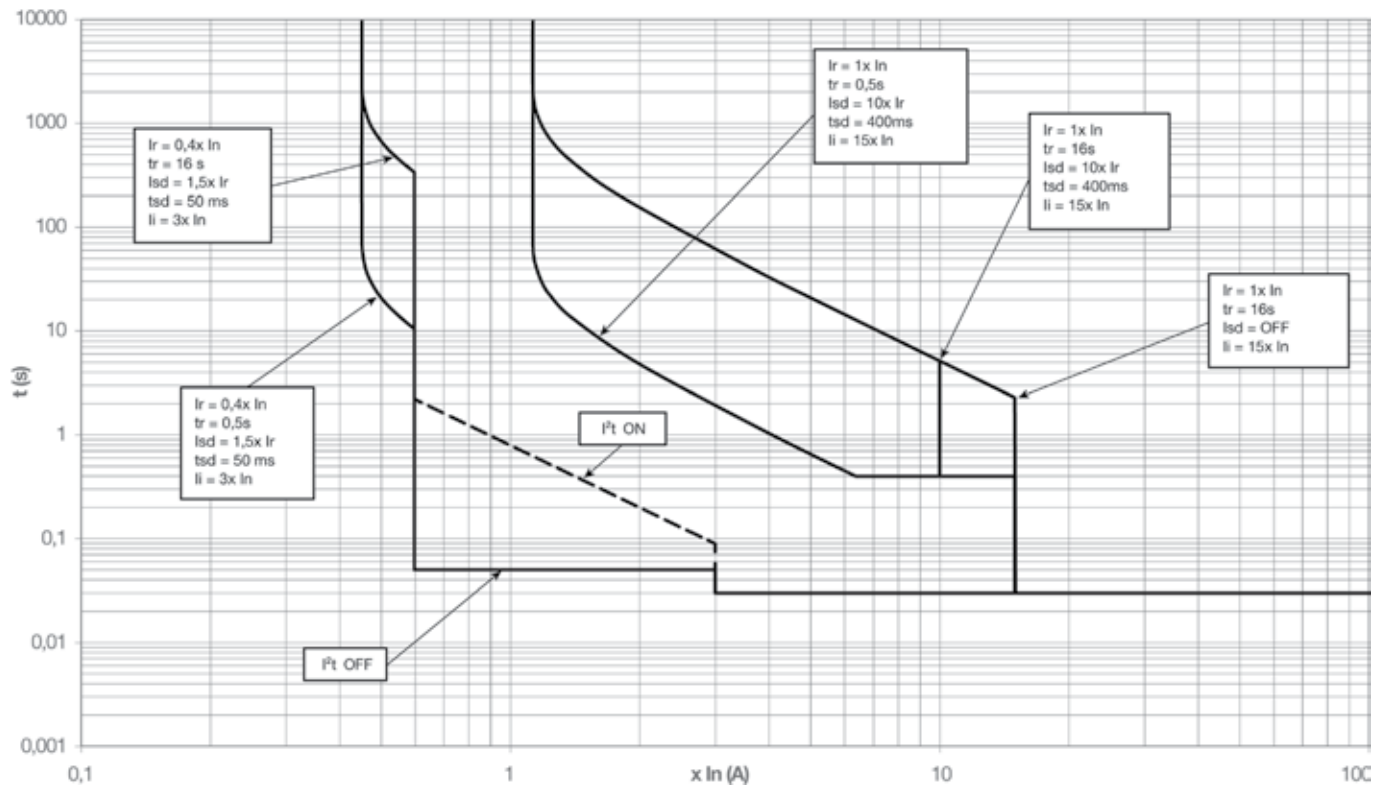


160 - 250 A

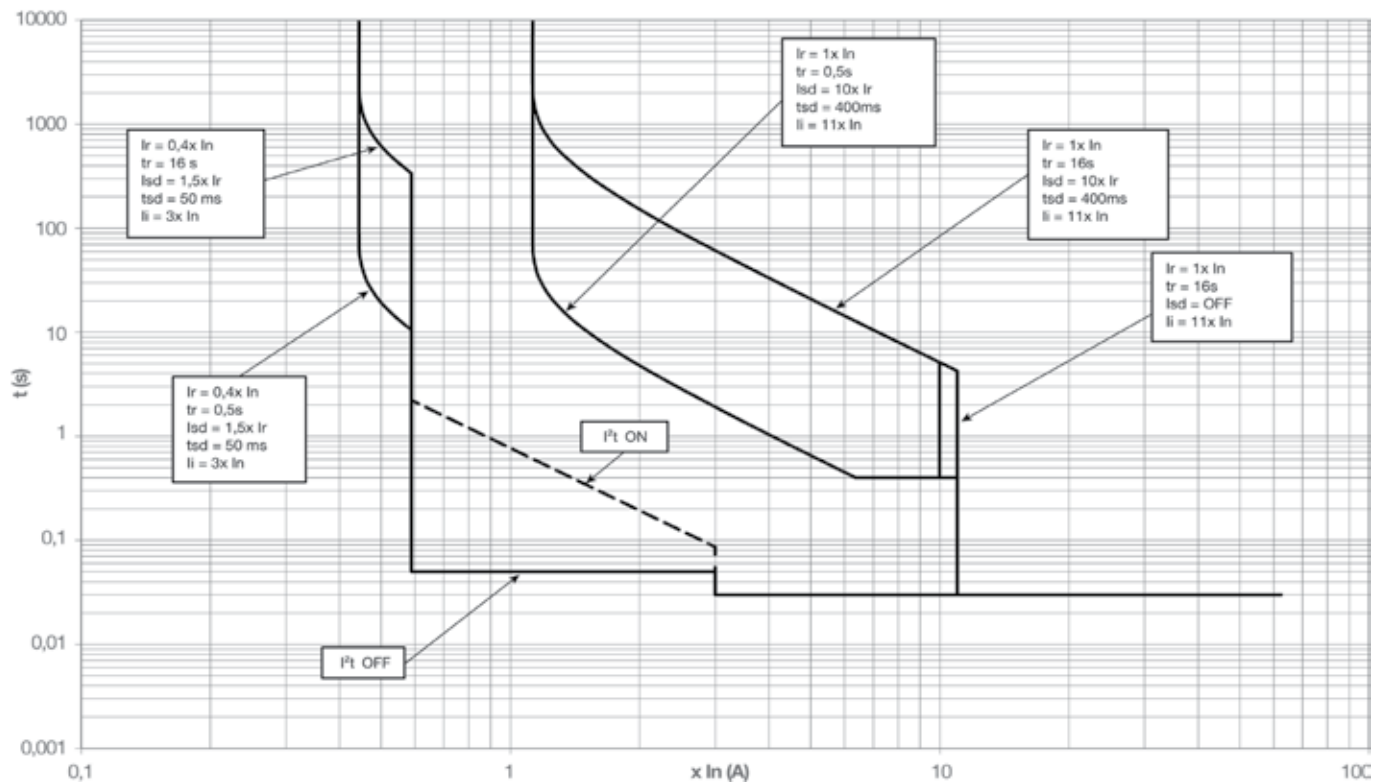


Complementary characteristics

P630 LSI

250 A

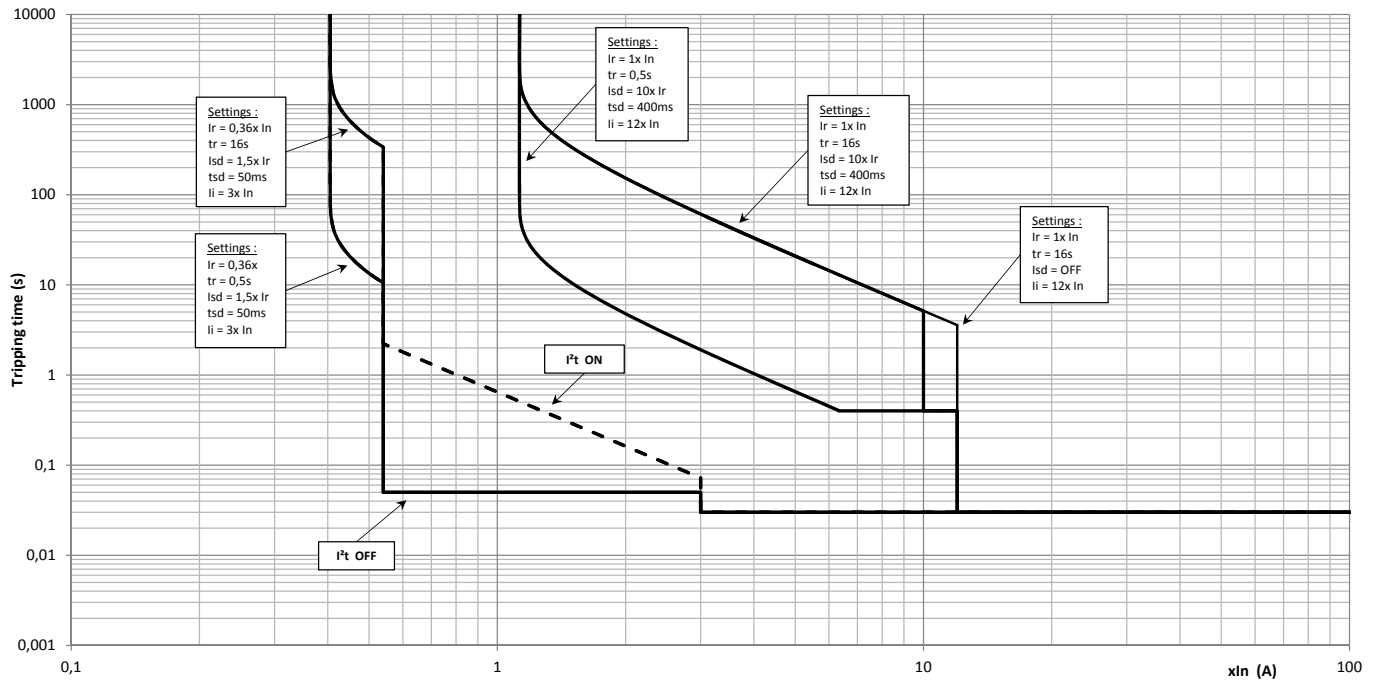


400 A

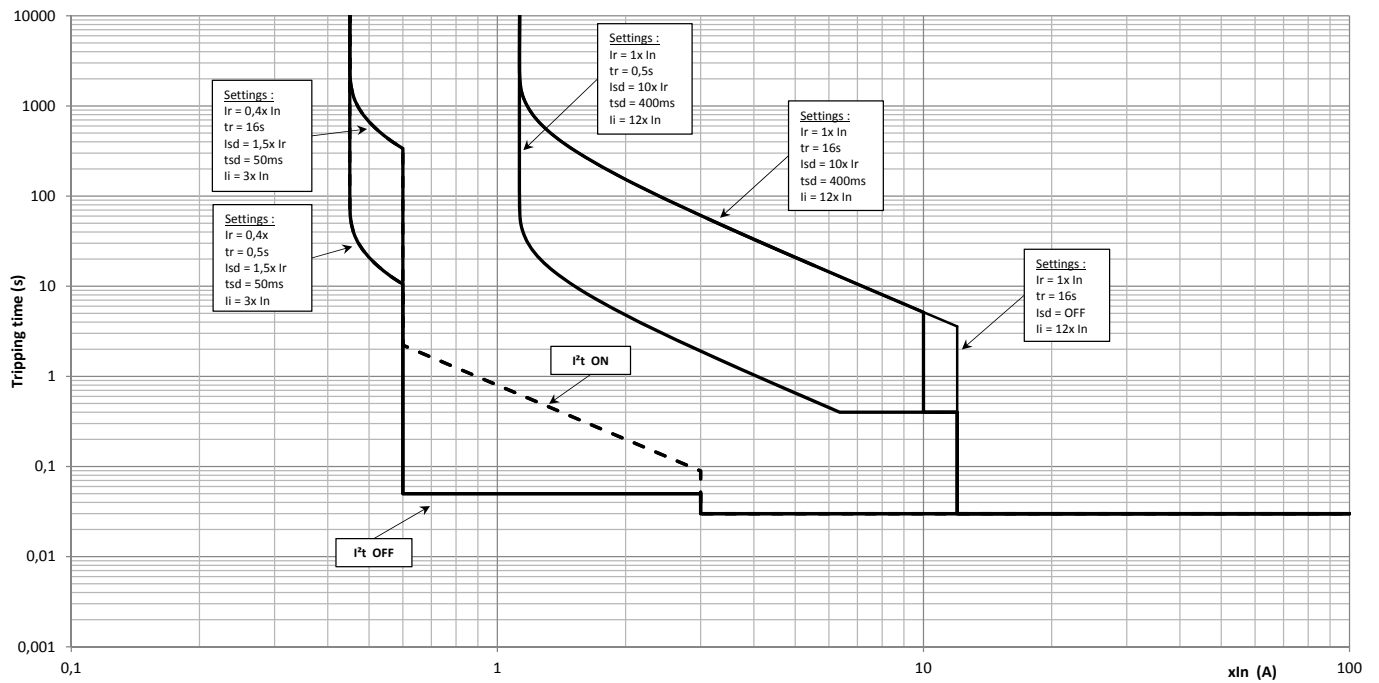


P630 LSI

630 A

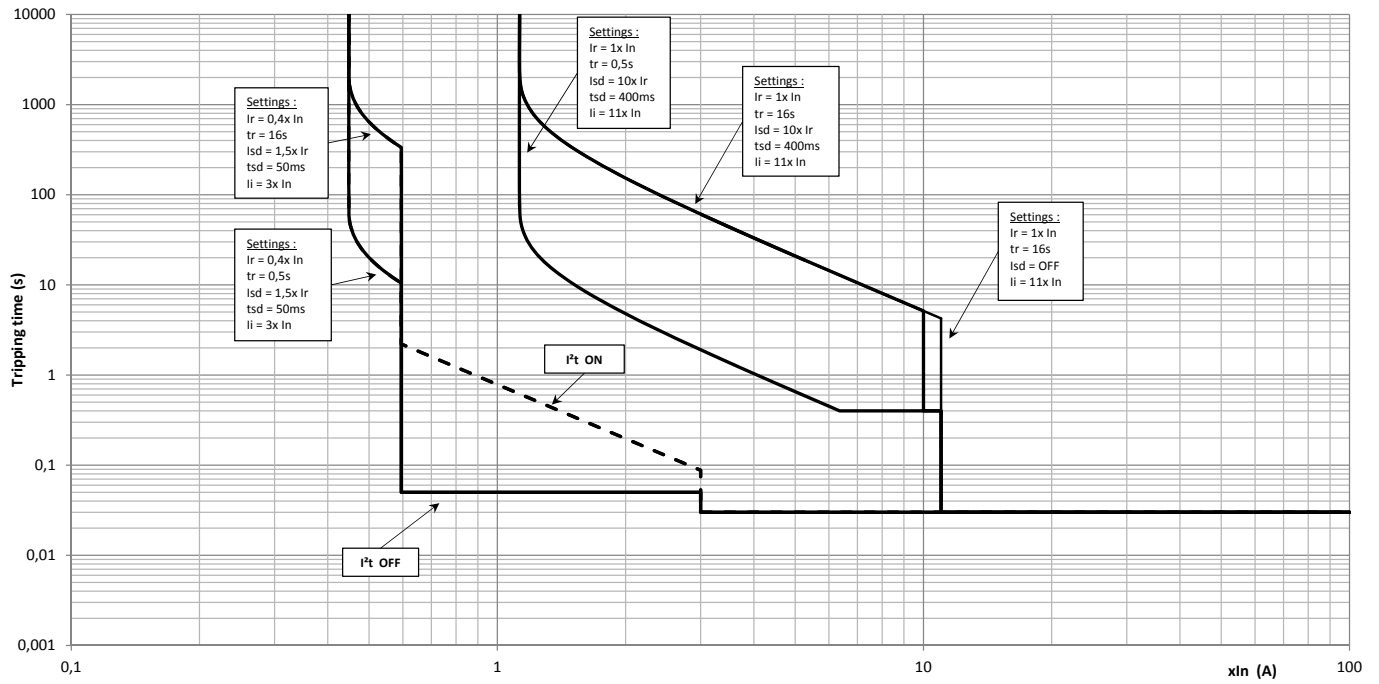


P160 Energy

40 -100 A

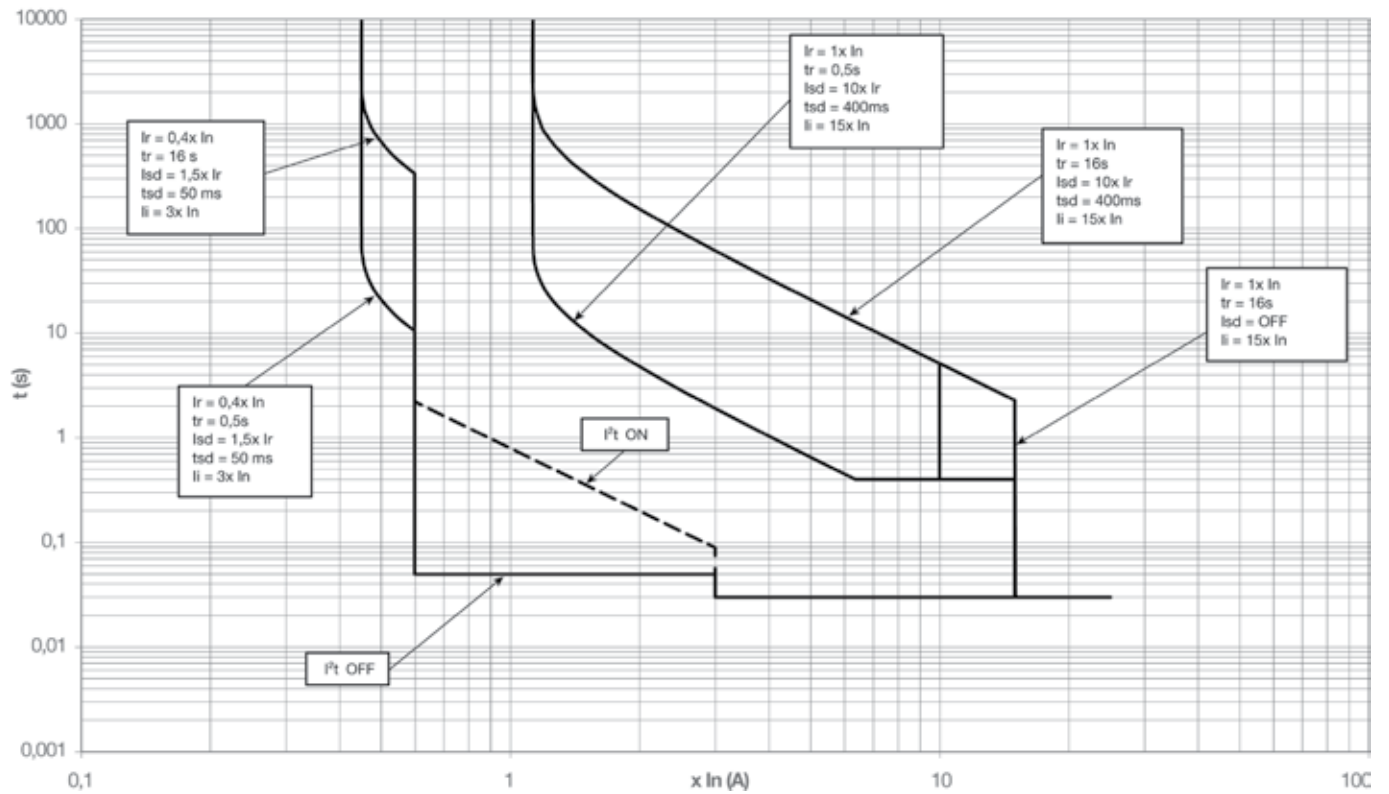


160 A

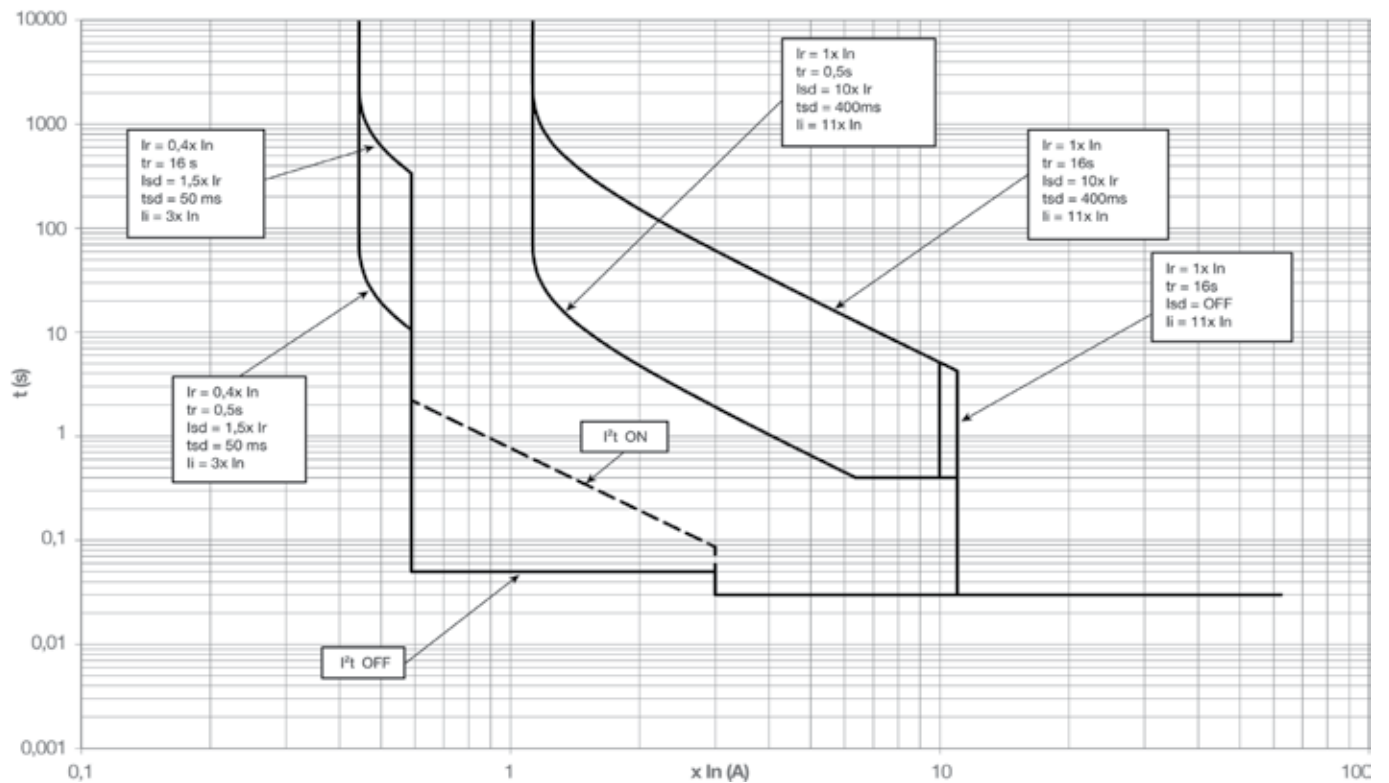


P160 Energy

40 A Ground fault protection

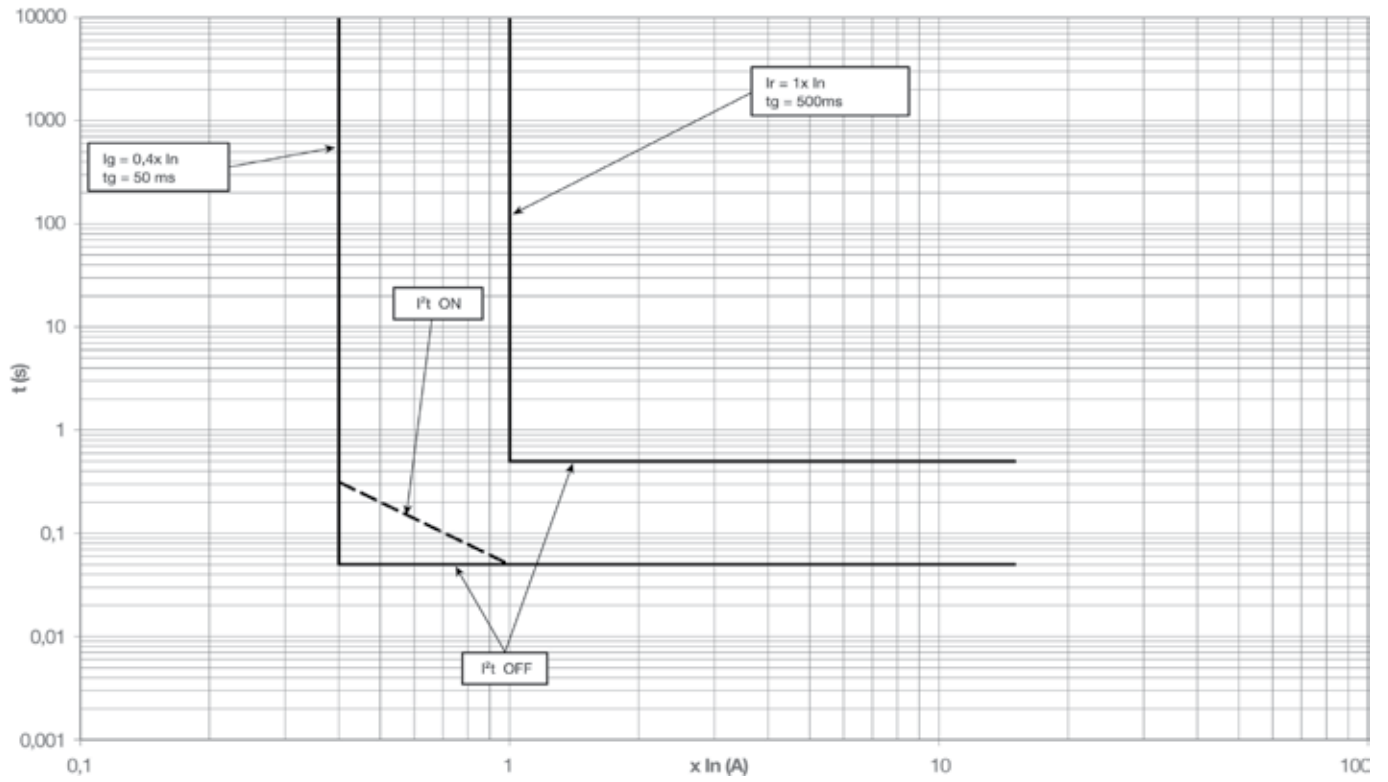


100 - 160 A Ground fault protection

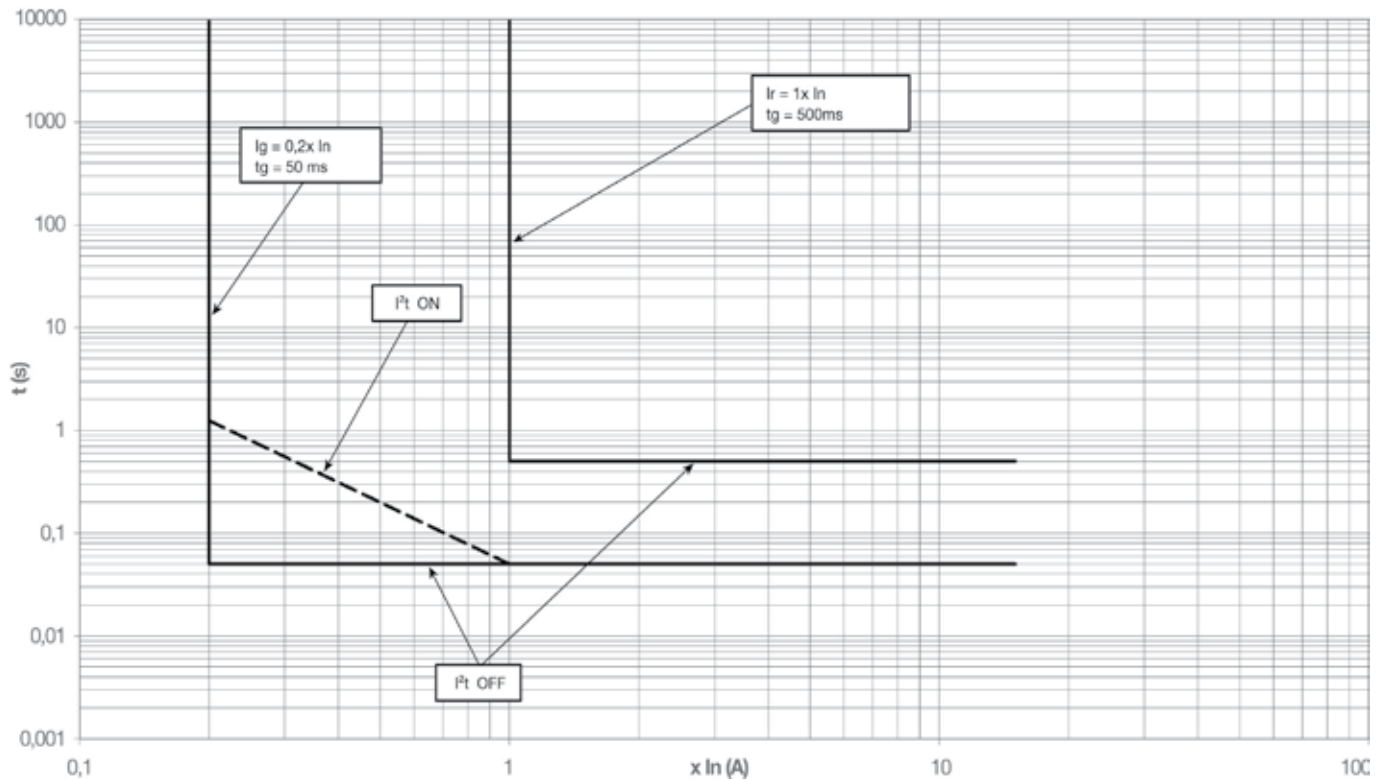


P250 Energy

40 - 100 A

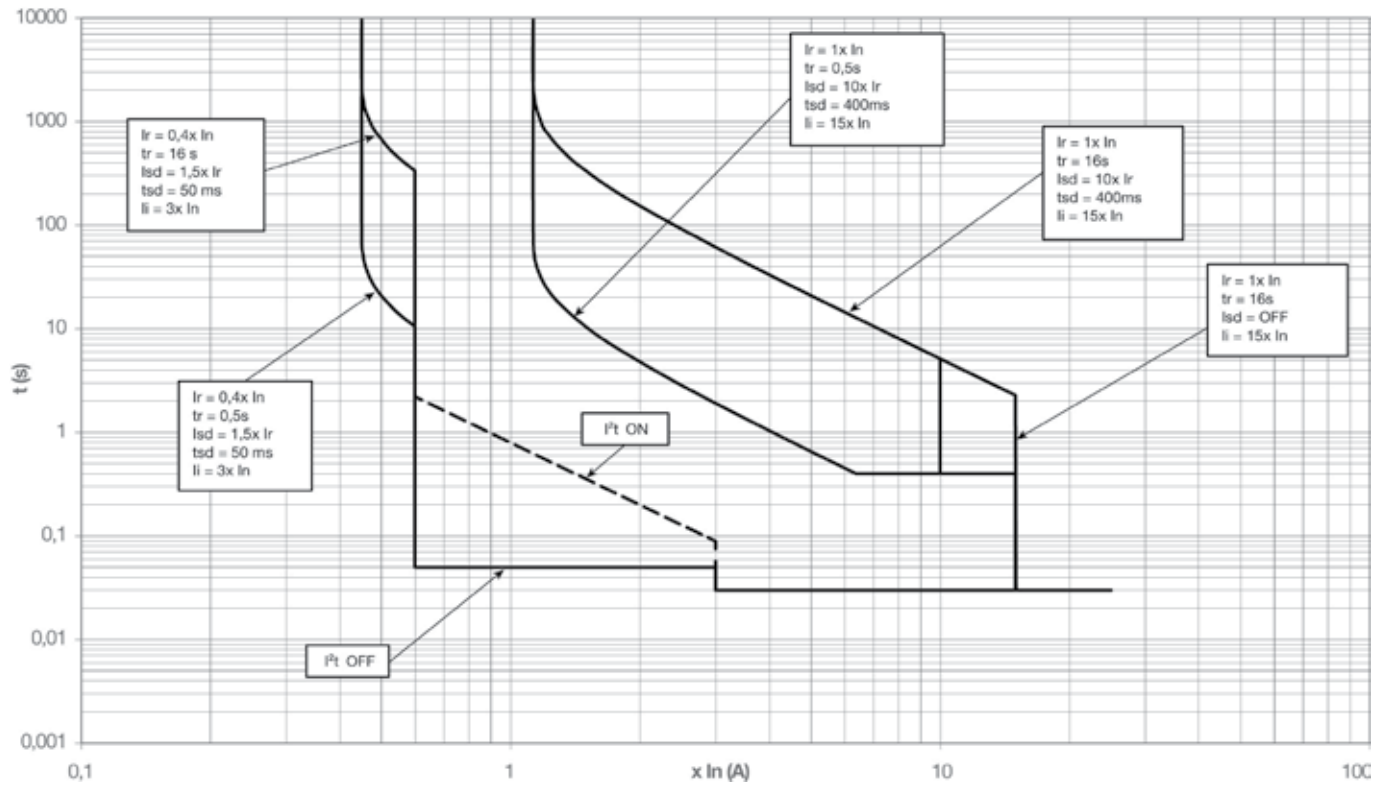


160 - 250 A

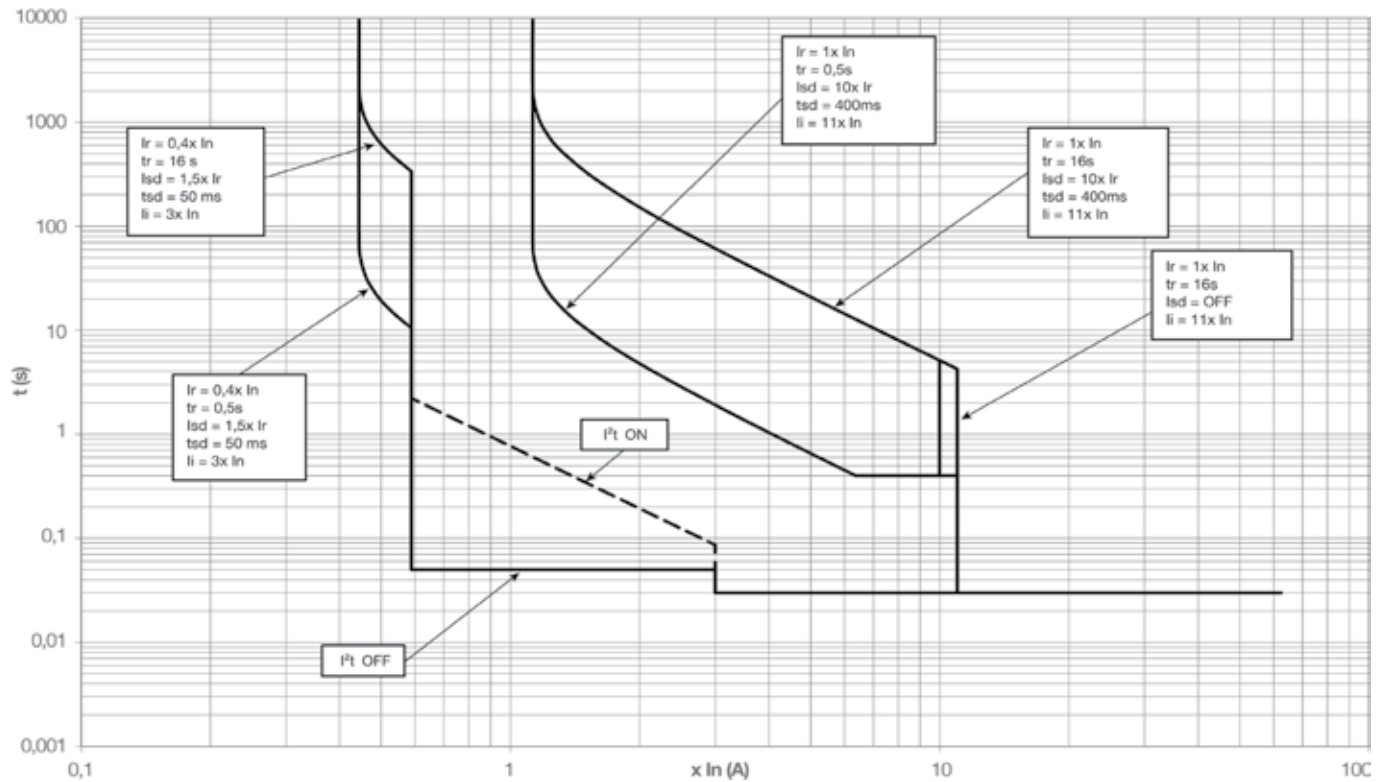


P250 Energy

40 A Ground fault protection

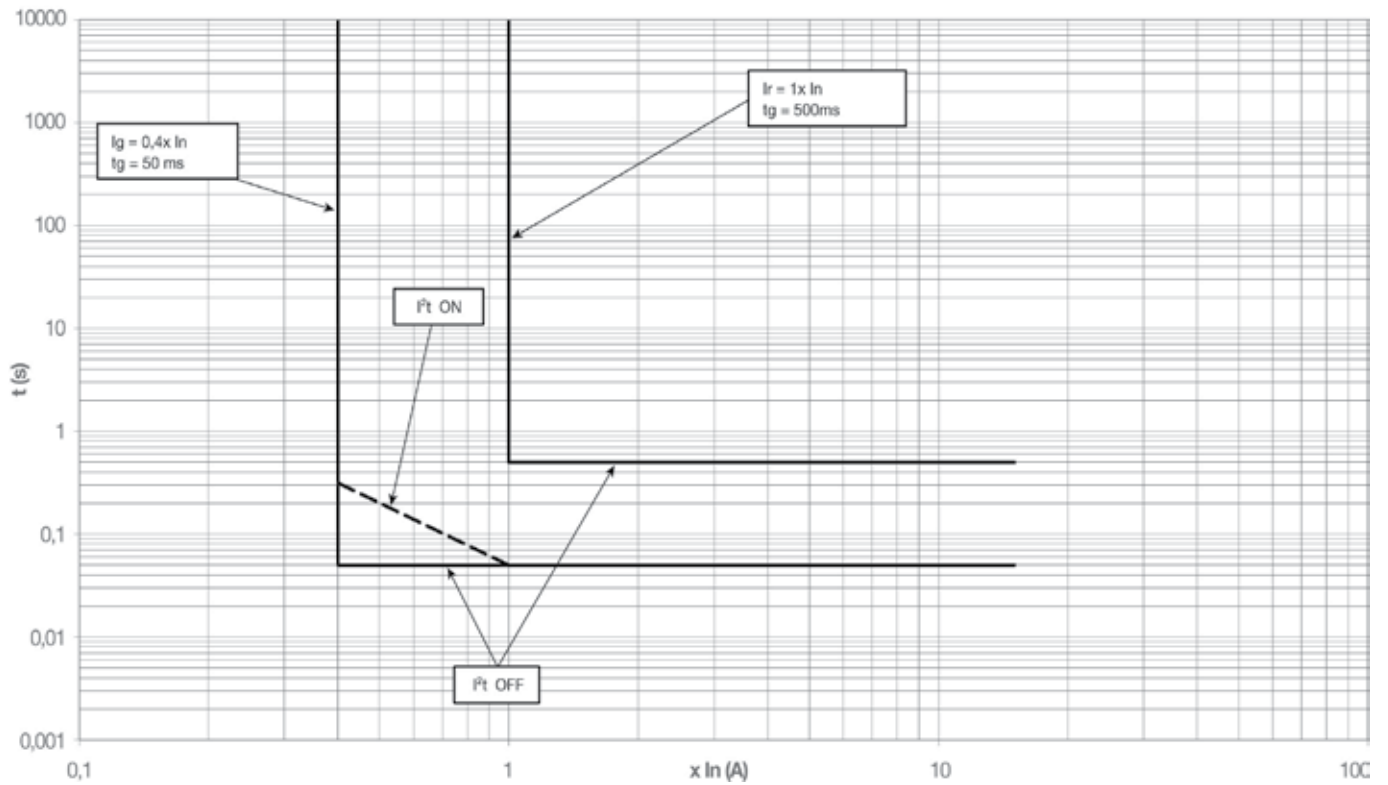


100 - 250 A Ground fault protection

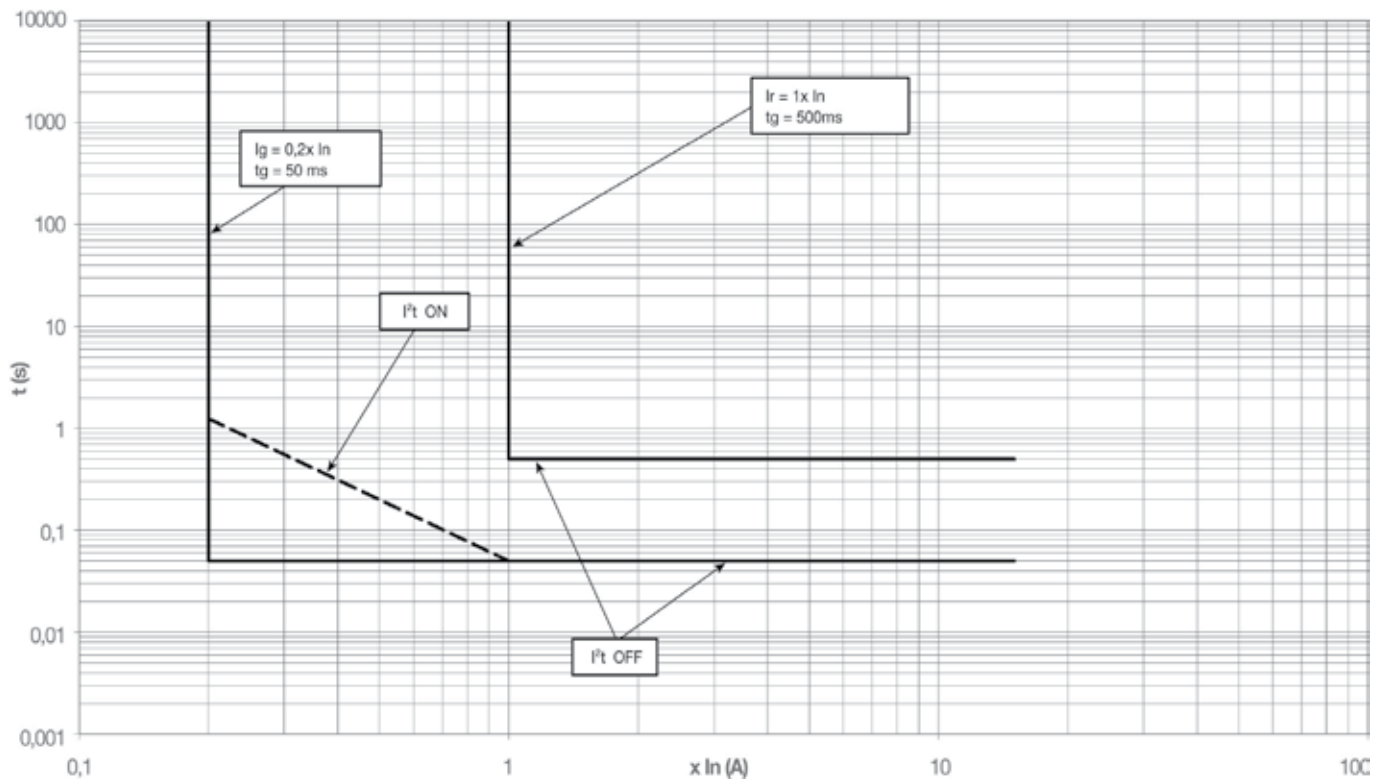


P630 Energy

250 A

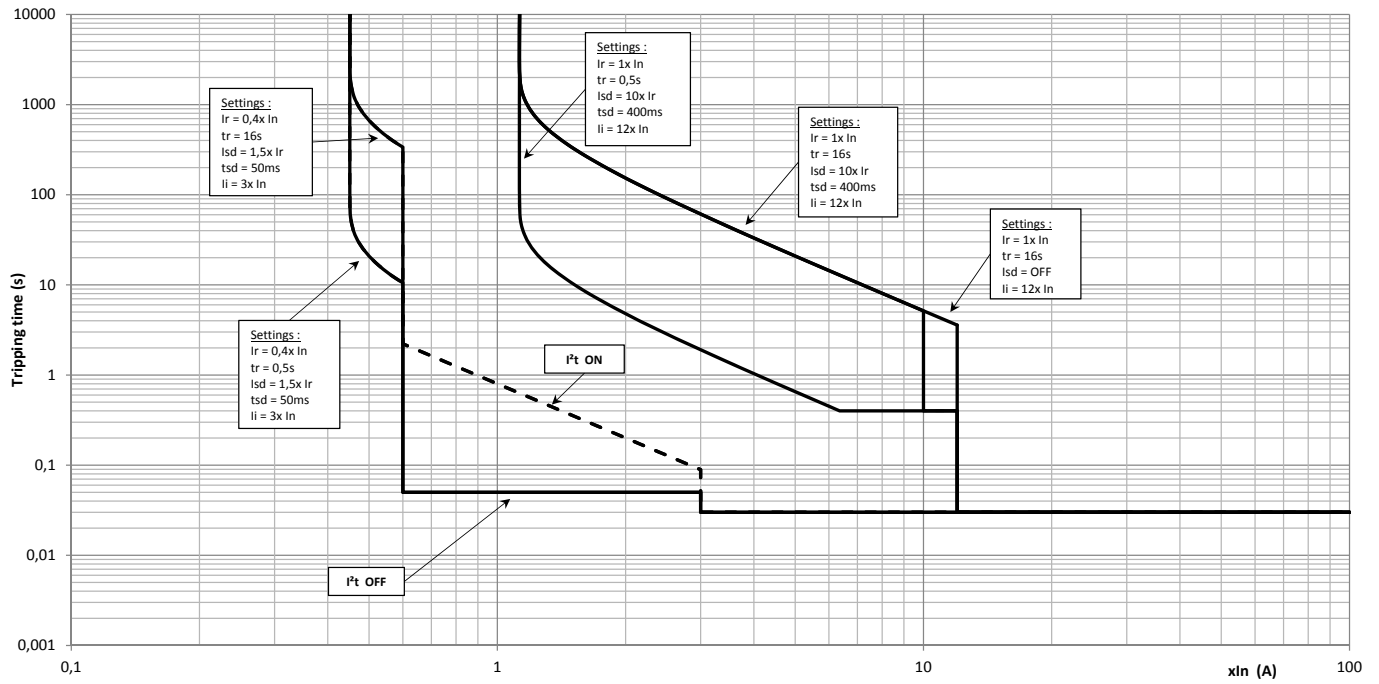


400 A

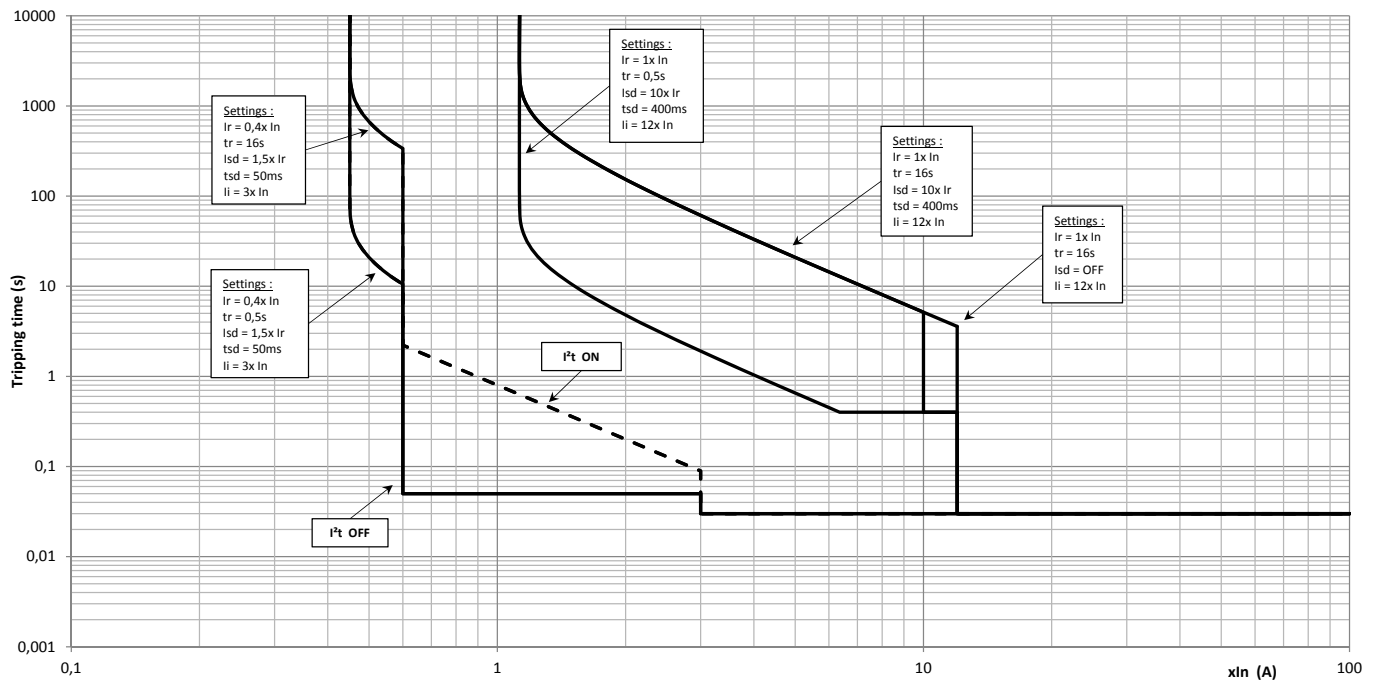


P630 Energy

250 A Ground fault protection

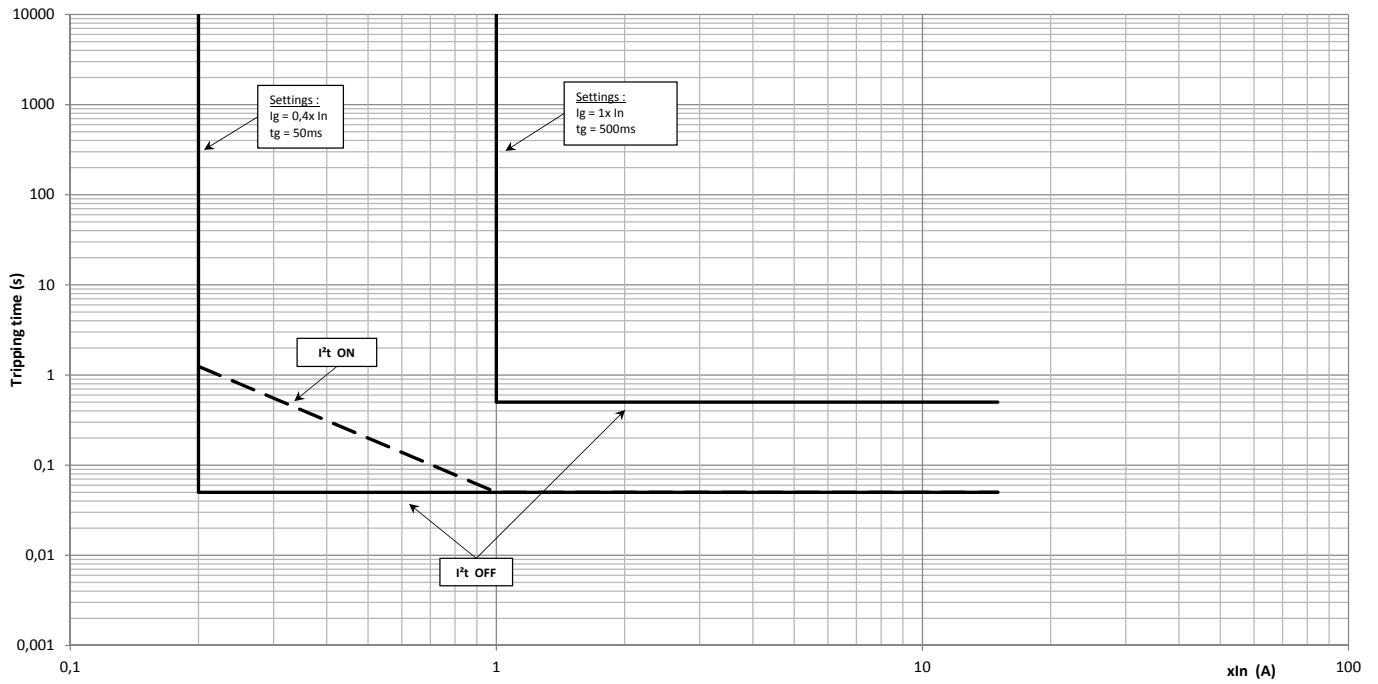


250 A Ground fault protection

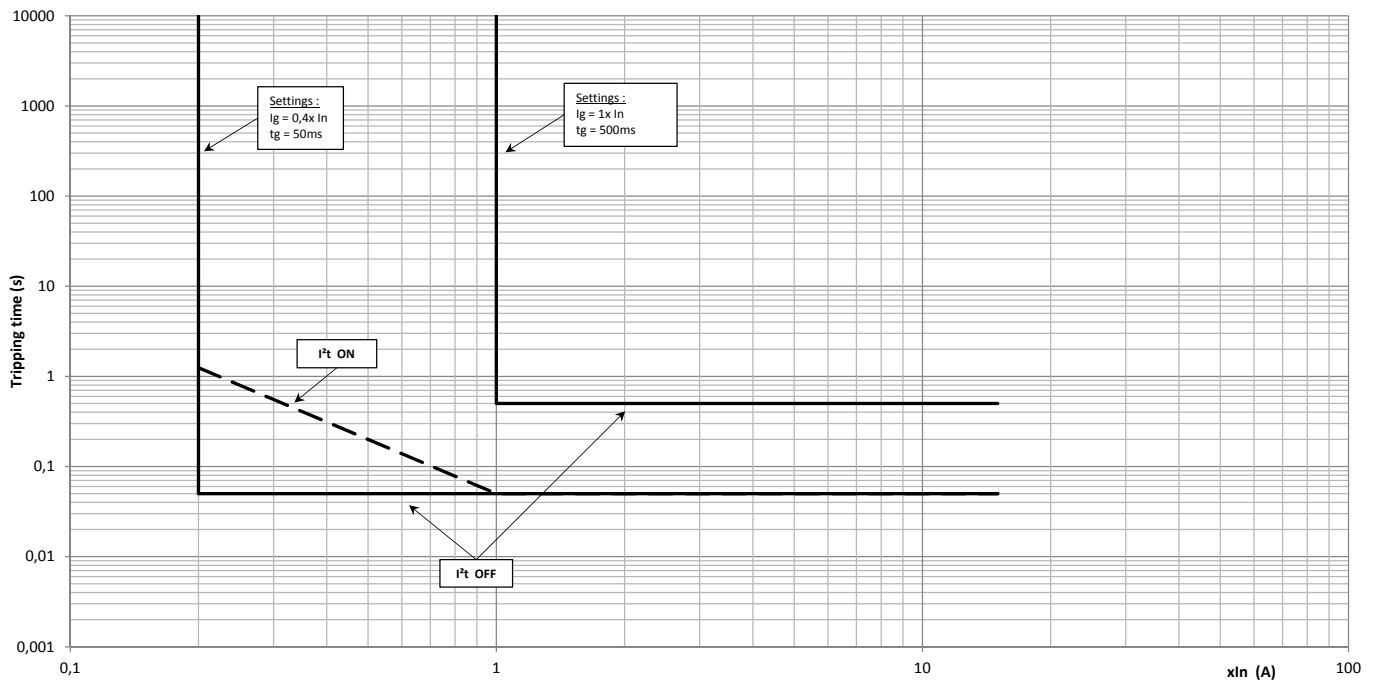


P630 Energy

630 A

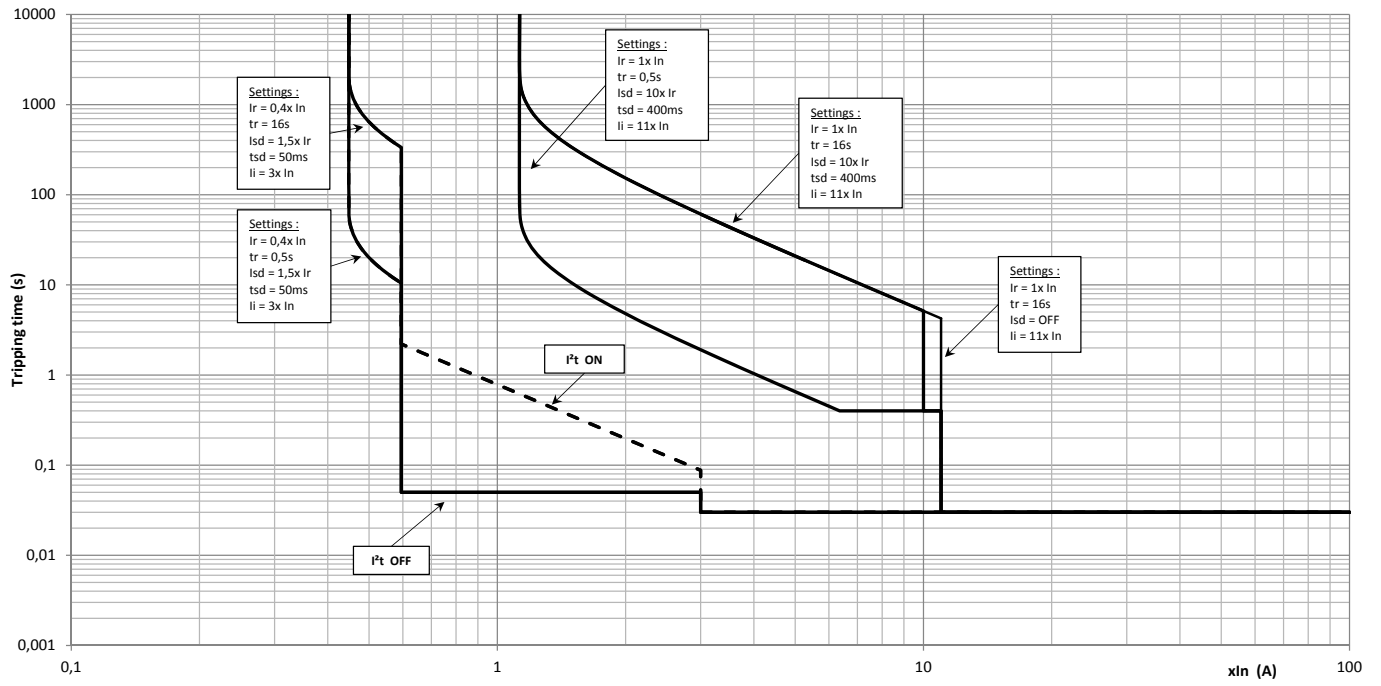


P630 Energy

630 A Ground fault protection

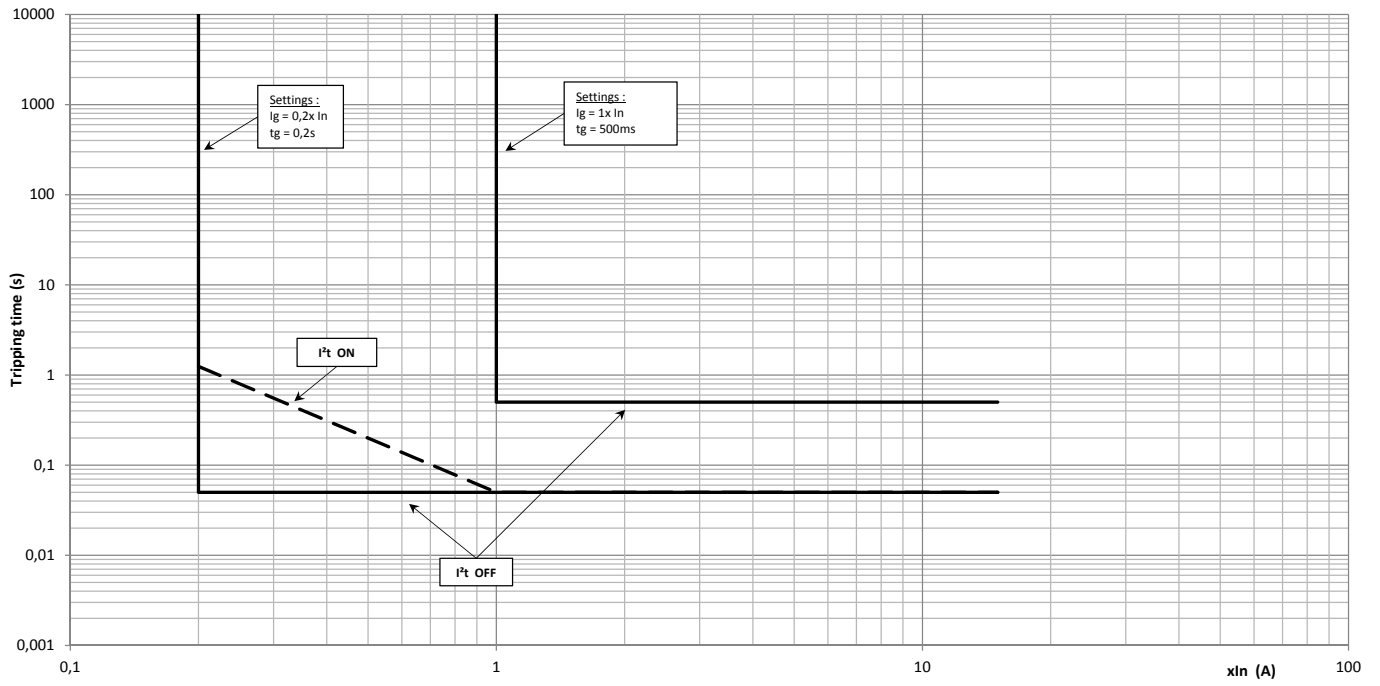


Energy limiting characteristics 220/240 V AC


P160 TM or MAG

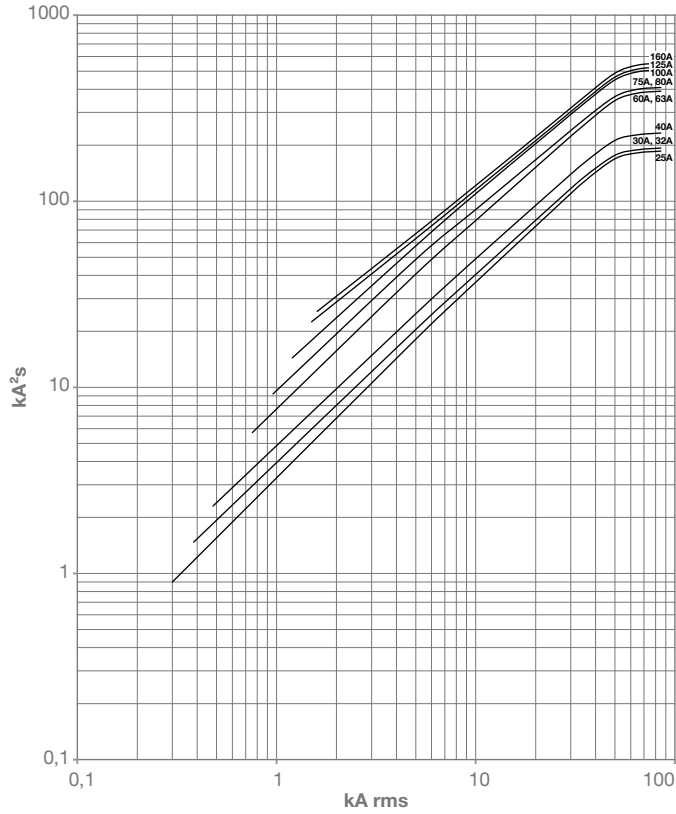


P250 TM

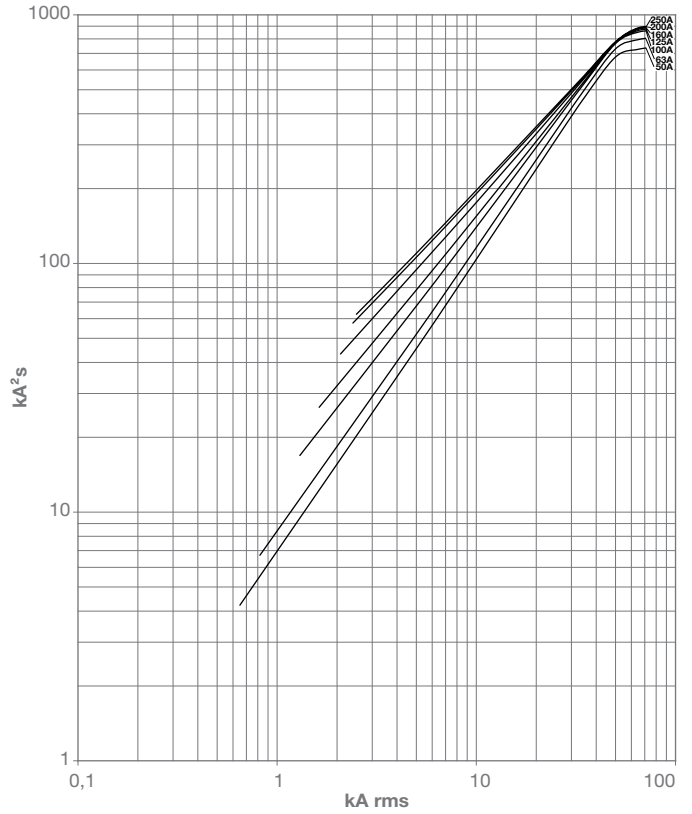

P160 Electronic

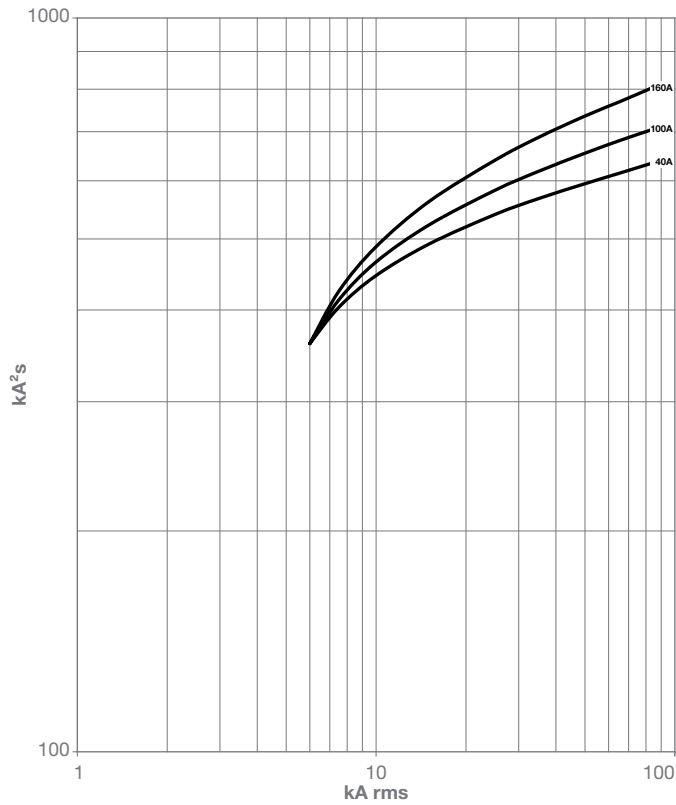


P250 Electronic

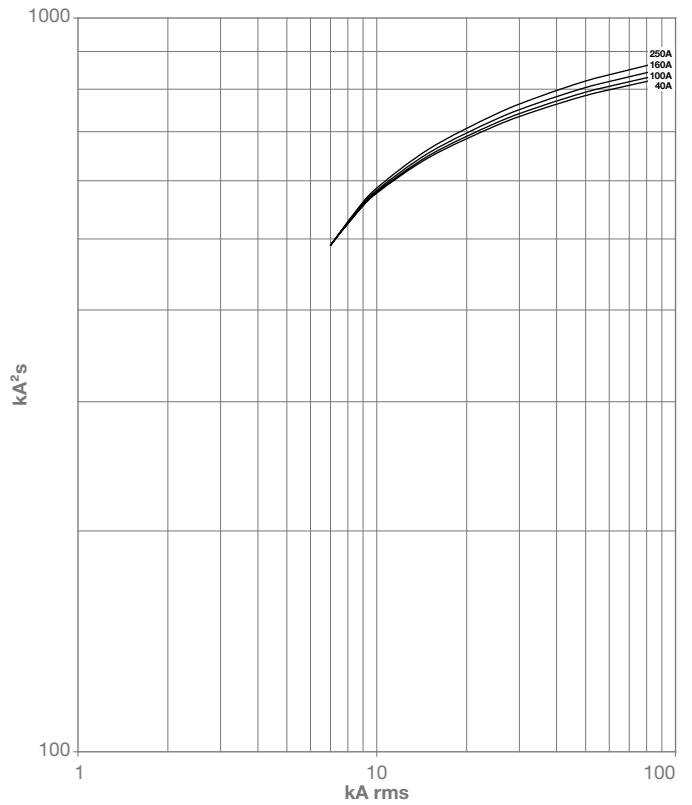


Energy limiting characteristics 220/240 V AC

P630 Electronic

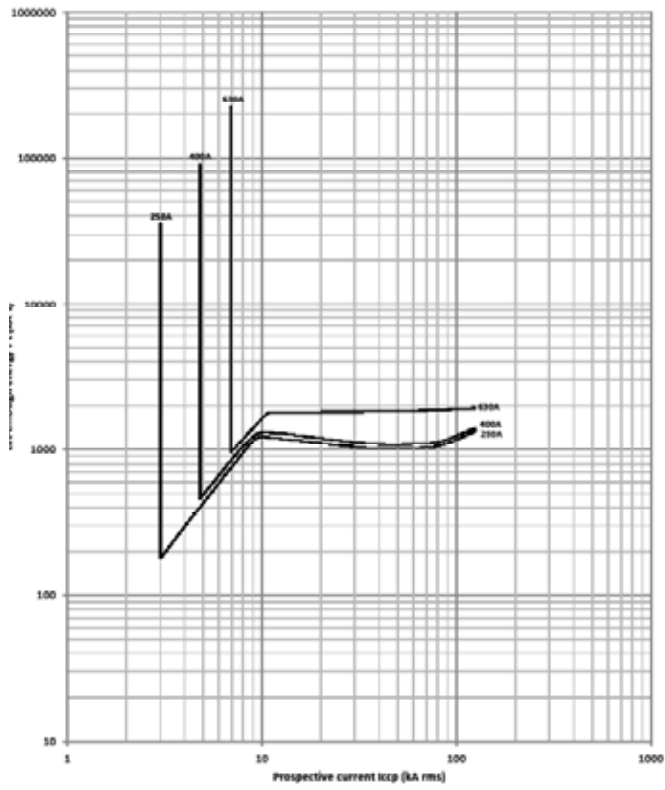


Energy limiting characteristics 380/415 V AC


P160 TM or MAG

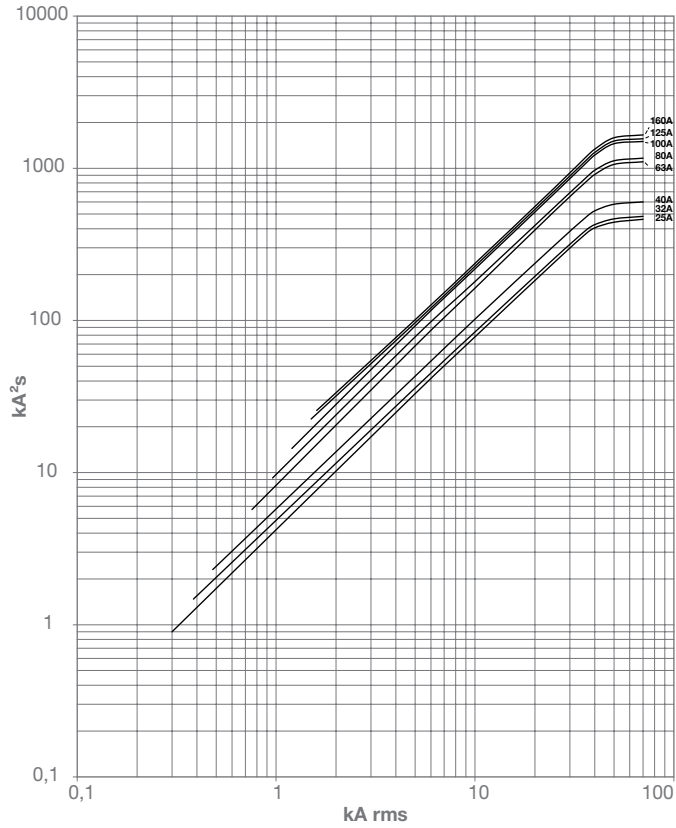


P250 TM

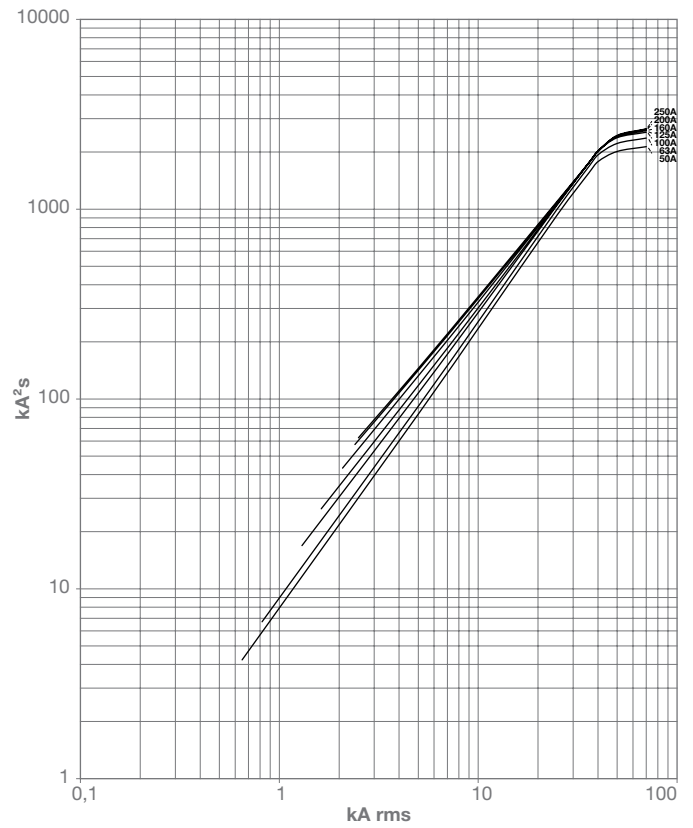

P160 LSnl 3P

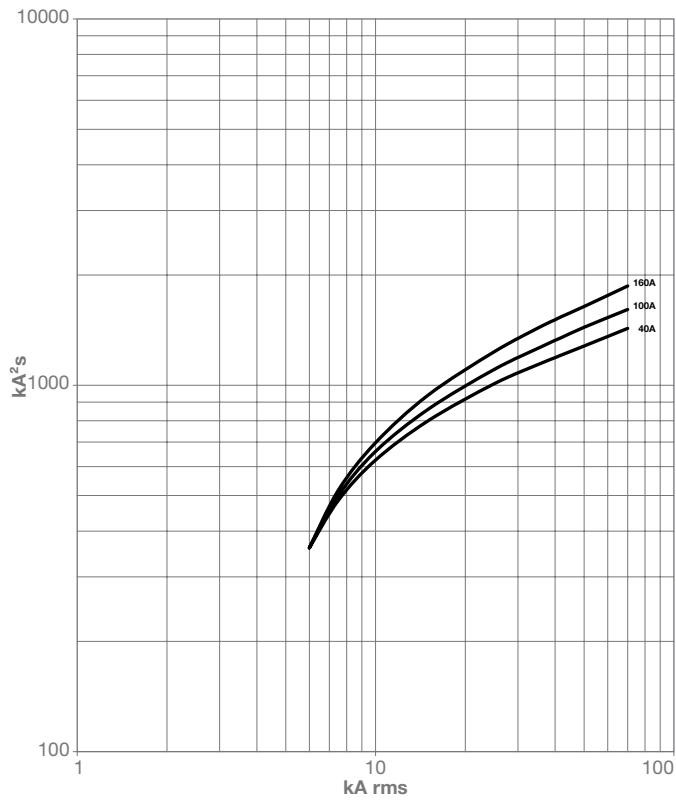


P250 LSnl

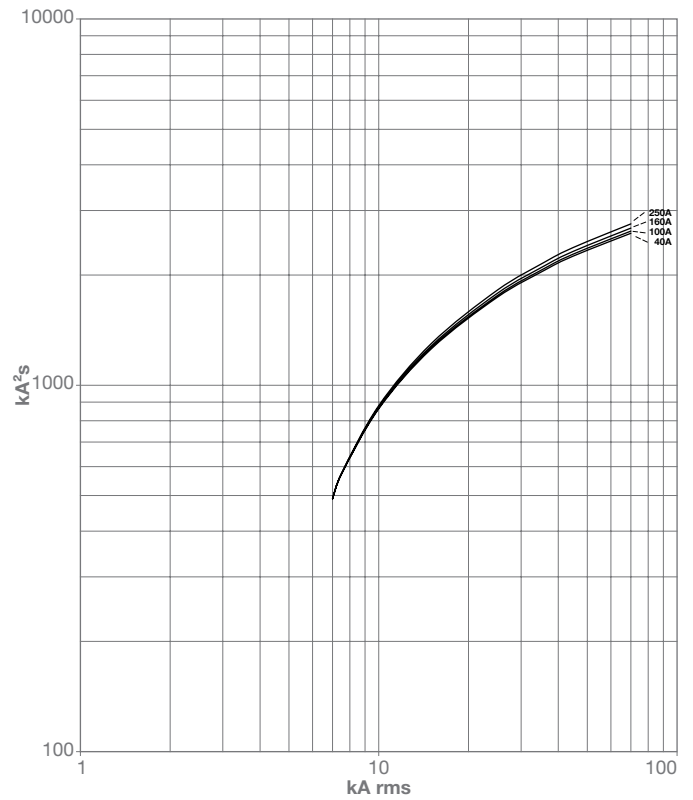


Energy limiting characteristics 380/415 V AC

P630 Electronic

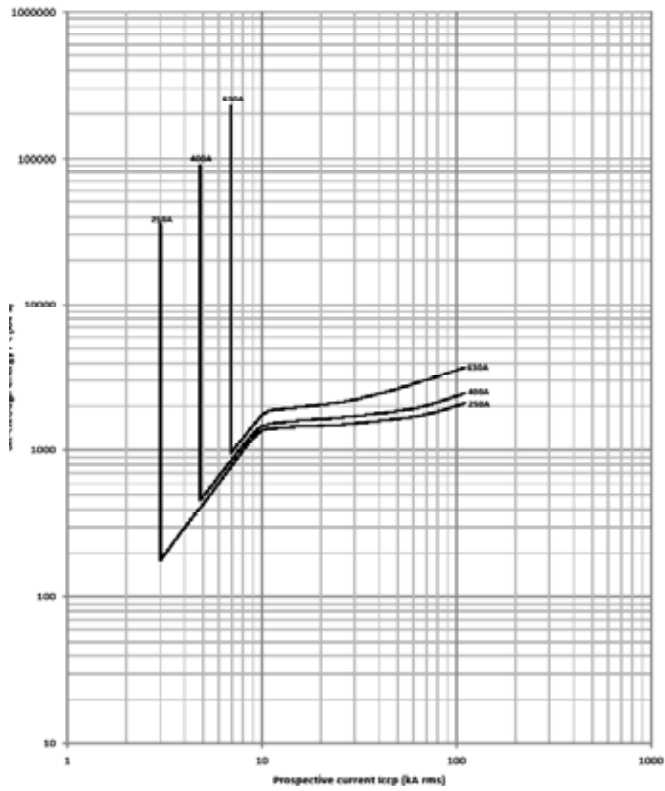


Current limiting characteristics 220/240 V AC


P160 TM or MAG

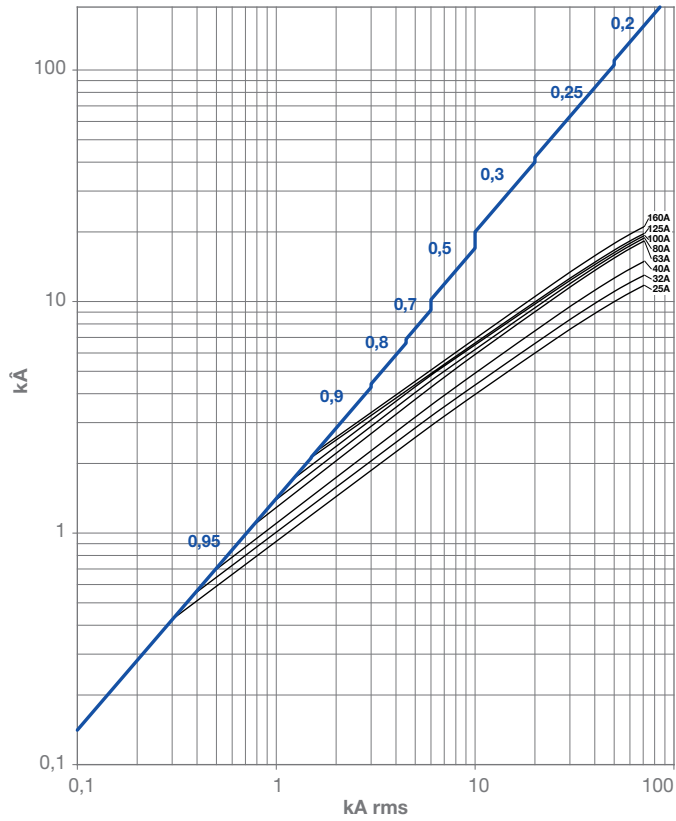


P250 TM

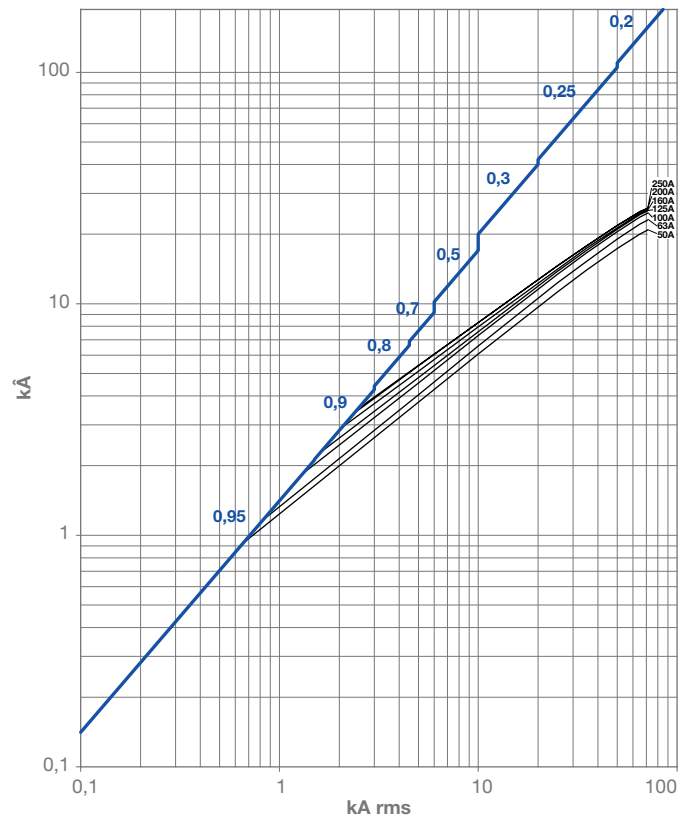

P160 Electronic

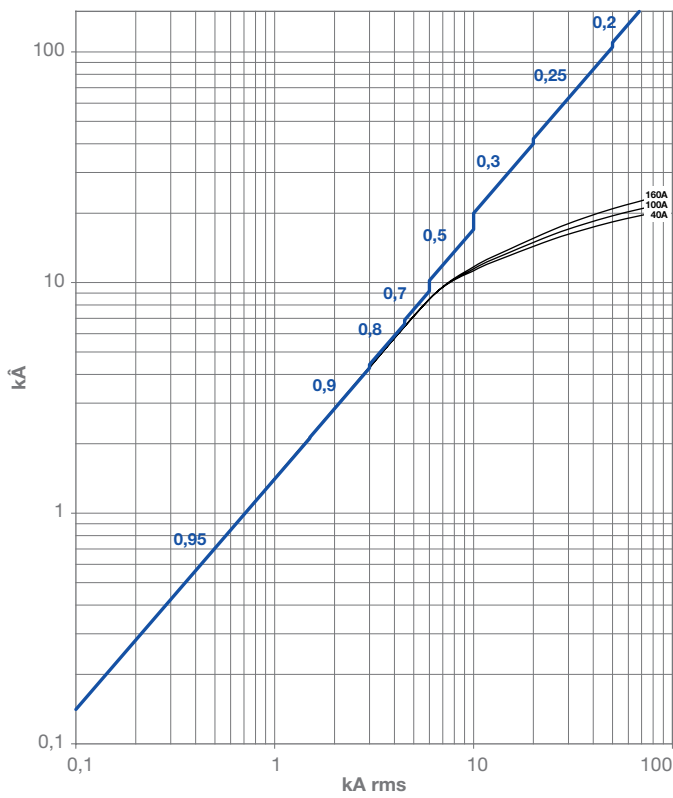


P250 Electronic

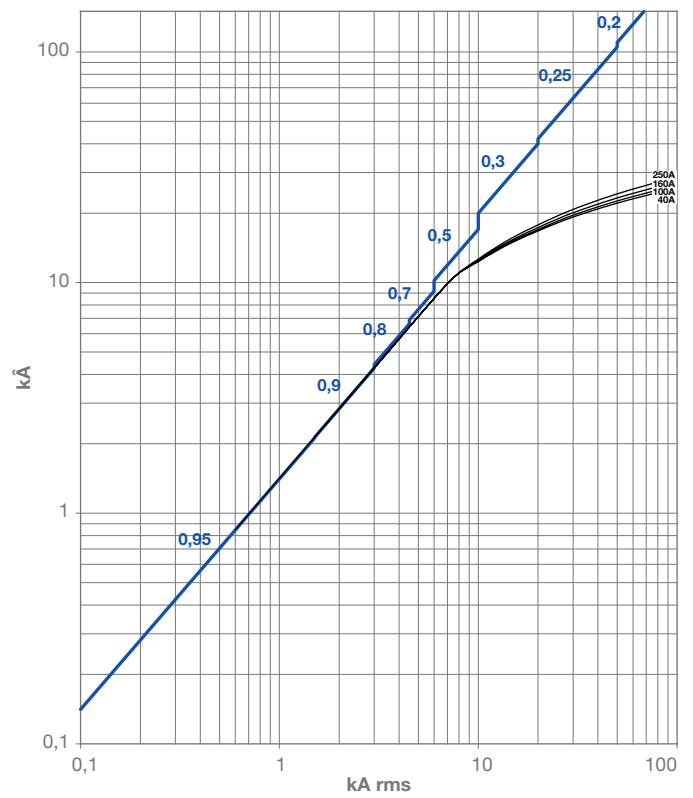


Current limiting characteristics 220/240 V AC

P630 Electronic

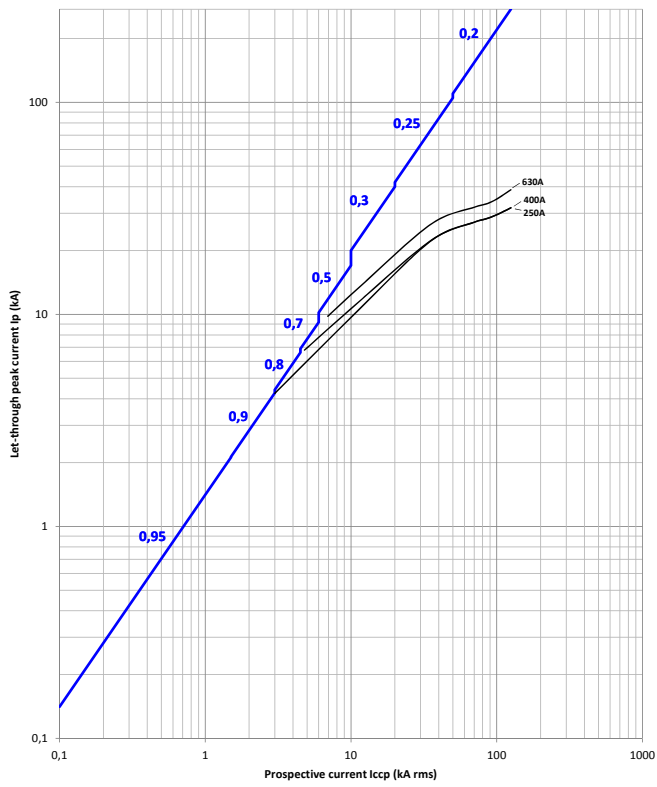


Current limiting characteristics 380/415 V AC


P160 TM or MAG

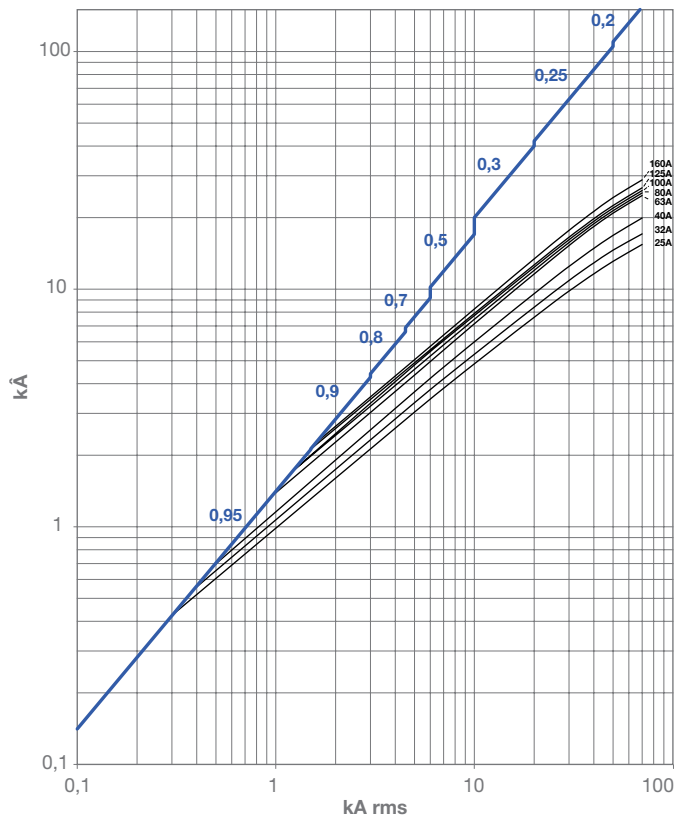


P250 TM

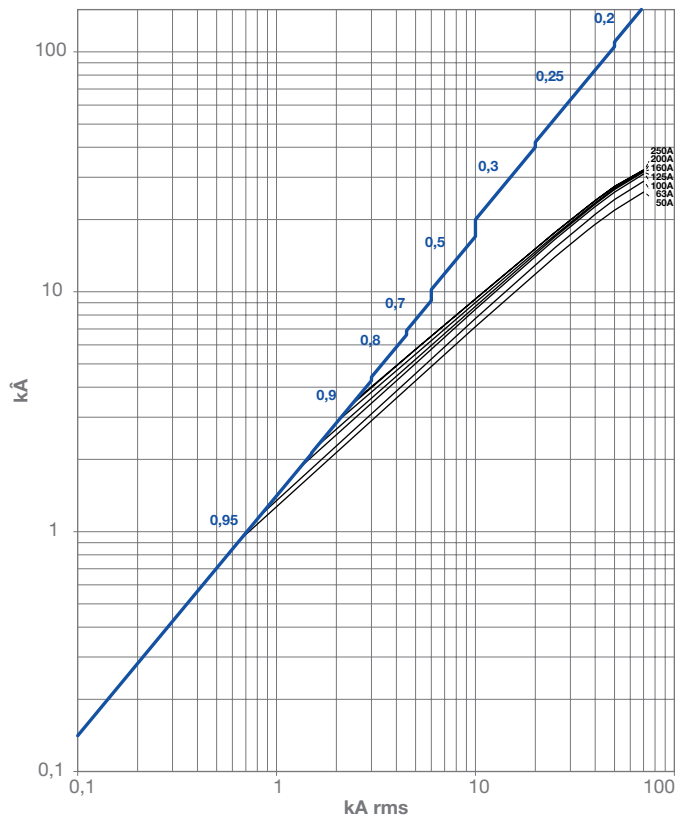

P160 Electronic

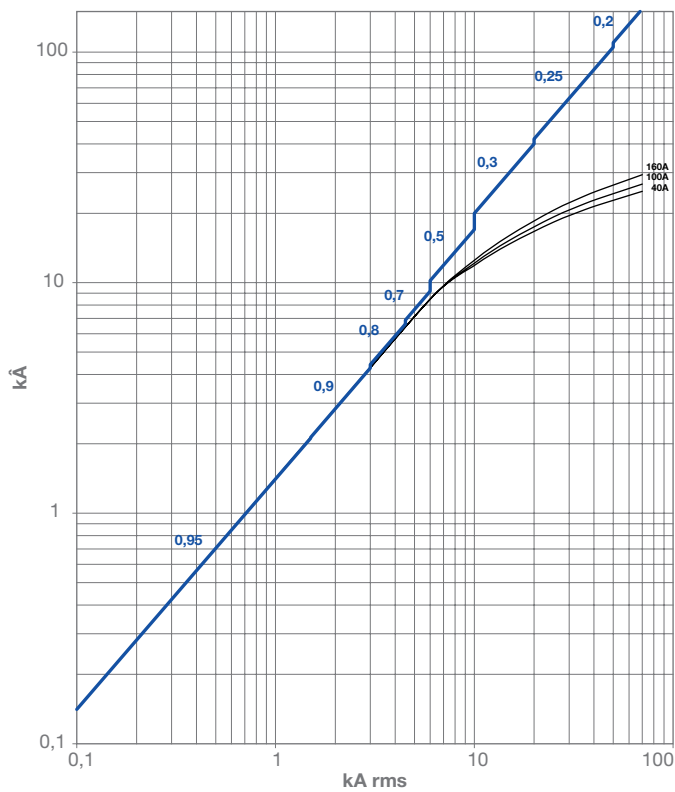


P250 Electronic

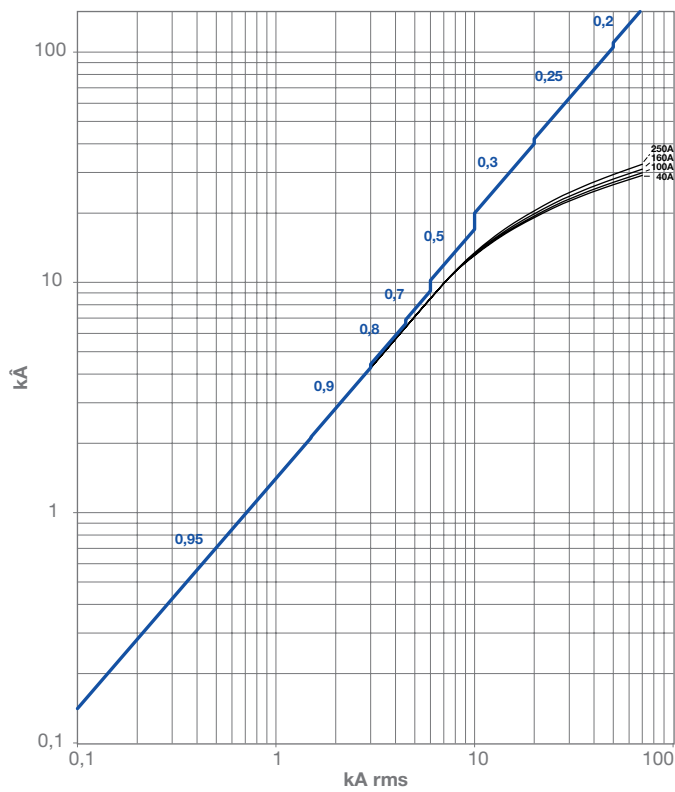

Current limiting characteristics 380/415 V AC

P630 Electronic

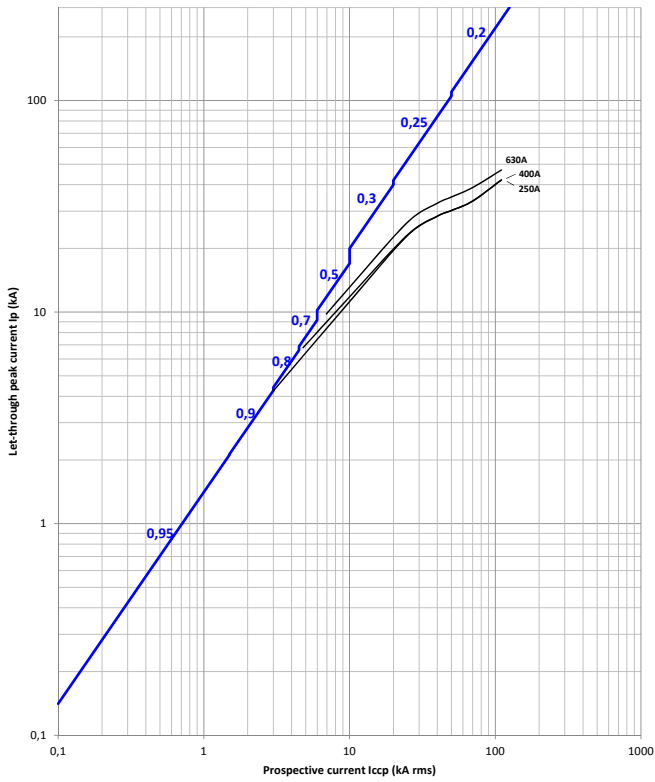

List of the references

| | Page |
|----------------------------------------------|------------|
| 01 P160 MCCBs | 154 |
| 02 P250 MCCBs | 161 |
| 03 P630 MCCBs | 165 |
| 04 RCD add-on blocks | 167 |
| 05 Switch disconnectors | 174 |
| 06 Connections | 169 |
| 07 Electronic devices and accessories | 171 |
| 08 Auxiliaries | 173 |
| 09 Handles and locking kits | 174 |
| 10 Mechanical interlocking | 175 |
| 11 Motor operators | 176 |
| 12 Plug-in and withdrawable systems | 177 |

h3+ P160 - TM adjustable with front connection



HES161DR

| Icu / Ics 400 - 415 V~ | In (A) | 3 poles | 4 poles N: 0-100 % |
|-----------------------------------|---------------|----------------|-------------------------------|
| 25 kA / 25 kA | 25 | HHS025DR | HHS026DR |
| | 40 | HHS040DR | HHS041DR |
| | 63 | HHS063DR | HHS064DR |
| | 80 | HHS080DR | HHS081DR |
| | 100 | HHS100DR | HHS101DR |
| | 125 | HHS125DR | HHS126DR |
| | 160 | HHS160DR | HHS161DR |
| 50 kA / 50 kA | 25 | HMS025DR | HMS026DR |
| | 40 | HMS040DR | HMS041DR |
| | 63 | HMS063DR | HMS064DR |
| | 80 | HMS080DR | HMS081DR |
| | 100 | HMS100DR | HMS101DR |
| | 125 | HMS125DR | HMS126DR |
| | 160 | HMS160DR | HMS161DR |
| 70 kA / 50 kA | 25 | HES025DR | HES026DR |
| | 40 | HES040DR | HES041DR |
| | 63 | HES063DR | HES064DR |
| | 80 | HES080DR | HES081DR |
| | 100 | HES100DR | HES101DR |
| | 125 | HES125DR | HES126DR |
| | 160 | HES160DR | HES161DR |

h3+ P160 - TM adjustable with cable terminals



HES161DC

| Icu / Ics 400 - 415 V~ | In (A) | 3 poles | 4 poles N: 0-100 % |
|-----------------------------------|---------------|----------------|-------------------------------|
| 25 kA / 25 kA | 25 | HHS025DC | HHS026DC |
| | 40 | HHS040DC | HHS041DC |
| | 63 | HHS063DC | HHS064DC |
| | 80 | HHS080DC | HHS081DC |
| | 100 | HHS100DC | HHS101DC |
| | 125 | HHS125DC | HHS126DC |
| | 160 | HHS160DC | HHS161DC |
| 50 kA / 50 kA | 25 | HMS025DC | HMS026DC |
| | 40 | HMS040DC | HMS041DC |
| | 63 | HMS063DC | HMS064DC |
| | 80 | HMS080DC | HMS081DC |
| | 100 | HMS100DC | HMS101DC |
| | 125 | HMS125DC | HMS126DC |
| | 160 | HMS160DC | HMS161DC |
| 70 kA / 50 kA | 25 | HES025DC | HES026DC |
| | 40 | HES040DC | HES041DC |
| | 63 | HES063DC | HES064DC |
| | 80 | HES080DC | HES081DC |
| | 100 | HES100DC | HES101DC |
| | 125 | HES125DC | HES126DC |
| | 160 | HES160DC | HES161DC |

h3+ P160 - MAG with front connection



HES161BR

| Icu / Ics 400 - 415 V~ | In (A) | 3 poles | 4 poles |
|-----------------------------------|---------------|----------------|----------------|
| 50 kA / 50 kA | 25 | HMS025BR | HMS026BR |
| | 40 | HMS040BR | HMS041BR |
| | 50 | HMS050BR | HMS051BR |
| | 63 | HMS063BR | HMS064BR |
| | 80 | HMS080BR | HMS081BR |
| | 100 | HMS100BR | HMS101BR |
| | 125 | HMS125BR | HMS126BR |
| | 160 | HMS160BR | HMS161BR |
| 70 kA / 50 kA | 25 | HES025BR | HES026BR |
| | 40 | HES040BR | HES041BR |
| | 50 | HES050BR | HES051BR |
| | 63 | HES063BR | HES064BR |
| | 80 | HES080BR | HES081BR |
| | 100 | HES100BR | HES101BR |
| | 125 | HES125BR | HES126BR |
| | 160 | HES160BR | HES161BR |


h3+ P160 - MAG with cable terminals




HES161BC

| Icu / Ics 400 - 415 V~ | In (A) | 3 poles | 4 poles |
|-----------------------------------|---------------|----------------|----------------|
| 50 kA / 50 kA | 25 | HMS025BC | HMS026BC |
| | 40 | HMS040BC | HMS041BC |
| | 50 | HMS050BC | HMS051BC |
| | 63 | HMS063BC | HMS064BC |
| | 80 | HMS080BC | HMS081BC |
| | 100 | HMS100BC | HMS101BC |
| | 125 | HMS125BC | HMS126BC |
| | 160 | HMS160BC | HMS161BC |
| 70 kA / 50 kA | 25 | HES025BC | HES026BC |
| | 40 | HES040BC | HES041BC |
| | 50 | HES050BC | HES051BC |
| | 63 | HES063BC | HES064BC |
| | 80 | HES080BC | HES081BC |
| | 100 | HES100BC | HES101BC |
| | 125 | HES125BC | HES126BC |
| | 160 | HES160BC | HES161BC |


h3+ P160 - LSnl with front connection

| | Icu / Ics 400 - 415 V~ | In (A) | 3 poles | 4 poles |
|---------------------------------------------------------------------------------------------------|---------------------------|--------|--------------|----------|
| | | | N: 0-50-100% | |
|  <p>HES161GR</p> | 50 kA / 50 kA | 40 | HMS040GR | HMS041GR |
| | | 100 | HMS100GR | HMS101GR |
| | | 160 | HMS160GR | HMS161GR |
| | 70 kA / 50 kA | 40 | HES040GR | HES041GR |
| | | 100 | HES100GR | HES101GR |
| | | 160 | HES160GR | HES161GR |


h3+ P160 - LSnl with cable terminals

| | Icu / Ics 400 - 415 V~ | In (A) | 3 poles | 4 poles |
|----------------------------------------------------------------------------------------------------|---------------------------|--------|--------------|----------|
| | | | N: 0-50-100% | |
|  <p>HES161GC</p> | 50 kA / 50 kA | 40 | HMS040GC | HMS041GC |
| | | 100 | HMS100GC | HMS101GC |
| | | 160 | HMS160GC | HMS161GC |
| | 70 kA / 50 kA | 40 | HES040GC | HES041GC |
| | | 100 | HES100GC | HES101GC |
| | | 160 | HES160GC | HES161GC |


h3+ P160 - LSI with front connection

| | Icu / Ics 400 - 415 V~ | In (A) | 3 poles | 4 poles |
|-----------------------------------------------------------------------------------------------|---------------------------|--------|--------------|----------|
| | | | N: 0-50-100% | |
|  HES161JR | 50 kA / 50 kA | 40 | HMS040JR | HMS041JR |
| | | 100 | HMS100JR | HMS101JR |
| | | 160 | HMS160JR | HMS161JR |
| | 70 kA / 50 kA | 40 | HES040JR | HES041JR |
| | | 100 | HES100JR | HES101JR |
| | | 160 | HES160JR | HES161JR |


h3+ P160 - LSI with cable terminals

| | Icu / Ics 400 - 415 V~ | In (A) | 3 poles | 4 poles |
|------------------------------------------------------------------------------------------------|---------------------------|--------|--------------|----------|
| | | | N: 0-50-100% | |
|  HES161JC | 50 kA / 50 kA | 40 | HMS040JC | HMS041JC |
| | | 100 | HMS100JC | HMS101JC |
| | | 160 | HMS160JC | HMS161JC |
| | 70 kA / 50 kA | 40 | HES040JC | HES041JC |
| | | 100 | HES100JC | HES101JC |
| | | 160 | HES160JC | HES161JC |

h3+ P160 - Energy with front connection

| | Icu / Ics 400 - 415 V~ | In (A) | 3 poles | 4 poles |
|---------------------------------------------------------------------------------------------------|---------------------------|--------|--------------|----------|
| | | | N: 0-50-100% | |
|  <p>HES161NR</p> | 50 kA / 50 kA | 40 | HMS040NR | HMS041NR |
| | | 100 | HMS100NR | HMS101NR |
| | | 160 | HMS160NR | HMS161NR |
| | 70 kA / 50 kA | 40 | HES040NR | HES041NR |
| | | 100 | HES100NR | HES101NR |
| | | 160 | HES160NR | HES161NR |

h3+ P160 - Energy with cable terminals

| | Icu / Ics 400 - 415 V~ | In (A) | 3 poles | 4 poles |
|----------------------------------------------------------------------------------------------------|---------------------------|--------|--------------|----------|
| | | | N: 0-50-100% | |
|  <p>HES161NC</p> | 50 kA / 50 kA | 40 | HMS040NC | HMS041NC |
| | | 100 | HMS100NC | HMS101NC |
| | | 160 | HMS160NC | HMS161NC |
| | 70 kA / 50 kA | 40 | HES040NC | HES041NC |
| | | 100 | HES100NC | HES101NC |
| | | 160 | HES160NC | HES161NC |

h3+ P250 - TM adjustable with front connection



HET251DR

| Icu / Ics 400 - 415 V~ | In (A) | 3 poles | 4 poles |
|---------------------------|--------|------------|----------|
| | | N: 0-100 % | |
| 50 kA / 50 kA | 50 | HMT050DR | HMT051DR |
| | 63 | HMT063DR | HMT064DR |
| | 100 | HMT100DR | HMT101DR |
| | 125 | HMT125DR | HMT126DR |
| | 160 | HMT160DR | HMT161DR |
| | 200 | HMT200DR | HMT201DR |
| | 250 | HMT250DR | HMT251DR |
| 70 kA / 50 kA | 50 | HET050DR | HET051DR |
| | 63 | HET063DR | HET064DR |
| | 100 | HET100DR | HET101DR |
| | 125 | HET125DR | HET126DR |
| | 160 | HET160DR | HET161DR |
| | 200 | HET200DR | HET201DR |
| | 250 | HET250DR | HET251DR |

h3+ P250 - LSnl with front connection



HET251GR

| Icu / Ics 400 - 415 V~ | In (A) | 3 poles | 4 poles |
|---------------------------|--------|--------------|----------|
| | | N: 0-50-100% | |
| 50 kA / 50 kA | 40 | HMT040GR | HMT041GR |
| | 100 | HMT100GR | HMT101GR |
| | 160 | HMT160GR | HMT161GR |
| | 250 | HMT250GR | HMT251GR |
| 70 kA / 50 kA | 40 | HET040GR | HET041GR |
| | 100 | HET100GR | HET101GR |
| | 160 | HET160GR | HET161GR |
| | 250 | HET250GR | HET251GR |


h3+ P250 - LSI with front connection



HET251JR

| Icu / Ics 400 - 415 V~ | In (A) | 3 poles | 4 poles |
|---------------------------|--------|--------------|----------|
| | | N: 0-50-100% | |
| 50 kA / 50 kA | 40 | HMT040JR | HMT041JR |
| | 100 | HMT100JR | HMT101JR |
| | 160 | HMT160JR | HMT161JR |
| | 250 | HMT250JR | HMT251JR |
| 70 kA / 50 kA | 40 | HET040JR | HET041JR |
| | 100 | HET100JR | HET101JR |
| | 160 | HET160JR | HET161JR |
| | 250 | HET250JR | HET251JR |

h3+ P250 - Energy with front connection

| | Icu / Ics 400 - 415 V~ | In (A) | 3 poles | 4 poles |
|---------------------------------------------------------------------------------------------------|---------------------------|--------|--------------|----------|
| | | | N: 0-50-100% | |
|  <p>HET251NR</p> | 50 kA / 50 kA | 40 | HMT040NR | HMT041NR |
| | | 100 | HMT100NR | HMT101NR |
| | | 160 | HMT160NR | HMT161NR |
| | | 250 | HMT250NR | HMT251NR |
| | 70 kA / 50 kA | 40 | HET040NR | HET041NR |
| | | 100 | HET100NR | HET101NR |
| | | 160 | HET160NR | HET161NR |
| | | 250 | HET250NR | HET251NR |

h3+ P630 - LSI with front connection



HPW631JR

| Icu / Ics 400 - 415 V~ | In (A) | 3 poles | 4 poles |
|-----------------------------------|---------------|----------------|----------------|
| | | | N: 0-50-100% |
| 50 kA / 50 kA | 250 | HMW250JR | HMW251JR |
| | 400 | HMW400JR | HMW401JR |
| | 630 | HMW630JR | HMW631JR |
| 70 kA / 70 kA | 250 | HEW250JR | HEW251JR |
| | 400 | HEW400JR | HEW401JR |
| | 630 | HEW630JR | HEW631JR |


h3+ P630 - Energy with front connection




HPW631NR

| Icu / Ics 400 - 415 V~ | In (A) | 3 poles | 4 poles |
|---------------------------|--------|--------------|----------|
| | | N: 0-50-100% | |
| 50 kA / 50 kA | 250 | HMW250NR | HMW251NR |
| | 400 | HMW400NR | HMW401NR |
| | 630 | HMW630NR | HMW631NR |
| 70 kA / 70 kA | 250 | HEW250NR | HEW251NR |
| | 400 | HEW400NR | HEW401NR |
| | 630 | HEW630NR | HEW631NR |

RCD add-on block for P520

| | | In (A) | P250 |
|--------------------------------------------------------------------------------------------------|----------------|---------------|-------------|
|  <p>HBT250H</p> | Adjustable RCD | 100 A | HBT100H |
| | | 160 A | HBT160H |
| | | 250 A | HBT250H |

RCD add-on block for P630

| | | In (A) | P630 |
|--------------------------------------------------------------------------------------------------|----------------|---------------|-------------|
|  <p>HBW630H</p> | Adjustable RCD | 400 A | HBW400H |
| | | 630 A | HBW630H |

h3+ P630 - Switch disconnectors with front connections

| In (A) | 3 poles | 4 poles |
|--------|----------|----------|
| 400 | HCW400AR | HCW401AR |
| 630 | HCW630AR | HCW631AR |






HCW631AR

DIN rail mounting

| | | Poles | P160 | P250 | P630 |
|-----------------------------------------------------------------------------------|------------------|---------|---------|---------|------|
|  | DIN rail adaptor | 3P / 4P | HYS033H | HYT033H | - |

HYT033H

Cable terminals




| | | Poles | P160 Front connection | P160 Cable terminal | P250 | P630 | |
|------------------------------------------------------------------------------------|---------------|---------------|-----------------------|---------------------|---------|---------|---|
|  | Integrated | 1 wire Cu/Al | 3P | - | HYT001H | - | |
| | | | 4P | - | HYT002H | - | |
|  | External | 1 wire Cu/Al | 3P | - | HYS005H | HYT005H | - |
| | | | 4P | - | HYS006H | HYT006H | - |
| | | 2 wires Cu/Al | 3P | - | | HYT007H | - |
| | | | 4P | - | | HYT008H | - |
|  | 6 wires Cu/Al | 3P | - | HYS055H | HYT065H | - | |
| | | 4P | - | HYS056H | HYT066H | - | |

HYT002H

HYT006H

HYT066H

Terminal extensions







| | | Poles | P160 Front connection | P160 Cable terminal | P250 | P630 |
|-------------------------------------------------------------------------------------|-----------------------------|-------|-----------------------|---------------------|---------|--------------------------------------|
|  | Straight terminal extension | 3P/4P | - | HYS013H | HYB010H | HYW010H (250-400A) HYW013H (630A) |
|  | Spreader terminal extension | 3P | - | HYS014H | HYB011H | HYW011H (250-400A) HYW014H (630A) |
| | | 4P | - | HYS015H | HYB012H | HYW012H (250-400A) HYW015H (630A) |
|  | Rear connection | 3P | - | HYS131H (63-160 A) | HYB031H | HYD031H (250-400A) HYD033H (630A) |
| | | 4P | - | HYS132H (63-160 A) | HYB032H | HYD032H (250-400A) HYD034H (630A) |

HYB010H






HYB012H

HYB032H

Terminal covers and protections

| | | Poles | P160 | P250 | P630 |
|---------------------------------------------------------------------------------------------------------------------------------------------------|--------|--------------|-------------|-------------|-------------|
|  Terminal cover for straight extensions HYT022H | | 3P | HYS021H | HYT021H | HYW021H |
| | | 4P | HYS022H | HYT022H | HYW022H |
|  Terminal cover for spread extensions HYT024H | | 3P | HYS023H | HYT023H | HYW023H |
| | | 4P | HYS024H | HYT024H | HYW024H |
|  Terminal cover for rear & plug-in connections HYT026H | | 3P | HYS025H | HYT025H | HYW025H |
| | | 4P | HYS026H | HYT026H | HYW026H |
|  Isolating earth plate for Straight terminal cover HYT051H | | 3P | HYS050H | HYT050H | HYW050H |
| | | 4P | HYS051H | HYT051H | HYW051H |
|  Isolating Earth plate for Spread terminal cover HYT053H | | 3P | HYS052H | HYT052H | HYW052H |
| | | 4P | HYS053H | HYT053H | HYW053H |
|  Interphase barrier HYT019H | 50 mm | 3/4P | HYS019H | - | - |
| | 100 mm | 3/4P | HYT019H | | HYW019H |

Electronic devices and accessories

| | | | P160 / P250 / P630 | | | |
|-------------------------------------------------------------------------------------|----------------------|---------------------------------------|--------------------|-----|------|---------|
| | | | LSnI | LSI | LSIG | Energy |
|  | AX/AL Energy | For communication only | - | - | - | HXS120H |
| | | COM + 250 V AC contact wires | - | - | - | HXS121H |
| | | COM +125 V AC low level contact wires | - | - | - | HXS122H |
|  | COM Module | Without I/O | - | - | - | HTC310H |
| | | With I/O | - | - | - | HTC320H |
| | | Side support for wire | - | - | - | HTC100H |
|  | Panel display | | - | - | - | HTD210H |
|  | Configuration tool | | HTP610H | | | |
|  | 24 V DC Power supply | | - | - | - | HTG911H |

HTG911H

Electronic devices and accessories

| | | | | P160 / P250 / P630 | | | |
|------------------------------------------------------------------------------------------------|--------------------|-----------------|-------|--------------------|---------|------|---------|
| | | | | LSnl | LSI | LSIG | Energy |
|  HTC330H | CIP - Adaptor | | 0.5 m | - | - | - | HTC330H |
| | | | 1.5 m | - | - | - | HTC340H |
| | | | 3 m | - | - | - | HTC350H |
| | | | 5 m | - | - | - | HTC360H |
| | | | 10 m | - | - | - | HTC370H |
|  HTC140H | CIP - 24 V Adaptor | | 1.2 m | - | - | - | HTC140H |
|  HTC130H | OAC/PTA adaptor | | 1.2 m | - | HTC130H | | |
|  HTC150H | ZSI adaptor | | 1.2 m | - | - | - | HTC150H |
|  HTC160H | NSP cable adaptor | | 1.2 m | | | | HTC160H |
|  HTG465H | Modbus cable | RJ45 with earth | 3 m | - | - | - | HTG465H |
|  HTG485H | | | 25 m | - | - | - | HTG485H |

Auxiliaries

| | | | P160 / P250 / P630 |
|-------------------------------------------------------------------------------------|----------------------------------------------|--------------------------------|--------------------|
|  | AX position auxiliary contact | | HXA021H |
| | | Low level | HXA025H |
|  | AL tripping auxiliary contact Left side | | HXA024H |
| | | Low level | HXA026H |
|  | Shunt trip release | 24 V DC | HXA001H |
| | | 48 V DC | HXA002H |
| | | 100 - 120 V~ | HXA003H |
| | | 200 - 240 V~ | HXA004H |
| | | 380 - 450 V~ | HXA005H |
|  | Undervoltage release | 24 V DC | HXA011H |
| | | 100 - 120 V~ | HXA013H |
| | | 200 - 240 V~ | HXA014H |
| | | 380 - 450 V~ | HXA015H |
|  | Delayed UVR | 24 V DC | HXA051H |
| | | 110 V~ | HXA053H |
| | | 240 V~ | HXA054H |
| | | 440 V~ | HXA055H |
|  | Cable kit | 0.75 mm ² - 6 wires | HYA035H |

HXA021H

HXA024H

HXA005H

HXA015H

HXA051H

HYA035H


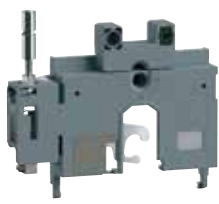

Handles

| | | | P160 | P250 | P630 |
|------------------------------------------------------------------------------------------------------------------|---------------------------|---------------------------------------------|-------------|-------------|-------------|
|  <p>HXT030H</p> | Direct rotary handle | | HXS030H | HXT030H | HXW030H |
|  <p>HXS888H</p> | Key kit for rotary handle | key lock only | HXS999H | | |
|  <p>HXT031H</p> <p>HXS901H</p> | On door rotary handle | kit with black IP55 handle and 200 mm shaft | HXS031H | HXT031H | HXW031H |

Locking kits

| | | | P160 | P250 | P630 |
|----------------------------------------------------------------------------------------------------|----------------|--|-------------|-------------|-------------|
|  <p>HXA039H</p> | Padlocking kit | | HXA039H | | |



Mechanical interlocking

| | | | P160 | P250 | P630 |
|----------------------------------------------------------------------------------------------|----------------------------------------------|-------|---------|---------|---------|
|  HXT166H | Link interlock kit | 3P | HXS165H | HXT165H | HXW165H |
| | | 4P | HXS166H | HXT166H | HXW166H |
|  HXT066H | Mechanical interlock (1 front cover) 3P / 4P | | HXS066H | HXT066H | HXW066H |
|  HXB070H | Cable for mechanical interlock | 1 m | HXB070H | | |
| | | 1.5 m | HXB071H | | |






Motor operators

| | | | P250 | P630 |
|-----------------------------------------------------------------------------------------------------|------------------------------------------------------|-------------------------|----------|----------|
|  <p>HXT040H</p> | Motor operator with auto-reset | 24 V DC | HXT040H | - |
| | | 24 - 48 V DC | - | HXW040H |
| | | 48 V DC | HXT048H | - |
| | | 100 - 110 V AC/DC | HXT041H | - |
| | | 100 - 110 V DC | - | HXW041H |
| | | 110 - 240 V AC | - | HXW042H |
| | | 200 - 220 V AC/DC | HXT045H | - |
| | | 230 - 240 V AC | HXT042H | - |
|  <p>HXT040HK</p> | Motor operator with auto-reset and Ronis key lock | 24 V DC | HXT040HK | - |
| | | 24 - 48 V DC | - | HXW040HK |
| | | 48 V DC | HXT048HK | - |
| | | 100 - 110 V AC/DC | HXT041HK | - |
| | | 100 - 110 V DC | - | HXW041HK |
| | | 110 - 240 V AC | - | HXW042HK |
| | | 200 - 220 V AC/DC | HXT045HK | - |
| | | 230 - 240 V AC | HXT042HK | - |
|  <p>HXT043H</p> | Motor operator without auto-reset | 24 V DC | HXT043H | - |
| | | 24 - 48 V DC | - | HXW043H |
| | | 48 V DC | HXT049H | - |
| | | 100 - 110 V AC/DC | HXT046H | - |
| | | 100 - 110 V DC | - | HXW046H |
| | | 110 - 240 V AC | - | HXW044H |
| | | 200 - 220 V AC/DC | HXT047H | - |
| | | 230 - 240 V AC | HXT044H | - |
|  <p>HXT043HK</p> | Motor operator without auto-reset and Ronis key lock | 24 V DC | HXT043HK | - |
| | | 24 - 48 V DC | - | HXW043HK |
| | | 48 V DC | HXT049HK | - |
| | | 100 - 110 V AC/DC | HXT046HK | - |
| | | 100 - 110 V DC | - | HXW046HK |
| | | 110 - 240 V AC | - | HXW044HK |
| | | 200 - 220 V AC/DC | HXT047HK | - |
| | | 230 - 240 V AC | HXT044HK | - |
|  <p>HXB068H</p> | Electrical interlock for Motor operator | For 2 same motors | HXB068H | HXD068H |
| | | For P250 to P630 motors | HXB069H | |

Plug-in system

| | | | P160 | P250 | P630 |
|-------------------------------------------------------------------------------------------------------|----------------------------------------|-------------------|---------|---------|---------|
|  HYT201H | Plug-in base | 3P | HYS200H | HYT200H | HYW200H |
| | | 4P | HYS201H | HYT201H | HYW201H |
|  HYT301H | Plug-in circuit breaker conversion kit | 3P | HYS300H | HYT300H | HYW300H |
| | | 4P | HYS301H | HYT301H | HYW301H |
|  HYC250H HYC352H | Auxiliary circuit terminal | Base side | HYC250H | | |
| | | MCCB side 2 wires | HYC352H | | |
| | | MCCB side 3 wires | HYC353H | | |
|  HYT328H | L connection | 1P | HYS328H | HYT328H | HYW328H |
|  HYC321H | Terminal cover for plug-in base | 3P | HYS321H | HYC321H | HYD321H |
| | | 4P | HYS322H | HYC322H | HYD322H |
|  HYS256H | Safety trip | | HYS256H | | HYW256H |

Withdrawable system

| | | | P250 | P630 |
|-------------------------------------------------------------------------------------|-------------------------------------------------------|-------------------|-------------|-------------|
|  | Base for withdrawable circuit breaker | 3P | HYT330H | HYW330H |
| | | 4P | HYT331H | HYW331H |
| HYT331H | | | | |
|  | Withdrawable circuit breaker adaptor with safety trip | 3P | HYT332H | HYW332H |
| | | 4P | HYT333H | HYW333H |
| HYT333H | | | | |
|  | Auxiliary circuit terminal | Base side | HYC250H | |
| | | MCCB side 2 wires | HYC352H | |
| | | MCCB side 3 wires | HYC353H | |
| HYC250H HYC352H | | | | |
|  | L connection | 1P | HYT328H | HYW328H |
| | | | | |
| HYT328H | | | | |
| Position switch | | | HYC255H | |
|  | Spare safety trip (safety trip included as standard) | | HYW256H | HYW256H |
| | | | | |
| HYS256H | | | | |

Glossary

Adjustment dial

Knob for a manual adjustment of the circuit breaker settings.

ACP

AX/AL communication port. Dedicated terminal to connect the AX/AL Energy device.

AL

Alarm switch

AX

Auxiliary switch

Breaking capacity

The value of prospective current that a switching device is capable of breaking at a stated voltage under prescribed conditions of use and behaviour. Reference is generally made to the rated ultimate short-circuit breaking capacity (Icu) and the service breaking capacity (Ics).

Cascading

Also called coordination, cascading takes into account the current-limiting capacity of a circuit breaker. There is a possibility to install downstream circuit breakers with lower Icu performance levels. The upstream circuit breaker reduces any high short-circuit currents. This makes it possible to install downstream circuit breakers with breaking capacities less than the prospective short-circuit current at their point of installation. The main advantage of cascading is to reduce the overall cost of switchgear, as the current is limited throughout the circuit downstream of the limiting circuit breaker. Cascading applies to all the devices fitted downstream.

CIP

Communication Interface Port. Terminal to connect the COM Module or the Panel display.

Circuit breaker

General term for Moulded Case Circuit Breaker or MCCB.

Delayed undervoltage release

Undervoltage release with a given delayed tripping time.

Delayed UVR

Delayed undervoltage release

Direct rotary handle

Optional handle with the same three positions I (ON), O (OFF) and TRIPPED as the MCCB handle. It maintains suitability for isolation and offers optional locking using a keylock or a padlock.

Discrimination

Also called selectivity, discrimination is ensured between upstream and downstream circuit breakers if, when a fault occurs, only the circuit breaker placed immediately upstream

of the fault trips. Discrimination is the key to ensure the continuity of service of an installation.

Energy

Name of h3+ circuit breakers fitted with measurement, alarm and communication features.

Energy trip unit

Electronic trip unit with adjustable L, S, I and G. Also fitted with measurement, alarm and communication features.

International Protection Marking (IP)

Defines protection of circuit breakers against the penetration of solid objects and liquids, using two digits according to standard IEC 60259. Each digit corresponds to a level of protection, where 0 indicates no protection.

First digit (0 to 6): protection against penetration of solid foreign objects.

1 corresponds to protection against objects with a diameter > 50 mm, 6 corresponds to total protection against dust.

Second digit (0 to 9): protection against penetration of liquids (water).

1 corresponds to protection against falling drops of water (condensation), 9 corresponds to continuous immersion.

Low level auxiliary contact

The low internal impedance of these contacts allows to switch low current levels under low voltages.

LSnl trip unit

Electronic trip unit with adjustable Ir and I_{sd} and with fixed tr and tsd. Instantaneous Ii is fixed.

LSI trip unit

Electronic trip unit with adjustable L, S and I.

LSIG trip unit

Electronic trip unit with adjustable L, S, I and with fixed G.

MAG trip unit

Magnetic trip unit

MCCB

Moulded Case Circuit Breaker

MIP

Maintenance Interface Port

Motor operator

Accessory used to remotely open, close and recharge the MCCB.

OAC

Optional Alarm Contact (digital output contact).

On door rotary handle

Rotary handle with an extended shaft to control MCCBs from the door of switchboards. It has the same characteristics as

direct rotary handles. It offers multiple locking possibilities using a keylock, a padlock or a door interlock.

Pitch

Distance between connection terminals of the circuit breakers.

Pollution degree

Conventional number based on the amount of conductive or hygroscopic dust, ionized gas or salt and on the relative humidity and its frequency of occurrence, resulting in hygroscopic absorption or condensation of moisture leading to reduction in dielectric strength and/or surface resistivity. h3+ circuit breakers are degree 3 according to Standard IEC 60947-1 (conductive pollution occurs, or dry, non-conductive pollution occurs which becomes conductive due to condensation).

PTA

Pre-trip alarm. Also name of associated output contact.

Rated service short-circuit breaking capacity (Ics)

Expressed as a percentage of Icu, it provides an indication of the robustness of the device under severe conditions. It is confirmed by a test sequence O - t - CO - t - CO at Ics. It is followed by a test to prove that the device operates correctly at its rated current and the protection system suffers from no damage.

Rated ultimate short-circuit breaking capacity (Icu)

Expressed in kA, it indicates the maximum breaking capacity of the circuit breaker. It is confirmed by a test sequence O - t - CO (according to IEC 60947-2) at Icu, followed by a test to prove that the circuit is correctly isolated. This test ensures user safety.

Safety clearance

When installing a circuit breaker, minimum distances (safety clearances) must be maintained between the device and panels, bars and other protection systems installed nearby. These distances, which depend on the ultimate breaking capacity, are defined by tests according to standard IEC 60947-2.

Shunt trip release

Release operating when supplied with current. It makes circuit breaker opening when it receives a pulse-type or maintained command.

TM trip unit

Thermal magnetic trip unit

Trip unit

Integrated underneath the handle of the circuit breaker, this part is responsible of tripping the circuit breaker depending on the protection parameters that the user sets.

Undervoltage release

Release operating when the supply voltage drops below the given level.

Withdrawable circuit breaker

Circuit breaker which can easily be disconnected from the installation thanks to a draw-out system.

ZSI

Zone Selective Interlocking



Hager Electro SAS
132 Boulevard d'Europe
BP3
67210 OBERNAI CEDEX

hager.com